

Panasonic

Operating Instructions (Household use) Body Hair Trimmer

Model No. ER-GK20

English.....3

中文XX



Panasonic

English

Operating Instructions
(Household use) Body Hair Trimmer
Model No. ER-GK20

Contents

Safety precautions.....	4
Parts identification	8
Installing the battery	9
Read before use.....	10
How to use.....	12
Maintenance.....	15
Troubleshooting	20
Specifications	21



Thank you for purchasing this Panasonic product.
Before operating this unit, please read these instructions
completely and save them for future use.

Safety precautions



To reduce the risk of injury, loss of life, electric shock, fire, and damage to property, always observe the following safety precautions.

Explanation of symbols

The following symbols are used to classify and describe the level of hazard, injury, and property damage caused when the denotation is disregarded and improper use is performed.

 WARNING	Denotes a potential hazard that could result in serious injury or death.
 CAUTION	Denotes a hazard that could result in minor injury or property damage.

The following symbols are used to classify and describe the type of instructions to be observed.

	This symbol is used to alert users to a specific operating procedure that must not be performed.
	This symbol is used to alert users to a specific operating procedure that must be followed in order to operate the unit safely.

 **WARNING****► Preventing accidents**

Do not store within the reach of children or infants. Do not let them use it.



- Putting parts or accessories in the mouth may cause an accident or injury.



Immediately stop using if there is an abnormality or malfunction.

- Failure to do so may cause fire or injury.

If the oil is consumed accidentally, do not induce vomiting, drink a large amount of water, and contact a physician.



If the oil comes into contact with eyes, immediately wash thoroughly with running water, and contact a physician.

- Failure to do so may result in physical problems.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.



Children should be supervised to ensure that they do not play with the appliance.

- Failure to do so may cause an accident or injury.



CAUTION

► **To protect your skin**

Do not press the blade strongly on the skin.

Do not use this product for any purpose other than trimming body hair.

Do not use this product without an attachment to trim hair in the following areas: sensitive zones, buttocks, anus, and surrounding areas.



Do not use in the following body area:

- **Face or head (hair, beard, etc.)**
 - **Areas with rough or bumpy skin (swollen areas, cuts, hemorrhoids, and other protuberances; nipples and surrounding areas)**
 - **Moles, bruises, etc.**
- Doing so may cause skin injury.

Do not press the blade with excessive force.

Also, do not touch blade with nails.



Do not bring the blade into contact with hard objects.

- Doing so may cause the blade to become damaged and injure the skin as the blade is very thin. Be careful when using it.



Check the blade for deformation or damage before use.

- Failure to do so may cause skin injury.



When storing or carrying, always attach the attachment.

- Failure to do so may cause injury to the skin or reduce the life of the blade.
-



CAUTION

► This product



Do not share with your family or others.

- Doing so may result in infection or inflammation.



Do not drop or subject to shock.

- Doing so may cause injury.



Do not modify, disassemble or repair.

- Doing so may cause an accident or injury.

- Contact an authorized service center for repair.

► The battery



Do not throw into fire or disassembly.

The supply terminals are not to be short-circuited.

- Doing so may cause a burn or injury.

**Always follow the cautions printed on the battery.
Check the polarity of the battery (+ and -) and
install it correctly.**

**Remove the battery immediately and dispose of it
safely when it is discharged.**



**Remove the battery when not using the appliance
for an extended period of time.**


Use the battery by the recommended use-by date.

Non-rechargeable battery is not to be recharged.

- Failure to do so may cause overheating or
explosion of the battery, injury or contamination of
surroundings due to leakage.

Parts identification

English

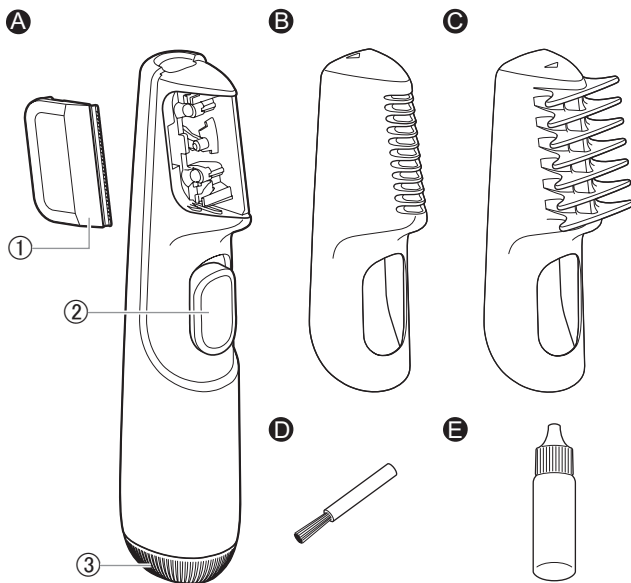

A Main body

- ① Blade
- ② Power switch [O/I]
- ③ Battery cover


B Attachment for groin

- ### **C Length adjustment comb attachment (3 mm)**

Accessories

- D Cleaning brush**
- E Oil**


Installing the battery

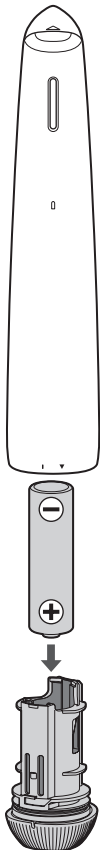

- Make sure that the main body is turned off.

1. Remove the battery cover.

Turn the notch on the battery cover in the direction of the arrow until the battery cover is removed.

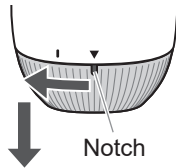


2. Check the polarity (+ and -) and install the battery.

Thoroughly wipe the main body to prevent water droplets from getting inside when installing the battery.

3. Attach the battery cover.

(1) Align the notch on the battery cover with the "I" mark and insert the battery cover.

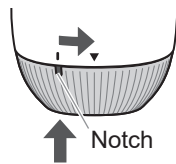

(2) Rotate the battery cover until the notch is aligned with the "▼" mark on the main body.

Notes








- You can use the appliance for approximately 3 months with one Panasonic LR6 (AA Alkaline Battery). (When used for approx. 5 minutes at one time, once a week in a room temperature of 20 °C.)
- Use only LR6 (AA alkaline battery), otherwise the power or number of uses may vary.

Read before use


English

Areas of use

✓ OK x Do not use

Area	When used with an attachment	When used without an attachment
Sensitive zones <ul style="list-style-type: none"> • Genitalia • Genital area • Crotch 	✓	x
<ul style="list-style-type: none"> • Buttocks • Anus • Perianal region 	✓	x
Armpits 	✓	✓
Chest 	✓	✓
Navel area 	✓	✓
Arms, hands 	✓	✓
Legs 	✓	✓

- Using this appliance to trim hair in areas that are not visually accessible may result in cuts or injury. Please use with care.

- Using this main body to trim hair in the shaded areas () below may result in cuts or injury. Be sure to use an attachment.

Sensitive zones



Buttcks



Notes


- Stretch the skin on the areas with loose or flabby skin, or with wrinkles, and lightly apply the edge of the blade or attachment.
- Do not use the attachment on wet hair. Wet hair might clump or stick to the skin, becoming hard to trim. If you use the attachment to trim wet hair, you may not be able to achieve a uniform trim.
- For areas with thick or dense hair growth, trim a bit at a time. Hair sometimes gets caught or builds up in the attachment. When this happens, clean the attachment. (See pages 15~17)

How to use

Lightly apply the main body to your skin and shave while trying it out if you are using it for the first time.

Preparations

- Check that the blades are not damaged or deformed before use.
- Apply the oil to the blade before and after each use. (See page 18)

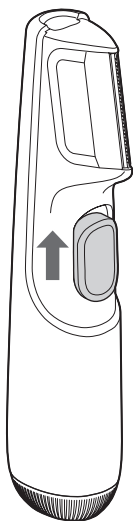

Trimming dry hair

- Use the appropriate attachment as needed. (See page 14)

Trimming wet hair

- Do not use the attachment when trimming wet hair.
- Wet and apply soap beforehand to the area to be shaved.
- Apply less pressure than you would when trimming dry hair, and move the main body in a gliding motion.

1. Slide the switch to “O”.

Applying to the skin and moving the main body. (See pages 13~14)

2. Slide the switch to “I” after use.

- **Clean the appliance after each use.**
 - Failure to do so may cause poor sharpness. (See pages 15~17)

Without attachment



Apply light pressure and slowly move the main body against the direction of hair growth.




- To trim navel hair, lay the blade flat against your skin and then move the main body in a gliding motion. This allows you to trim hair down to a length of approximately 0.1 mm.
- It does not matter which side of the blade you lay against your skin.

Attachment for groin



Lightly apply the edge of the attachment for groin against your skin and then slowly move the main body.

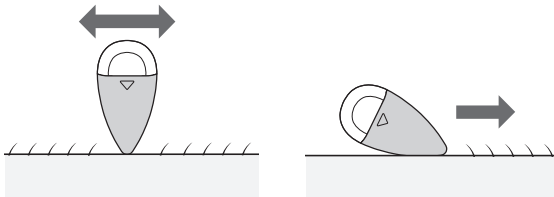


This allows you to safely trim hair down to a length of approximately 2 mm.

Length adjustment comb attachment



Lightly apply the edge (flat part) of the length adjustment comb attachment against your skin and then slowly move the main body.

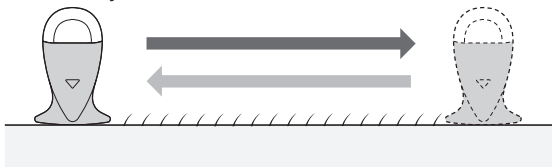


This allows you to trim hair down to a length of approximately 3 mm.

Removing and mounting the attachment

Make sure that the switch is set to "I".

How to remove


Holding the main body as shown in the figure, remove the attachment while pressing with your index finger and thumb.

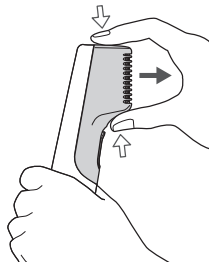

How to mount

Put the attachment on as indicated by the arrow.

- Make sure that the attachment does not come off.

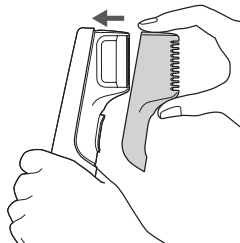


- The illustration shows the attachment for groin.

- All the attachments have the same method of mounting and removing.

Maintenance

Cleaning


- Clean the main body and the blade after each use.
(If not cleaned, the motion will become poor and the sharpness will worsen.)
- Make sure that the main body is turned off.
- Be sure to clean the appliance with the battery cover attached.
- Do not use thinner, benzine, alcohol or other chemicals. Doing so may cause failure, cracking or discoloration of the main body. Wipe the main body only with a soft cloth slightly dampened with tap water or soapy tap water.
- Store the main body in a place with low humidity after use. Failure to do so may cause malfunction due to condensation or rust.
- After cleaning, mount the attachment for storage.

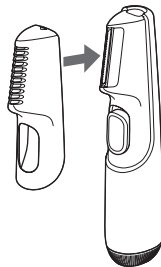


► With water

**To remove light dirt
(Water-through cleaning)**

1. Remove the attachment.
2. Slide the switch to “O”, and run water down the water inlet at the back of the main body to rinse thoroughly (for approximately 20 seconds).
 - Slide the switch to “I” after rinsing.

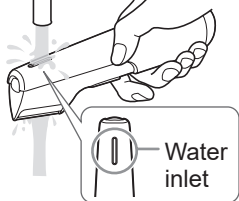**To remove heavy dirt**

1. Remove the attachment and blade.
2. Rinse with running water.

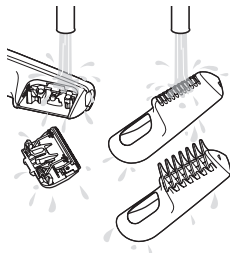


3. Shake up and down several times to remove the water.

- Be careful not to hit the main body on the sink or any other object while draining the water. Failure to do so may cause malfunction.

4. Wipe off the water with a towel and let it dry naturally.



- It will dry faster with the blade removed.

5. Apply the oil to the blade after drying. (See page 18)

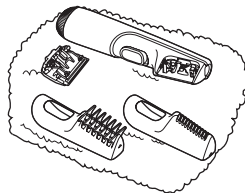


► With the brush

1. Brush off hair trimmings if any.

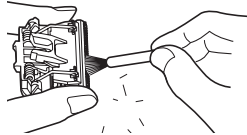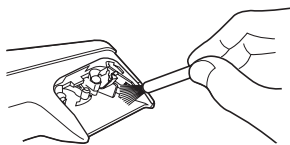

- Clean between the blades while pressing down the cleaning lever.

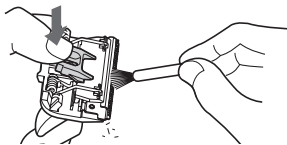


**2. Apply the oil to the blade after drying.
(See page 18)**

Lubrication

Apply the oil to the blade before and after each use.

1. Remove the blade.
(See page 19)
2. Apply a drop of the oil to each indicated point.
3. Attach the blade to the main body, turn on the power and allow to run for approximately 5 seconds.

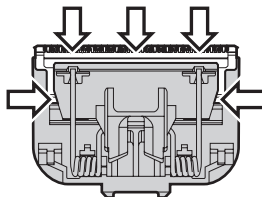

► Replacement part

Replacement part is available at your dealer or Service Center.


Replacement part for ER-GK20	Blade	WER9500
---------------------------------	-------	---------

Removing and mounting the blade

Please check if the blade is deformed or damaged before removing and mounting it.


Removing the blade

1. Hold the main body in front.
2. Push the metal part of the blade to the left with the thumb's belly.
 - It is no problem when touch the blade by fingers.
 - Be careful not to let the blade fall.

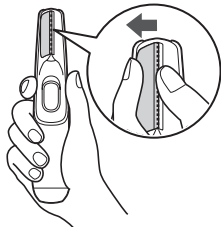

Mounting the blade

1. Fit the mounting hook (B) into the blade mounting (A) on the main body and then push in until you hear a click.

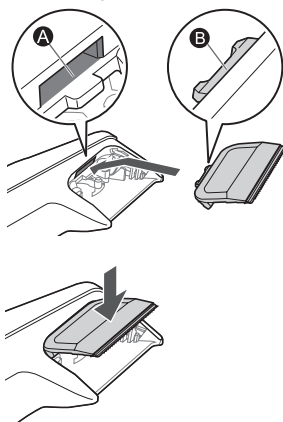

Troubleshooting

English

Problem	Action
The cutting performance has reduced.	▶ Replace the blade. (See page 19)
	▶ Replace the alkaline battery. (See page 9)
	▶ Apply oil. (See page 18)
	▶ Clean the inner blade. (See pages 15~17)
The appliance is not turned on.	▶ Place the alkaline battery correctly. (See page 9)
	▶ Replace the alkaline battery. (See page 9)
	▶ Confirm that the blade is properly attached.
	▶ Apply oil. (See page 18)
Makes a loud sound.	▶ Confirm that the blade is properly attached.

If the problems still cannot be solved, contact the store where you purchased the appliance or a service center authorized by Panasonic for repair.

Specifications

Power supply	Dry-cell battery
Battery type	One LR6 (AA Alkaline Battery) (Sold separately)

English

This product is intended for household use only.

Panasonic Corporation
<http://www.panasonic.com>
© Panasonic Corporation 2020

© EN, TW

Printed in China
ER9700GK201401 S0520-0