

 
Basic Operating Instructions

تعليمات التشغيل الأساسية

Portable Stereo CD System

استريو محمول CD نظام

Model No. / طراز رقم RX-D500

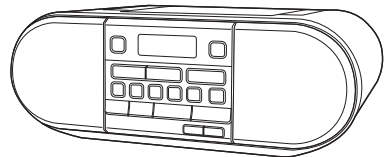

This manual contains basic information. Visit website below for detailed instructions.

يحتوي هذا الدليل على معلومات أساسية. قم بزيارة الموقع أدناه للحصول على تعليمات مفصلة.

https://panasonic.jp/support/global/cs/audio/oi/rx_d500/

Thank you for purchasing this product. Please read these instructions carefully before using this product, and save this manual for future use.

Accessories

Check the supplied accessories before using this unit.

- 3 AC mains leads



- Please use the supplied AC mains lead suitable for the household mains socket.
- Do not use AC mains lead with other equipment.

 
(For the AC mains plug of three pins)

How to replace the fuse



The location of the fuse differ according to the type of AC mains plug (figures A and B). Confirm the AC mains plug fitted and follow the instructions below.

Illustrations may differ from actual AC mains plug.

- Open the fuse cover with a screwdriver.

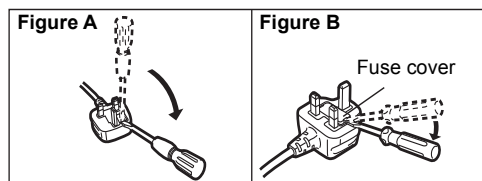

  - Replace the fuse and close or attach the fuse cover.

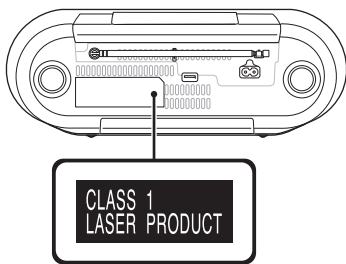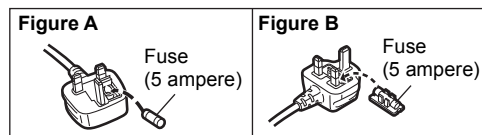

The symbols on this product (including the accessories) represent the following:

- ~ AC
- DC
- Class II equipment (The construction of the product is double-insulated.)
- I On
- Standby

Safety precautions

WARNING

Unit

- To reduce the risk of fire, electric shock or product damage.
 - Do not expose this unit to rain, moisture, dripping or splashing.
 - Do not place objects filled with liquids, such as vases, on this unit.
 - Use the recommended accessories.
 - Do not remove covers.
 - Do not repair this unit by yourself. Refer servicing to qualified service personnel.
 - Do not let metal objects fall inside this unit.
 - Do not place heavy items on this unit.

AC mains lead

- To reduce the risk of fire, electric shock or product damage.
 - Ensure that the power supply voltage corresponds to the voltage printed on this unit.
 - Insert the mains plug fully into the socket outlet.
 - Do not pull, bend, or place heavy items on the lead.
 - Do not handle the plug with wet hands.
 - Hold onto the mains plug body when disconnecting the plug.
 - Do not use a damaged mains plug or socket outlet.
- The mains plug is the disconnecting device. Install this unit so that the mains plug can be unplugged from the socket outlet immediately.

CAUTION

Unit

- This unit utilizes a laser. Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.
- Do not place sources of naked flames, such as lighted candles, on this unit.
- This unit may receive radio interference caused by mobile telephones during use. If such interference occurs, please increase separation between this unit and the mobile telephone.
- This unit is intended for use in moderate and tropical climates.
- Be careful when adjusting the antenna or in handling the unit, always keep the antenna away from your face to avoid an injury.

Placement

- Place this unit on an even surface.
- To reduce the risk of fire, electric shock or product damage.
 - Do not install or place this unit in a bookcase, built-in cabinet or in another confined space. Ensure this unit is well ventilated.
 - Do not obstruct this unit's ventilation openings with newspapers, tablecloths, curtains, and similar items.
 - Do not expose this unit to direct sunlight, high temperatures, high humidity, and excessive vibration.

 
Avoid the use in the following conditions

- High or low extreme temperatures during use, storage or transportation.
- Replacement of a battery with an incorrect type.
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Extremely high temperature and/or extremely low air pressure that can result in an explosion or the leakage of flammable liquid or gas.

Battery

- Do not use rechargeable type batteries.
- Danger of explosion if battery is incorrectly replaced. Replace only with the type recommended by the manufacturer.
- Mishandling of batteries can cause electrolyte leakage and may cause a fire.
 - Remove all batteries from the unit when not in use for a long period of time. Store in a cool, dark place.
 - Do not heat or expose to flame.
 - Do not leave the battery(ies) in a car exposed to direct sunlight for a long period of time with doors and windows closed.
 - Do not take apart or short circuit.
 - Do not recharge alkaline or manganese batteries.
 - Do not mix old and new batteries.
- Do not use different types of batteries at the same time.
- When disposing of the batteries, please contact your local authorities or dealer and ask for the correct method of disposal.

Control reference guide

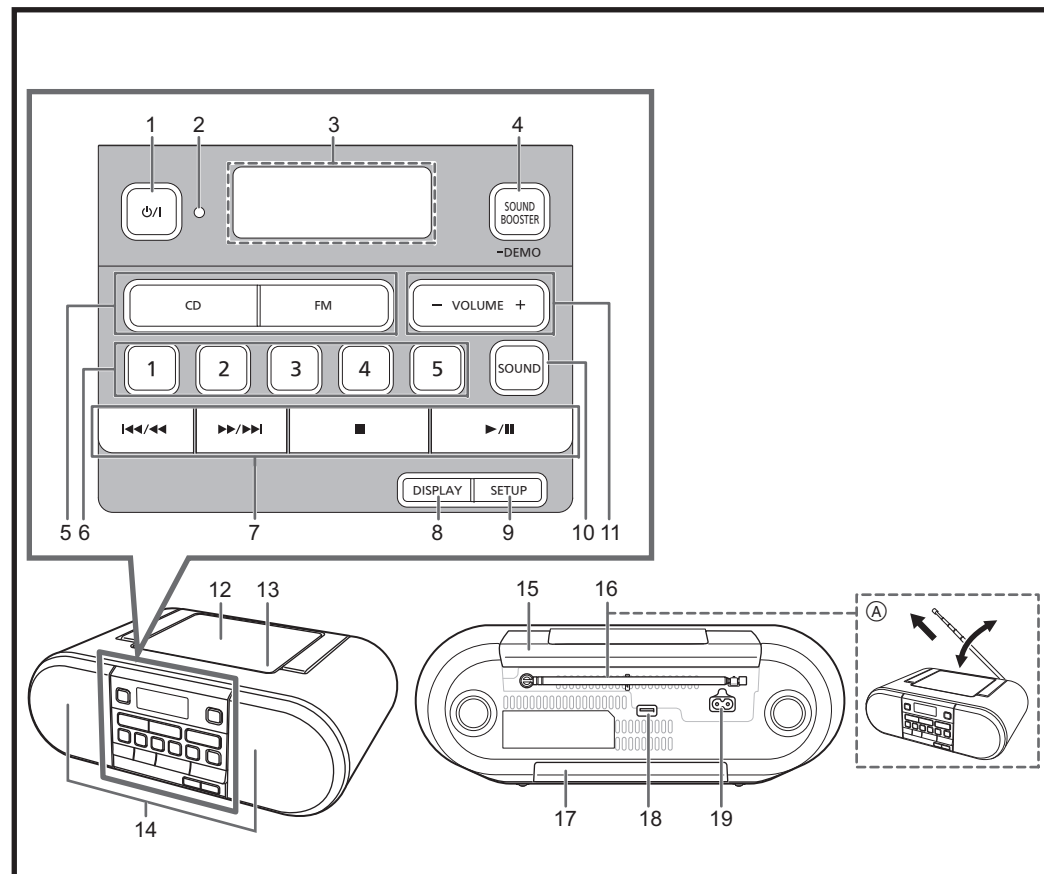


- Standby/on switch (⏻/⏻)**
 - Press to switch the unit from on to standby mode or vice versa. In standby mode, the unit is still consuming a small amount of power. (→ "Specifications")
- Power indicator**
 - The indicator lights up when this unit is turned on. (It will go off when the unit is turned off.)
- Display**
- Set sound booster effect**
 - Press and hold to enter demo play mode.
 - During unit on, press and hold for at least 2 seconds. The demonstration music will be played for approximately 1 minute.
- Select the audio source ("CD", "FM")**
- Direct preset buttons for storing or selecting radio station (1) to (5)**
- Basic playback control buttons**
 - To navigate menu
 - [◀/▶], [▶/▶▶]: Selects item/setting
 - [▶▶▶/▶▶▶]: Confirms item/setting
- Change the displayed information**
- Enter setup menu**
- Enter sound menu**
- Adjust the volume (0 (min) to 50 (max))**
- Disc lid**
 - Put in a disc with the label facing up.
 - Do not open the disc lid when "READING" is displayed. (Wait for this message to disappear.)
 - Ensure the disc is stopped before removing it.
- Open or close the disc lid (⏏)**
- Speakers**
 - These speakers do not have magnetic shielding. Do not place them near a TV, personal computer or other magnetic devices.
- Handle**
- Antenna**
 - Extend the antenna, adjust the length, angle and direction for best reception.
- Battery compartment**
- USB port for software update**
- AC IN terminal**

Power sources

Using the household mains socket

Connect the AC mains lead firmly to the unit and the household mains socket.

 - Do not use any other AC mains lead except the supplied one.

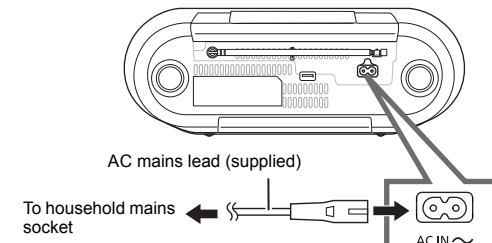


Using the batteries (not supplied)

Use alkaline or manganese batteries.

Disconnect the AC mains lead from the unit to operate on battery power.

Install the batteries so that the poles (+ and -) align with those in the unit.

 - When using batteries as the power source:
 - the volume is comparatively lower.

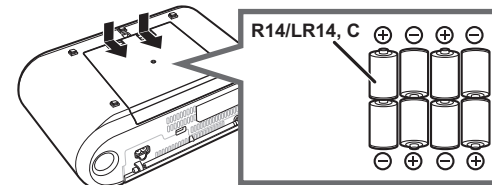

Battery indicator

When the batteries are weak, "⚡" light up on the display.

- When "⚡" flashes, replace all the batteries with new ones.
- While the unit is on, do not switch the power source from AC to battery power, or vice versa. Press [⏻/⏻] to switch the unit to standby mode before switching power sources.

Battery removal

Do not pull the battery out from the end placed against the spring. Remove the battery by lifting its positive end (+).

Basic play

Disc support: CD audio in CD-DA format or a CD that contains MP3 files

- Press [CD] to select "CD".
- Press [▶/▶▶] to start playback.

Stop	Press [■].
Pause	Press [▶/▶▶]. Press again to continue playback.
Skip	Press [◀/▶▶▶] or [▶▶▶/▶▶▶] to skip track. (MP3) To select the album: 1 Press and hold [DISPLAY] until "ON ALBUM SKIP" is displayed. 2 Within 10 seconds, press [◀/▶▶▶] or [▶▶▶/▶▶▶].
Search	During play or pause, press and hold [◀/▶▶▶] or [▶▶▶/▶▶▶].

Listening to FM radio

Preparation

- Press [FM] to select "FM".

Manual tuning

- Press [SETUP] repeatedly to select "TUNE MODE".
- Press [◀/▶▶▶] or [▶▶▶/▶▶▶] to select "MANUAL" and then press [▶/▶▶].
- Press [◀/▶▶▶] or [▶▶▶/▶▶▶] to tune in to the station.
To tune automatically, press and hold the button until the frequency starts changing quickly.

Troubleshooting

Before requesting service, refer to troubleshooting in "Operating Instructions (PDF format)". If the problem remains unresolved, consult your dealer for instructions.

Specifications

Power consumption	14 W
Power consumption in standby mode	Approx. 0.2 W

Power supply	AC 220 V to 240 V, 50/60 Hz
AC mains lead	DC 12 V (8×R14/LR14)

Dimensions (W×H×D)	346 mm×130 mm×239 mm (including protrusions)
---------------------------	----------------------------------------------

Mass	
Without batteries	Approx. 2.5 kg
With batteries	Approx. 3.0 kg
Operating temperature range	0 °C to +40 °C
Operating humidity range	35 % to 80 % RH (no condensation)

Pick up	
Wavelength	790 nm (CD)



- Specifications are subject to change without notice.
- Mass and dimensions are approximate.

Disposal of Old Equipment Only for European Union and countries with recycle systems

This symbol is only valid in the European Union and countries with recycle systems. If you wish to discard this product, please contact your local authorities or dealer and ask for the correct method of disposal.



Panasonic Corporation
Web Site: <http://www.panasonic.com>



© Panasonic Corporation 2021

TQBJ2298
F0221TM1031

For Australia

Panasonic Warranty

- Subject to the conditions of this warranty Panasonic or its Authorised Service Centre will perform necessary service on the product, without charge for parts or labour, if in the opinion of Panasonic the product is found to have a manufacturing defect within one (1) year or (12 months) (the "warranty period") from the date of purchase appearing on your purchase receipt.
- This warranty only applies to Panasonic products purchased in Australia and sold by Panasonic Australia, it's Authorised Distributors, or Dealers, and only where the products are used and serviced within Australia or its territories. Warranty cover only applies to the services that are carried out by a Panasonic Authorised Service Centre and only if valid proof of purchase is presented when the warranty service is requested.
- This warranty only applies if the product has been installed and/or used in accordance with the manufacturer's recommendations (as noted in the operating instructions) under normal use and reasonable care (in the opinion of Panasonic). The warranty does not cover damage, malfunction or failure resulting from use of incorrect voltages, incorrect installation, accident, misuse, neglect, build-up of dirt or dust, abuse, maladjustment of customer controls, mains supply problems, thunderstorm activity, infestation by insects or vermin, tampering or repair by unauthorised persons (including unauthorised alterations), exposure to abnormally corrosive conditions, or any foreign object or matter having entered the product.
- This warranty does not cover the following items unless the fault or defect existed at the time of purchase:
 - Consumable parts
 - Cosmetic parts
 - Worn or damaged parts
 - Information stored on Hard Disk Drives, Optical Discs, USB Devices, SD Cards, Tapes
 - DTV reception issues caused by TV Aerial / Cabling / Wall socket(s)
- Some products may be supplied with Ethernet connection hardware. The warranty is limited on such products and will not cover:
 - Internet and or DLNA connection / setup related problems
 - Access fees and or charges incurred for internet connection
 - Incompatible software or software not specifically stipulated in the product operations manual; and
 - Any indirect or consequential costs associated with the incorrect use or misuse of the hardware, its connection to the internet or any other device.
- To claim warranty service, when required, you should:
 - Contact Panasonic's Customer Care Centre on 132 600 for Service Centre information.
 - Confirm the opening and acceptance times with the Authorised Service centre that you choose.
 - Then send or take the product to a Panasonic Authorised Service Centre together with your proof of purchase receipt.
 - Any freight and insurance costs associated with the transport of the product to and/or from your nearest Authorised Service Centre must be arranged and paid for by you.
- The warranties hereby conferred do not extend to, and exclude, any costs associated with the installation, de-installation or re-installation of a product, including costs related to the mounting, de-mounting or remounting of any screen, (and any other ancillary activities), delivery, handling, freighting, transportation or insurance of the product or any part thereof or replacement of and do not extend to, and exclude, any damage or loss occurring by reason of, during, associated with, or related to such installation, de-installation, re-installation or transit.

Panasonic Authorised Service Centres are located in major metropolitan areas and most regional centres of Australia, however, coverage will vary dependant on product. For advice on exact Authorised Service Centre locations for your product, please telephone our Customer Care Centre on 132600 or visit our website and use the Service Centre Locator.

In addition to your rights under this warranty, Panasonic products come with consumer guarantees that cannot be excluded under the Australian Consumer Law. If there is a major failure with the product, you can reject the product and elect to have a refund or to have the product replaced or if you wish you may elect to keep the goods and be compensated for the drop in value of the goods. You are also entitled to have the product repaired or replaced if the product fails to be of acceptable quality and the failure does not amount to a major failure.

If there is a major failure in regard to the product which cannot be remedied then you must notify us within a reasonable period by contacting the Panasonic Customer Care Centre. If the failure in the product is not a major failure then Panasonic may choose to repair or replace the product and will do so in a reasonable period of time from receiving notice from you.

THIS WARRANTY CARD AND THE PURCHASE DOCKET (OR SIMILAR PROOF OF PURCHASE) SHOULD BE RETAINED BY THE CUSTOMER AT ALL TIMES

If you require assistance regarding warranty conditions or any other enquiries, please visit the Panasonic Australia website www.panasonic.com.au or contact by phone on **132 600** *If phoning in, please ensure you have your operating instructions available.*

Panasonic Australia Pty. Limited

ACN 001 592 187 ABN 83 001 592 187
1 Innovation Road, Macquarie Park NSW 2113
www.panasonic.com.au

