
Panasonic

Model No.: PI-DUA5MWA

Operating Instructions

Dome IP Camera

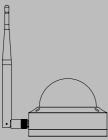

Information on hazardous constituents as specified in rule 16(1) in electrical and electronic equipment.

Declaration of Conformity with the requirements of the E-waste (Management) Amendment Rules 2022 with the rule 16(1) limits with respect to lead, mercury, cadmium, hexavalent chromium, polybrominated, biphenyls, polybrominated biphenyls, polybrominated diphenyl ethers.

The content of hazardous substance with the exemption of the applications listed in SCHEDULE II of the E-Waste (management) Amendment Rules 2023.

- 1. Lead(Pb)- not over 0.1% by weight;
- 2. Cadmium(Cd)- not over 0.01% by weight;
- 3. Mercury(Hg)- not over 0.1% by weight;
- 4. Hexavalent chromium(Cr6+)- not over 0.1% by weight;
- 5. Polybrominated biphenyls(PBBs) not over 0.1% by weight;
- 6. Polybrominated diphenyl ethers(PBDEs)- not over 0.1% by weight;



For the purpose of recycling to facilitate effective utilization of Resources, please return this product to a nearby authorised collection center, registered dismantler or recycler, or Panasonic service center when disposing of this product.

Please see the Panasonic website for further information on collection centers, etc. or call the customer care toll free number.

Website: https://www.panasonic.com/in/corporate/ewaste-management.html Customer Care Number (Toll Free): 18004190373 E-mail: helpline@in.panasonic.com

Thank you for purchasing this Panasonic product. Please read these instructions carefully before operating this product and retain them for future reference.

The images shown in this manual are for illustrative purposes only.

English

Important Safeguards and Warnings

- 1. Please read these instructions carefully.
- 2. Please heed all warnings.
- 3. Please follow all instructions.
- 4. Do not use this apparatus near water.
- 5. Please clean only with dry cloth.
- Do not block any ventilation openings, install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 8. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

- 10. Only use attachments/ accessories specified by the manufacturer.
- 11. Use with cart, stand, tripod, bracket, or table only as specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- M Unplug this apparatus during lighting storms or when unused for long periods of time.
- 13. Refer all servicing to qualified service personnel.
- 14. Do use a reliable and secure network connection to avoid interruptions in the camera's feed.
- Do ensure good Wi-Fi connectivity/ signal (2.4Ghz), in case camera is used in Wi-Fi mode.
- Don't tamper with the camera's internal components or modify its firmware without proper knowledge or authorization.

Disclaimer

- We strongly recommend you to set a difficult password immediately after the first log in to ensure account security and don't share it with unauthorized personnel.
- Password Characters: Password must contain at least 8 to 16 characters comprising all three elements: alphabet, special character & digit.
- The illustrations in this manual are for reference only and may vary depending on the version or model. The screenshots in this manual may have been customized to meet specific requirements and user preferences. As a result, some of the examples and functions featured may differ from those displayed on your screen / monitor.
- We have put in our best efforts to verify the correctness and integrity of the contents in this manual, but no statement, information / recommendation in this manual shall constitute formal guarantee of any kind, expressed or implied. We shall not be held responsible for any technical or typographical errors in this manual.
- Video and audio surveillance can be regulated by laws that vary from country to country. Check the law in your local region before using this product for surveillance purposes. We shall not be held responsible for any consequences resulting from illegal operations of the device.
- Use of this product, the manual and the subsequent result shall be entirely the user's own responsibility. In no event shall Panasonic be liable for any special, consequential, incidental, or indirect damages, including, among others, damages for loss of business profits, business interruption, or loss of

data or documentation, or product malfunction or information leakage caused by cyber-attack, hacking or virus in connection with the use of his product.

- The contents of this manual are subject to change without prior notice. Regular updates can be added to the new version of this manual.
- Due to uncertainties such as physical environment, discrepancy may exist between the actual values and reference values provided in this manual. The ultimate right to interpretation resides with our company.

Contents

Part I Product Introduction	1
Product Function	1
Recommended PC Specifications	2
Accessories	3
Appearance	4
Installation Precautions	5
Installation Instructions	6
Part II Local Network Access	7
1. Powering and Networking	7
2. Active X Installation Procedure	8
Install Active-x	8
3. Camera Configuration & Setup	10
4. About the Live Page & Icons	13
5. About Playback	14
6. About Config	15
Local Config	15
Encode	16
Network	25
Record	29
Alarm	30
System Configuration	36
Security	39

System Tool	40
System Information	43
Do's & Don'ts	45
Troubleshooting Points	46
TECHNICAL SPECIFICATIONS	48

Product Function

- 1. For Indoor & Outdoor use.
- 2. PoE enabled.
- 3. Encode codec (H.264, H.265 & H.265+)
- 4. Full HD Video Quality (2880x1620) 5M.
- 5. Built-in microphone.
- 6. Built-in Wi-Fi. (2.4Ghz)
- 7. ONVIF Compliance.
- 8. Dual-Streaming.
- 9. Supports IR.
- 10. Supports Privacy masking. (4 Zone)
- 11. This IP camera can display videos in different resolutions and qualities.
- 12. When an event occurs, the related text notification is sent to the email address registered by a user.
- 13. Web Browser-based Monitoring using the Internet web browser to display the image in a local network environment.
- User can access this IP camera on mobile application & desktop application (VMS).
- 15. Tampering Detection Detects tempering attempts on video monitoring.
- 16. Motion Detection Detects motion from the camera's video input.

- Video Blind Detection Detect if camera lens is covered/blocked more than 60%.
- Abnormality Detection Detects abnormality alarms like IP Address Conflict, Network disconnect etc.
- 19. Sound Detection Detects abnormal sound from the camera video input.
- 20. Human Detection Detects human movement from the camera video input.
- 21. Analytic Detect area intrusion & line crossing event in the defined region.

Recommended PC Specifications

- 1. CPU: Intel Core i5 2.8 GHz or higher
- 2. RAM: 4GB or higher
- 3. Supported OS: Windows 10 & above.
- 4. Supported Browser: Microsoft Internet Explorer. (Fully supported for all functionalities)
- 5. Mozilla Firefox & Google Chrome supported with limited functionality.
- 6. Apple Safari is supported with limited functionality.


Accessories



RJ45 Cap with sealing Ring




Screw & Wall Plug (x3)

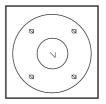

Mounting Sticker

A		Panasonic	Safely have a close 1. To fail the first of the start to the start plus have not descended by the descendence and the start of the descendence are started above.	Bits results, that where is to be state concern? If its page rates charge concernments where a subject and the second second second concernments and the bit second second concernments are the second second second and concernments and concernments are set of the page second second concernments are set of the second second seco
	Panasonic	Quick Installation Guide Model Nume Model No. Dom: IP Camera M-OUASMARA	establishes operation knowledge with the decademics WARNINGS • Over-mathetic operators with a strating the Moto The source and the strategic operator with the doce the segment of the strategic operator operators with the doce the segment of the strategic operators are as a strategic operator operator operator Mol several reserves the strategic operator operators and parts Mol several reserves the strategic operators (see the segment operators ope	 the point the point of the section and the detect Our to be questionable for the same has seen if a finite point is pointed by a section of the point of the poin
	Panasanic Life Solutions India Pvt. Ltd. CERTIFICATE OF WARRANTY Customer Copy Sr No.A- Dear Castomer, Thursis you for longing this Panasonic product. This card entitles you to enjoy. These warranty on the product.		 The particle horizon of the branch or addition methods with the set of the branch of the branchoo the branch of the branchoot of the branchoot of the brancho	 Herick II: An any entropy. The conversion of the mark is globalic to the specified corps. Datase to show the conversion of specific providing a specific conversion. The matter spin specific conversion of the specific conversion of spin specific spin spin spin spin spin spin spin spin
	Product :	the angle from a the point on the Common parameter,	CALTERN: • Decision and any frequency of the oriented distance or course of yours on a field coupled, with a start of you, where is the null that is provide of transition of start once patients are to provide the orient provide the start of the start of yourse of the orient provide the start of the start of the start of the start the start of the start of the start of the start of the start of the start of the start of the start of the start of the start of the start of the start of the start of th	 Inside the product is allowed by the exploritor of product of a first frame bacaging allow the synchron findes on enters of an approximation of the synchron of the product on allow is a device of the company department of the synchron of the synchron methods as a synchron of the state is a single of the product methods as a synchron of the state is a single of the product methods are approximately attention of the subscription of the methods and the synchron of the state is a single of the synchron wind game constraints of the state is a single on a single on state and wind game constraints of the state is a single on a single on state and wind game constraints of the state is a single on a single on a single on state of the state of the state is a single on a single on a single on a single on state is a single on single on an a single on a single on a single on a single on state is a single on a single on single on a single on single on a single on single on a single on a s
	Tel No. :	Power we die Downerse onleide die Balter erformungen einder den retern ist, werde die onnerse einer befahrte marke Datase werdenen die die Unterstellich Die balt befahrigte gewannen einer Bartel Die Powlant (Second products (Charries de consequences en la descence serie que se solution en en el de des portes are consecution en la porte se parte mang decit es de portes. Estas es deservatis are consequences de second en el descende en el destructura de se se conjunction de second en el de consecution en el de de se se conjunction de manifer la del second e second e contex ataxée destructura de second en el de consecution en el del de consecution de manifer en en el manda en el del del second en el de conjunction de la consecution en el manda en el del del second e consecution de la consecutio	ta kontenia interesa Talan takan dikan dikan taka yan kawa konteni
	Nearer Name and Address:	Eventhics DAP EXP (Conservation France Keep and Velop BL Dataset and Velop BL Dataset and Velop For Annual State For Annual State State State You'd Market Support Data Law Datasets	Zalita is solved in any solven approximation. I have a heap for place of the first of any first order solved in the solution is not first of any solved difference of the solved neurons. • Decaylable solved places are address received and solved neurons • Decaylable solved places are address received and an exerci- tic of entrophysics of any many data and with the solved neurons • Decaylable solved places are address to the solved solved the operator if have place are used for the order data. Any first decay and the operator if have places are used for the order data. • Decay and with the operator solved by the order data.	
للسب	neg une raingont upper due tourisour for the une (UNUD) of the Hypere rule work. In Regi, diffice l'Ansonne Life Sortion inde Armed and Life Moor Indease Clover, Amberez abort, Kind, Gargoni 1220/2, Regnan, Inde		a in the of the ord particular , and course in the	
Antenna	Warranty Card	Qu	ick Installation	Guide

Appearance

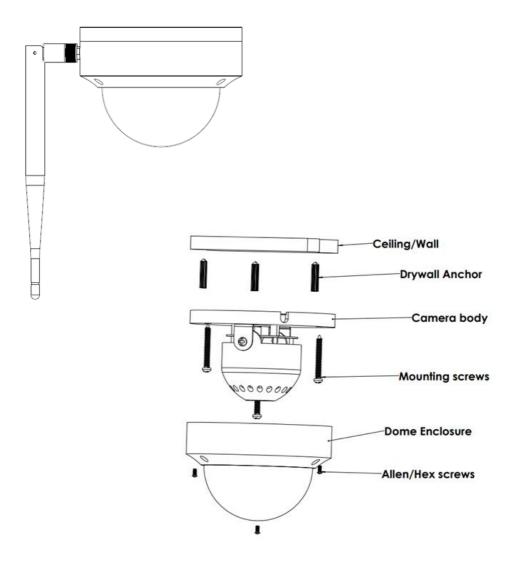

Installation Precautions

Note: This camera is for indoor and outdoor usage.

- This device should be mounted and maintained only by an experienced professional. If in doubt, consult the dealer.
- Before mounting, determine the suitable location. The device must be fixed to a wooden or masonry/concrete wall or ceiling using fasteners that are appropriate for the mounting surface. Do not install on drywalls, wallboards, or thin plywood. The mounting surface must be capable of supporting the weight of the device.
- Do not drill into any pipes or power lines beneath the surface during mounting holes preparation. Use voltage/metal detector before drilling any holes to eliminate any such potential risks.
- 4. Do not hang anything on the device.
- 5. Mount the device to monitor the most vulnerable areas of your home, such as front elevations, side access and rear entrance points.
- It is suggested to mount the device 2.5 m to 4 m above the ground for the most visibility and the maximum detection range.
- Do not place the device near high voltage wires or other sources of electrical interference. Electrical interference may degrade the quality of the signal.

Installation Instructions

- 1. Disassemble the camera using screwdriver.
- 2. Place the mounting base of camera onto the selected location.
- 3. Using the template provided, Drill the 3 holes with a 6 mm drill bit. Insert the wall plugs for concrete walls.
- 4. Tuck the cable into the slot on the side of the wall bracket.
- 5. Fix the camera in mounting bracket with provided mounting screws.
- 6. Adjust the camera angle as per the requirement, so that the camera faces towards the monitoring object.
- 7. Put the dome enclosure on to the base and tighten the Allen screws.

1. Powering and Networking

- 1. Use PoE i.e., compliant with IEEE802.3af protocol.
- 2. Connect the PoE switch and cameras PoE connector.
- 3. Switch on the PoE switch.
- 4. Default IP address of the camera is 192.168.1.108
- 5. Connect the PC on the PoE switch & configure PC IP address in the same series as IP camera.
- 6. Launch an internet browser on the local PC.
- 7. Enter the IP address of the camera in the address bar for the browser.
- Enter username and password (Default username: admin & password: admin123) to login to the IP camera.



Panasonic



2. Active X Installation Procedure

Install Active-x

1. Input username and password to log in (When first access for live view it is recommended to download the Active-X.

				- 0
🔶 🕘 🧭 http://1 🕽 Login	192.168.1.108/doc/page/login.html		+ ♥ Search	P • 份公會
- Lugar	<u>1</u>			
		Panasonic	;	
		Language English 🗸		
		Usemame		
		Password	0	
		•LAN WAN		
		Login		

2. Choose a language then enter the username and password to log in, then click on "Download ActiveX" to download the ActiveX setup file.

Panasonic

Language	English
Username	
Password	0
	•LAN OWAN
	Login Download ActiveX


3. Then click on save button as shown below.

De universitée aux accuss TCIDCIU de Clarat INI Catilla aux (240 MD) faire universitée de sate			×
Do you want to run or save TSIPCWebClient_EN_SetUp.exe (3.49 MB) from webeng.topscloud.net?			
🕐 This type of file could harm your computer.	Run	Save 🔻	Cancel

4. Then click on Run button.



3. Camera Configuration & Setup

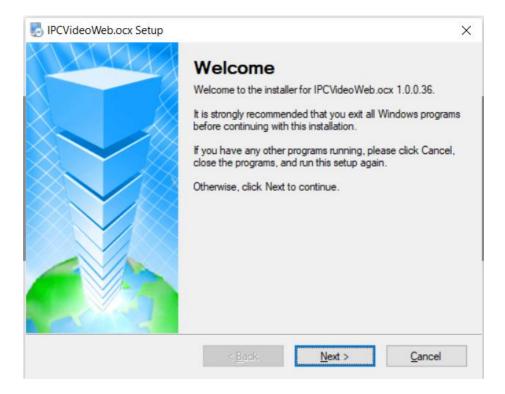

• IP Address configuration.

- Static Default IP address of the IP camera is 192.168.1.108, we recommend changing the default IP address during 1st login.
- Use the internet browser to access the camera, login screen will appear, login to the camera using username & password.

Click on [Config] > [Network] as shown below.

Pana	asonic			Previ	ew Playbac	*	Config	Alarm	Logout
 ► Local Config ► Encode ▼ Network Step 2 ■ Network ■ Network ■ Network ■ Network ■ Alarm ■ System Config ■ System Info 	TCPIIP Network card parameter con NetCard Type Device IPv4 address IPv4 subnet mask IPv4 default gateway MAC MTU HTTP port TCP port Orwif port All Subnet Om/f DNS server configuration Preferred DNS server Alternate DNS server	-	DHCP 				Step 1	Ad III	Logou
		Save							


• Change the IP address as per your router/NVR configuration then click on save button.

• DHCP configuration

• Click on [Config] > [Network] as shown below.

Pana	asonic			Preview	Playback	Config	Alarm	Logout
Local Config	TCP/IP					Step 1		
▶ Encode	Network card parame	ter configuration	-			step 2		
Vetwork Step 2	NetCard Type	Wired network car 🗸 🗹 DH	CP Step 3					
Network	Device IPv4 address	192.168.1.108	-					
Net Service	IPv4 subnet mask	255.255.255.0						
Record	IPv4 default gateway	192.168.1.1						
 Alarm System Config 	MAC	90:f4:21:40:07:9f						
 System Coming System Info 	MTU	1400						
	HTTP port	80						
	TCP port	34567						
	Onvif port	8088						
	All Subnet Onvif							
	DNS server configura	tion						
	Preferred DNS server	8.8.8						
	Alternate DNS server	8.8.4.4						
		Save Step 4						

4. About the Live Page & Icons

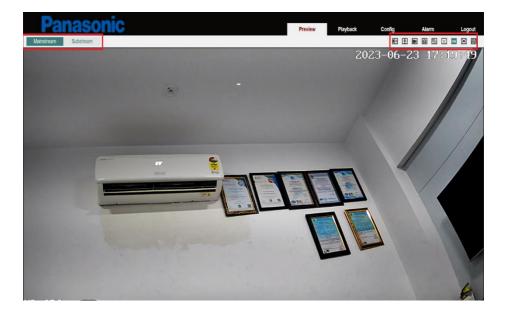

Preview	Mainstream Substream	Select Mainstream to view high resolution video or Sub stream to low resolution video.
interface		Turn on to hear the sound.
		Not applicable for this model.

	Record: Click to start/stop manual recordings and save them in C:\Record
	Click to capture the preview screen and save it in C:\Picture
6	Click to capture three pictures in single shot and save them in C:\Picture
1X	Original resolution display
WIH	Suitable for display resolution
	Full-screen display
3	Fluency

5. About Playback

This option will not be in use for the current model.

6. About Config

Local Config

Provide option to define path for local storage related to manual recording Snap/Video.

Click on [Config] > [Local Config] as shown below

Pana	asonic			Preview	Playback	Config	Alarm	Logout
▼ Local Config	Local Config							
Local Config	Video file save path	C:IRecord	Browse]				
 Encode Network 	Preview capture path	C:lPicture	Browse					
Record	✓ Local snap saved in JPG	format						
▶ Alarm		Save						
 System Config System Info 								
, ojstan nio								

Encode

Encode setting are video image quality settings which includes compression, resolution, FPS, bitrate, I-Frame interval etc. Setting these correctly based on the network can save network bandwidth, HDD space, fix network lags etc.

Click on [Config] > [Encode] as shown below.

Pan	asonic				
► Local Config	Encode Setting Audio				
* Encode	Encode mode	H 265	۷	H.265	۷
Encode	Resolution	5M(2880x1620)	v	D1(704x576)	٧
Prev Mode	Frame rate(FPS)	20	v	15	٧
Network	Bit rate type	VBR	v	VBR	۷
Record	Quality	Good	v	Good	۷
Alarm	Bit rate(Kb/S)	3267	v	635	٧
 System Config System Info 	Reference(KD/S)	816-5445Kb/S		211-1058Kb/S	
· · · · · · · · · · · · · · · · · · ·	I frame interval(1-20/Sec)	4		4	
	Video/Audio	9	8	2	8

Audio Provide option to set audio encode settings, mic input, mic output (not applicable for this model) sensitivity.

Click on [Config] > [Encode] > [Audio] as shown below.

Panasonic Preview Playback Config	Alarm	Logout
Local Config Encode Setting Audio VEncode Encode mode G711A Encode Sampling rate 000 Prev Mode Out volume 10 Network In volume 100 Network In volume 100 Sare Sare System Config System Info	Additi	Logoat

Prev Mode

1. **OSD Setting** provides an option to configure parameters related to on screen display during the live view, for example Time title, Channel title, week title etc.

click on [Config] > [Prev Mode] > [OSD set] as shown below.


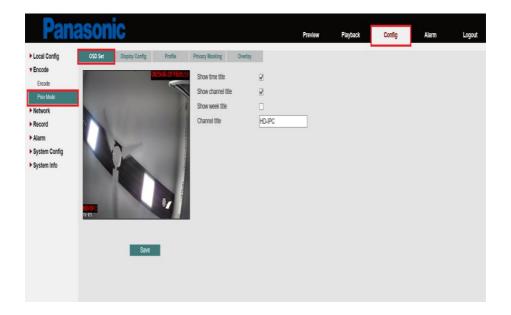



 Image color provides an option to configure parameters related to image quality, for example Brightness, Contrast, Saturation, Tone & Sharpness for day & night profile.
 Click on [Config] > [Prev Mode] > [Display Config] > [Image Color] as shown

below.

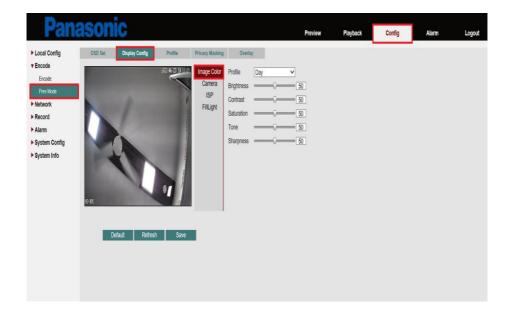


3. **Camera** provides an option to configure parameters related to Day/Night mode, day night control, IR cut, image flip, mirror image & IR reverse.

Click on [Config] > [Prev Mode] > [Display Config] > [Camera] as shown below.

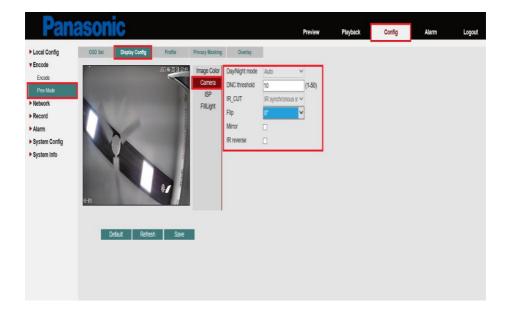

4. **ISP** provides an option to configure parameters related to Exposure mode, BLC, HLC, Profile, Anti flicker, Day/Night Noise filter, AE reference & AE sensitivity.

Click on [Config] > [Prev Mode] > [Display Config] > [ISP] as shown below.

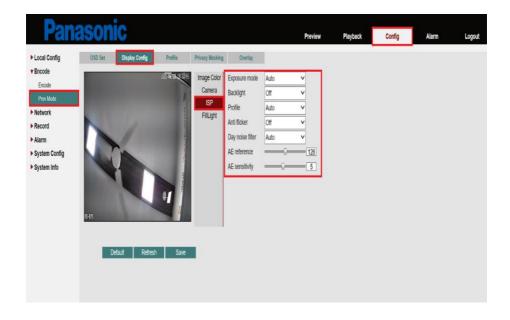

5. **Fill Light** option not applicable for this camera model.

Profile

Day & Night profile can be created and scheduled for different picture quality display during the live view.


Click on [Config] > [Prev Mode] > [Profile] as shown below.



Privacy Masking

Privacy masking is used to block a particular area or object to be viewed during the live camera view, user can create up-to 4 different zones to mask.


Click on [Config] > [Prev Mode] > [Privacy Masking] as shown below.

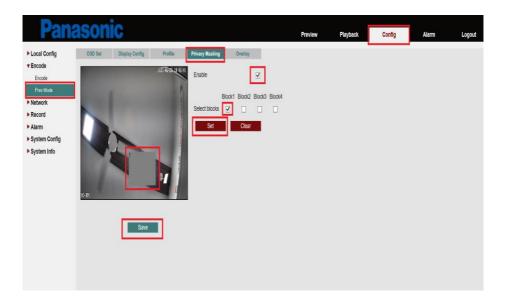

Overlay

This utility provides an option to configure text to be displayed over the live view.

Click on [Config] > [Prev Mode] > [Overlay] as shown below.

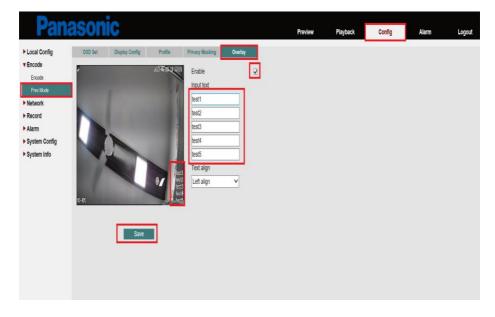

Network

Net Services

1. Email provides an option to configure SMTP server for the email ID to send alarm notification by the camera in case of any configured event.

Click on [Config] > [Net Service] > [Email] as shown below.

Pana	asonic)					Preview	Playback	Config	Alarm	Logout
► Local Config	Email	DDNS	RTSP	FTP	WiFi	UPnP	P2P	IP Filter			
Encode	Enable										
▼ Network	SMTP server	smt	p.gmail.com								
Network	SMTP port	465									
Net Service	Enable SSL	V									
Record	Username										
▶ Alarm	PassWord										
System Config	Sender										
System Info	Receiver										
	Title	Ala	m Message								
	Test	Save									

 DDNS provides an option to register with the DDNS server to obtain a domain name for your IP Camera and then access your IP Camera by visiting the domain name instead of an IP address (http://DDNS server address/IP Camera domain name) using a web browser.

Pana	ason	ic					Preview	Playback	Config	Alarm	Logout
► Local Config	Email	DDNS	RTSP	FTP	WiFi	UPnP	P2P	IP Filter			
Encode	DDNS type	000				wr III		- The			
Network Network	Enable										
Net Service	Local domain Username	you	r.gicp.net								
 Record Alarm 	PassWord										
System Config		Save									
System Info											

Click on [Config] > [Net Service] > [DDNS] as shown below.

3. RTSP provides an option to access IP Camera video stream over any 3rd party device/media player.

Click on [Config] > [Net Service] > [RTSP] as shown below.

Dane	ason	•									
ralle	25VII						Preview	Playback	Config	Alarm	Logout
Local Config	Email	DDNS	RTSP	FTP	WiFi	UPnP	P2P	IP Filter			
► Encode	Enable	V									
Network	Port	554									
Network	URL:	rtsp:/	/ <ip>:<port>/avst</port></ip>	ream/channel=<1>/s	tream=<0-mainstre	am;1-substream>.sd	þ				
Net Service											
Record		Save									
▶ Alarm			-								
System Config											
System Info											

- 4. FTP is not applicable for this model.
- 5. Wi-Fi provides an option to configure the camera to connect with Wi-Fi network.

Click on [Config] > [Net Service] > [Wi-Fi] as shown below.

Pana	asoni	C					Preview	Playback	Config	Alarm	Logout
Local Config	Email	DDNS	RTSP	FTP	WiFi	UPnP	P2P	IP Filter			
▶ Encode	Wireless List					Searc	ħ				
Network	No.	SSID		Work m		Signal strengt					
Network	1 2	Server.		5c:a6:e6:a 5c:a6:e6:a		Low Low	~				
Net Service	3	Plasma		c8:3a:35:4	7:0e:78	Very Low					
Record	4 5	production		5c:a6:e6:a 0c:b6:d2:2	3:57:de	Very Low Very Low					
► Alarm	6	AP		6c:5a:b0:5	a:2a:9c	Very Low					
System Config							~				
System Info											
	Wi-Fi										
	Enable	V									
	DHCP	V									
	SSID	AP350)]							
	PassWord		•••	1							
	IP address	192.16	8.38.38	1							
	Subnet mask	255.25	55.255.0								
	Default gateway	192.16	8.38.1								
		Save									

6. To use UPnP in your IP Camera, UPnP must be enabled in the connected router. With UPnP enabled for Network Address Translation (NAT), the ports on the IP Camera can be mapped automatically to the router, and computers can access IP Camera from WAN.

000										
5011	C					Preview	Playback	Config	Alarm	Logout
Email	DDNS	RTSP	FTP	WiFi	UPnP	P2P	IP Filter		•	
Enable								-		
HTTP port	0									
TCP port	0									
Phone port	0									
	Save									
	Email Enable HTTP port TCP port	Enable III Port 0 TCP port 0 Phone port 0	Email DONS RTSP Enable HTTP port 0 TCP port 0	Email DONS RTSP FTP Enable HTTP port 0 TCP port 0 Phone port 0	Email DONS RTSP FTP W/Fi Enable HTTP port 0 Phone port 0 Phone port 0	Email DONS RTSP FTP W/FI UH/P Enable HTTP port 0 Phone port 0	Email DONS RTSP FTP Wiff URv P2P Enable HTTP port Phone port 0	Email DONS RTSP FTP WiFi UPnP P2P IP Filter Enable HTTP port 0 Phone port 0	Email DONS RTSP FTP W/Fi Unit2 P2P IP Filter Enable HTTP port 0 Phone port 0	Email DONS RTSP FTP W/Fi UPv2 P2P IP Filter Enable TCP port 0 From port 0

Click on [Config] > [Net Service] > [UPnP] as shown below.

7. P2P Provide option to enable/disable cloud connectivity for remote access using mobile applications or desktop. User needs to click on Get Cloud ID, after the click camera will pop up message to reboot. After reboot cloud ID can be viewed at this option and camera can be configured in the app for remote monitoring. Click on [Config] > [Net Service] > [P2P] as shown below.

150NI	C					Preview	Playback	Config	Alarm	Logout
Email	DDNS	RTSP	FTP	WiFi	UPnP	P2P	IP Filter			
						_				
Enable	V									
Device ID				_						
Service Address	No	t Available	Get Cloud ID							
Port	58	00	_							
	Sava									
	Odirc									
	Email Enable Device ID Service Address	Enable Device ID Service Address No Port 58	Enail DDNS RTSP Enable Device ID Service Address Not Available	Email DDNS RTSP FTP Enable Device ID Service Address Not Available Port 5800	Email DONS RTSP FTP WFI Enable Device ID Service Address Not Available Port 5500	Email DDNS RTSP FTP WFI UPoP Enable Device ID Service Address Not Available Port 5800	Enable Service Address Not Available Port 5800	Email DDNS RTSP FTP W/FI UPoP R2P P Fiter Enable Device ID Service Address Not Available Port 5800	Enali DNS RTSP FTP WIFI UPHP P2P IP Filter Enable Get Cloud D Port 5800	Enable Get Cloud D Prote 5000

8. IP Filter provides an option to secure connectivity and provide access to authorize users using blacklist and whitelist IP address table.

Pana	asoni	C					Preview	Playback	Config	Alarm	Logout
Local Config Encode Config Network Network NetService Record Alarm System Config System Info	Email Enable Limit type	DDNS B	lack list	PIP Delete	WE	UPnP	P2P	Playoack IP Filter		Aism	Logout

Click on [Config] > [Net Service] > [IP Filter] as shown below.

Record

Record option not applicable for this model.

Alarm

Provide option to trigger notification/recording based on motion, human, video loss, video blind, abnormality & intelligent analytics.

1. Motion

Once enabled a motion detection alarm occurs when an object inside the detection area moves, based on the settings notification can be sent on email.


Click on [Config] > [Alarm] > [Motion] as shown below.



2. Video Blind

Once enabled a video blind alarm occurs when the camera view is blocked more than 60% by an object, based on the settings notification can be sent on email.

Click on [Config] > [Alarm] > [Video Blind] as shown below.

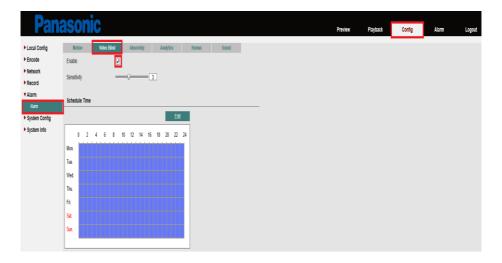

3. Abnormality

Once enabled abnormality alarm occurs in the event of Network Loss, IP Conflict detection. based on the settings notification can be sent on email.


Click on [Config] > [Alarm] > [Abnormality] as shown below.

Don	non	•				
r alli	asoni	U I				
► Local Config	Notion	Video Blind	Abnormity	Analytics	Human	Sound
• Encode	Abnormal type		Address Confi 🖌	ranjuo	1000	
Network	Enable	V				
Record	LINGWE				_	
▼ Alarm	Common					
Alarm	Send Email					
System Config		Save				
System Info						

4. Analytics

Once enabled an alarm occurs when the camera detects Area Intrusion, Line Crossing event in the defined region, based on the settings notification can be sent on email.


Click on [Config] > [Alarm] > [Analytics] as shown below.

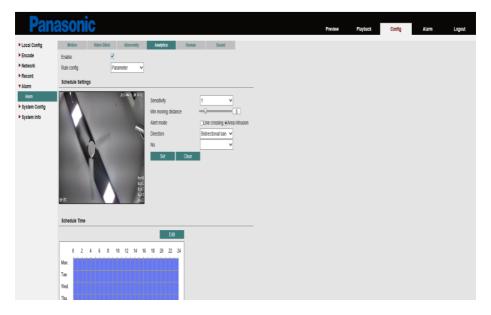

5. Human Detection

Once enabled an alarm occurs when the camera detects any human movement in the defined region, based on the settings notification can be sent on email.


Click on [Config] > [Alarm] > [Human] as shown below.

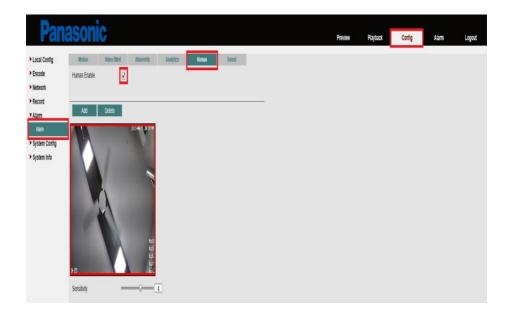

6. Sound

Once enabled, it detects abnormal sound from the camera, based on the settings notification can be sent on email.

Click on [Config] > [Alarm] > [Sound] as shown below.

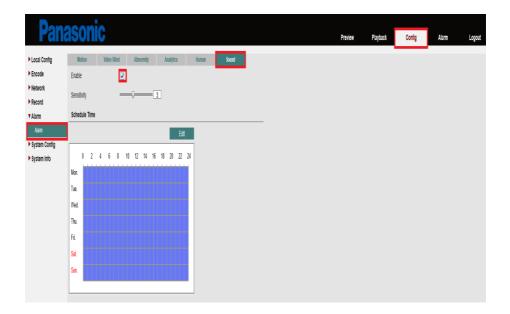


System Configuration

1. System Configuration provides an option to configure Machine/Camera name and auto logout time setting.


Note: HDD & Audio settings are not applicable for this product.

Click on [Config] > [System Config] > [System Config] as shown below.

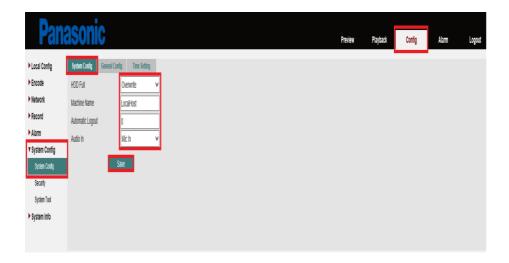

2. General Configuration provides an option to configure language, date & time format & video format.

Click on [Config] > [System Config] > [General Config] as shown below.

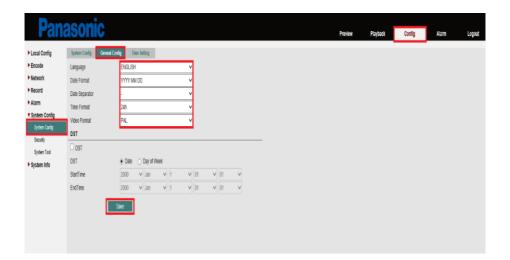

3. Time Settings provides an option to select time zone and configure time automatically using NTP server or manually (sync with local PC).

Click on [Config] > [System Config] > [Time Setting] as shown below.

Pana	asonic				Preview	Playback	Config	Alarm	Logout
Local Config	System Config General Co	alig Time Setting							
▶ Encode	Time Zone	(GMT+05:30) Madras, Mumba	i, New Delhi 🖌						
Network									
Record	Schedule Time								
► Alarm	ONTP								
▼ System Config	Service Address	time.windows.com							
System Conlig	NTP Port	123							
Security	Time Interval	10	min						
System Tool	e								
System info	Manual Time								
	Device Time	2023-06-24 11:57:16							
	Setting Time		Synchronize with PC Time						
	🔮 Sa	aved succeeded! Save							
			-						

Security

 Security provides an option to configure Onvif authentication (Password Requirement for the camera), RTSP authentication (Password Requirement for the camera) to basic or Digest.

Click on [Config] > [System Config] > [Security] as shown below.



System Tool

Users provides an option to configure additional users to login using 1. different permissions as allowed by the configuration. Only admin can add, delete, or modify additional users and their permissions.

Click on [Config] > [System Config] > [System Tool] > [User] as shown below.

Pan	251	onic	
Local Config	Us	er Auto Meintain System Too	6
▶ Encode	Add User Modily User Delete User Add Group Modily Group Delete Group		
Network	NO.	Usemame	Group Type
Record	1	admin	admin
▶ Alarm	2	guest	USEF
▼ System Config			
System Config			
Security			
System Tool			
System info			

2. Auto Maintain provides an option to reboot the camera automatically at desired interval & time.

We can also select to auto delete old files (Logs).

Click on [Config] > [System Config] > [System Tool] > [Auto Maintain] as shown below.

Pana	sonic	Preview	Playback	Config	Alarm	Logout
Local Config Local Config Config Network Record Alam System Config System Config Security System Tool System Tool System Info	User Auto Maintain Automatic Restart Every Tues all (01:00AM Automatically delete files Never Save					

3. System tools provide an option to configure reboot, factory default & default settings of the camera. It also provides option to import or export the camera configuration file.

Firmware upgrade option is also available,

- 1) local upgrade User can upgrade the camera by selecting the upgrade file using browse option from local PC drive.
- OTA (over the air) User can check the latest upgrade from the online server by clicking on check button and based on the upgrade available, user can upgrade to the latest firmware.
- Note: UPS backup is highly recommended to all the devices during firmware/software update.

Click on [Config] > [System Config] > [System Tool] > [System Tool] as shown below.

Pan	asonic	Preview	Playback	Config	Alarm	Logout
Local Config Encode Network Record Alarm System Config System Config Scurty System Info	User Auto Maintain System Tools Reboot		Playback	Config	Alarm	Logout
	Upgrade Upgrade Upgrade IIe Explain : The upgrade process takes 1-10 minutes. Do not turn off the power. After the upgra de is complete, it will restart automatically. OTA Online Upgrade Current Firmware Version is 1.03.05cc03cd.0226189.T085.2 Build Date 2023-05- Server Info Check	19 15:11:21 Upgrade				

System Information

1. Version information option displays like serial no, software build date, P2P status, & mac address.

Click on [Config] > [System information] > [System info] as shown below.

Pana	asonic	
► Local Config	Version Info	
▶ Encode	System Version	1.03.03cc03cd.02j26189.T085.2
Network	Web Version	AppWeb2.0
Record	Extended Information	62.v004r010c001b007
▶ Alarm	Release Date	2023-05-19 15:11:21
System Config	MAC Address	90 f4:21:40:07:9f
▼ System Info	Serial No.	No Used
System info	Cloud Status	0.Not connected
System Log		

System logs provide the option to display the logs related to system, configuration, alarm event & Account.
 This also provides an option to manually clear/delete the logs.

Click on [Config] > [System information] > [System Log] as shown below.

Pana	sonic				Preview	Playback	Config
cal Config	Loginfo						
code 1	lype	Al 🗸	Sear	rch			
twork g	Start time	2023-05-24 00:00:00	PrevP	lage			
cord g	End time	2023-06-25 00:00:00	NextP	ace			
-	No. Log time	Туре	Describe	·			
stem Info	1 2023-46-24 1053-42 2 2023-46-24 1053-42 3 2023-46-24 1053-54 4 2023-46-24 1053-55 5 2023-46-24 1053-56 6 2023-46-24 1053-56 7 2023-46-24 114-70 8 2023-46-24 114-55	Save system state Log in Log in Log in Log in Set true	2022-06-24 10 53 43 2023-06-24 10 53 43 User detail top thy CUII User admin top in thy CUIIP-Server (192 168 116) User admin top in thy CUIIP-Web (192 168 118) 2023-06-24 11 45:55 User admin top in thy CUIIP-Web (192 168 12) 2023-06-24 11 45:55	^			
1	9 2023-06-24 11 57.5* Log time Account Type Describe	Set time	2023-06-21 0927 51 Rem	Ove			

	<u>Do's & Don'ts</u>					
No. 1	Do's All electrical & electronic products are required to be handed over only to the Authorized recycler.	Don'ts The product should not be opened by the user himself/herself but only be authorised service personnel.				
2	The product should be handed over only to authorised recycler for disposal.	The product is not meant for resale to any unauthorised agencies/ scrap dealers/ kabariwalas.				
3	Keep the product in an isolated area after it become non-functional/ unrepairable so as to prevent its accidental breakage.	The product is not meant for mixing into household waste stream.				
4	Refer to operating instructions for handling of end of life products.	Do not keep any replaced spare part(s) from the product in an exposed area.				
5	Always dispose of products that have reached end of life at Panasonic Life Solutions India Authorized Service Centre.	Do not donate old electronic items to anybody. Do not dispose of your product in garbage bins along with municipal waste that ultimately reaches landfill.				
6	Wherever possible or instructed, separate the packaging material according to responsible waste disposal options and sorting for recycling.	Do not give e-waste to informal and unorganized sectors like Local Scrap Dealers/ Rag Pickers.				

Troubleshooting Points

When troubleshooting IP Camera, there are several points you can consider identifying and resolve issues. Here are some troubleshooting steps you can follow:

- 1. Check power and network connections:
 - Ensure that the camera is properly powered and connected to the network.
 - Verify that the power cable and network cables are securely connected and functioning.
- 2. Network configuration:
 - Confirm that the camera has the correct network settings, including IP address, subnet mask, gateway, and DNS configuration.
 - Ensure that the camera is connected to a stable and properly configured network.
- 3. Verify camera settings:
 - Review the camera settings, such as resolution, frame rate, compression, and encoding formats.
 - Ensure that the settings are appropriate for your needs and compatible with your network and viewing/recording devices.
- 4. Update firmware:
 - Check if there are any firmware updates available for your camera model.
 - Updating the firmware can address known issues, improve performance, and provide additional features.
 - Follow the manufacturer's instructions to update the firmware properly.
- 5. Reset to default settings:
 - If you are experiencing persistent issues, you can try resetting the camera to its default settings.

- This will restore the camera to its original configuration and may resolve certain problems.
- Note that this will erase any customized settings, so make sure to document them before performing a reset.
- 6. Network connectivity issues:
 - If the camera is having trouble connecting to the network or experiencing intermittent connection drops, check the network infrastructure.
 - Ensure that the router or switch is functioning correctly, and there are no network conflicts or IP address clashes.
- 7. Firewall and port forwarding:
 - If you are accessing the camera remotely or experiencing issues with remote viewing, check your firewall settings and port forwarding configuration.
 - Ensure that the necessary ports (such as HTTP port, RTSP port) are open and properly forwarded to the camera's IP address.
- 8. Check camera compatibility:
 - Verify that the camera is compatible with the software or recording device you are using.
 - Ensure that you have the appropriate drivers, plugins, or software versions required to access and view the camera's feed.
- 9. Monitor network bandwidth:
 - High-resolution cameras can consume significant network bandwidth. If you are experiencing network congestion or poor camera performance, monitor the network bandwidth usage and consider optimizing the camera's settings or upgrading your network infrastructure if necessary.

If you've gone through these troubleshooting steps and are still experiencing issues, it may be helpful to consult Panasonic technical support.

TECHNICAL SPECIFICATIONS

CAMERA	
Image Sensor	1/2.9" 5MP Progressive CMOS Sensor
Effective Pixels	2880x1620
Minimum Illumination	Color: 0.01 Lux @ (F1.2, AGC ON), B/W: 0 Lux with IR
S/N Ratio	>60dB
IR Distance	IR Distance 20m
Shutter Speed	Auto, Manual Mode: 1/50 sec~ 1/10000 sec
WDR	80db
IR On/Off Control	Auto/ Manual
IR LEDs	15 IR LED, IR Distance 20m
LENS	
Lens Type	Fixed
Mount Type	M12
Focal Length	3.6mm Lens
Max. Aperture	F1.2
Angle of View	Horizontal Angle- 81°, Vertical Angle- 60°, Diagonal Angle- 92°
Focus Control	Fixed
VIDEO	
Compression	H.265+, H.265, H.264
Streaming Capability	2 Streams
Resolution	5MP (2880X1620)/4MP (2560X1440)/ 2MP (1920×1080)/ D1(704×576)/ VGA (640×480)/ CIF (352×240)
Streams	Mainstream: 5MP (2880X1620) @20FPS/ 4MP (2560x1440)/ 2MP (1920×1080) @25/30FPS, Sub Stream: D1 (704x576)/ VGA (640x480)/CIF (352×240) @15/25FPS
Frame Rate	1 ~ 30fps
Bit Rate Control	CBR/VBR
Bit Rate	221-8192Kbps
Day/Night	Automatic/ Black and white
Exposure Mode	Automatic/Manual-(1/50-1/10000)

BLC Mode	On/Off
Profiles	Auto, Low Light Priority, High Light Priority
Noise Filter	Auto/ 1-5 Levels
Digital Zoom	Supports up to 64X (Area selection with Mouse)
Anti-Flicker	On/Off
AE reference	1-255 Level
AE Sensitivity	1-10 Level
Flip	Off / On
IR reverse	Support
Mirror	Off / On
Text Overlay	Title, Date & Time, Weekday
Privacy Masking	Yes (4 zones)
EVENTS	
Motion Detection	22X18 Zones
Video Blind	Support
Abnormality	No Disk, Disk Error, Disk No Space, Network Cable Disconnected, IP Address Conflict
Smart Functions	Intrusion Detection, Line Crossing Detection, Human Detection
Event Actions	Record alarm, Email link, Upload FTP, Snapshot
PAN-TILT	
3-Axis Adjustment (Bracket)	Pan:0° ~360°; Tilt:0° ~90°; Rotation:0° ~360°
SAFETY	
ONVIF Authentication	ON, OFF
RTSP Authentication	Digest, None
AUDIO	
Compression	G.711A/U
Talk Back	NA
NETWORK	
Ethernet	10/100M adaptive Ethernet interface
Protocol	TCP/IP, IPv4, ICMP, HTTP, HTTPS, HTTP-Base64, HTTP- Digest, DHCP, DNS, DDNS, RTP, RTSP, RTCP, NTP, UPnP, SMTP, FTP, IGMP, P2P,IP Filter, Wi-Fi
Interoperability	ONVIF Profile S & T
Max. User Access	30 Users

Edge Storage	Local PC for instant recording, one clicks Snapshot, one clicks triple Snapshot
Web Viewer	IE, Chrome, Firefox, Safari
Management Software	Panasonic VMS
Smart Phone	Supports Panasonic PHS for iPhone, Android
INTERFACE	
Audio	1 Input

Notes:

- 1. Design and specification are subjected to change without notice.
- 2. Weight and dimensions shown herein are approximate.
- 3. The Graphics in this manual are only for reference.
- 4. Your camera may be slightly different from that shown in this manual.

Panasonic Life Solutions India Pvt. Ltd. http://www.panasonic.com