

## Wi-Fi® QUICK SETUP GUIDE

Thank you for purchasing this product.  
Please read these instructions carefully before using this product,  
and save this manual for future use.

TQZJ760-1  
F1216YM2037

- This guide describes how to connect this system to a network while starting up and operating the Panasonic Music Streaming app.
- The operations and on-screen display items, etc. of the app "Panasonic Music Streaming" are subject to change.  
For the latest information, visit <http://panasonic.jp/support/global/cs/audio/app/>  
(This site is in English only.)

The Wi-Fi CERTIFIED™ Logo is a certification mark of Wi-Fi Alliance®.  
The Wi-Fi Protected Setup™ Identifier mark is a certification mark of Wi-Fi Alliance®.  
"Wi-Fi®" is a registered trademark of Wi-Fi Alliance®.  
"Wi-Fi Protected Setup™", "WPA™", and "WPA2™" are trademarks of Wi-Fi Alliance®.  
Google Play and Android are trademarks of Google Inc.  
App Store is a service mark of Apple Inc.  
All other trademarks are trademarks of their respective owners.



### 1 Download the app

Download the free "Panasonic Music Streaming" app from the store on your smartphone/tablet.




iOS : App Store




Android : Google Play™




### 2 Open the app and follow the on-screen instructions

#### Select HC1020.


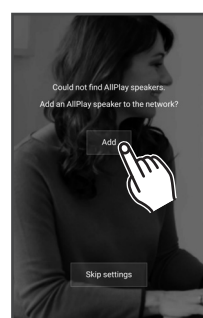


e.g.


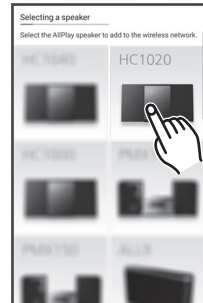


#### Connect the AC mains lead.

**NOTE:**  
Do not connect the LAN cable.

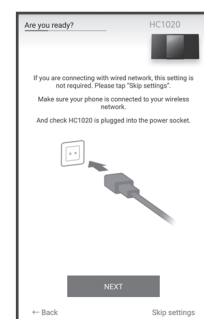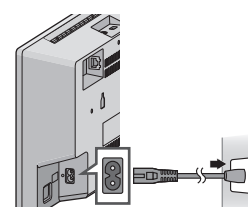



#### Turn on the unit. Enter network setup for the unit by following the steps on app screen.

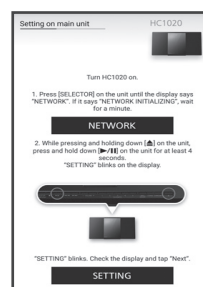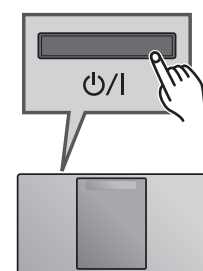
• Depending on the screen size of your smartphone/tablet, you may need to scroll to the bottom for any remaining steps.  
After doing the last step, "SETTING" will blink on the unit's display.

#### iOS : Follow the steps on app screen.

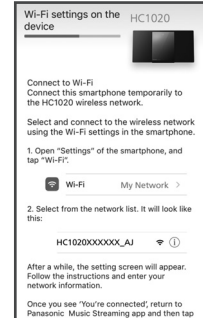


• "HC1020XXXXX\_AJ" can sometimes take 1 minute to appear in the network list.  
• Depending on the screen size of your smartphone/tablet, you may need to scroll to the bottom for any remaining steps.

#### Android : Enter the password of your wireless network.

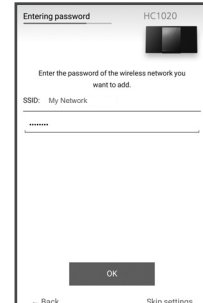

### 3 After a short wait ...you're connected!

The network indicator lights up solid.

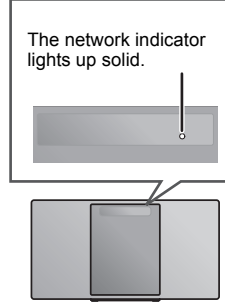

After a short wait, your smartphone/tablet should be automatically reconnected to your Wi-Fi network. In case you are not reconnected automatically, please re-select your Wi-Fi network from the settings / Wi-Fi settings menu on your device.

### Further Support

For more information and other network setting methods, refer to the Operating Instructions. If you require further help, please visit <http://panasonic.jp/support/global/cs/audio/> (This site is in English only.)