




**VIERA**

**Panasonic®**

Operating Instructions  
LCD TV

Model No. **TH-L19X10AK**  
**TH-L19X10AP**  
**TH-L19X10AS**

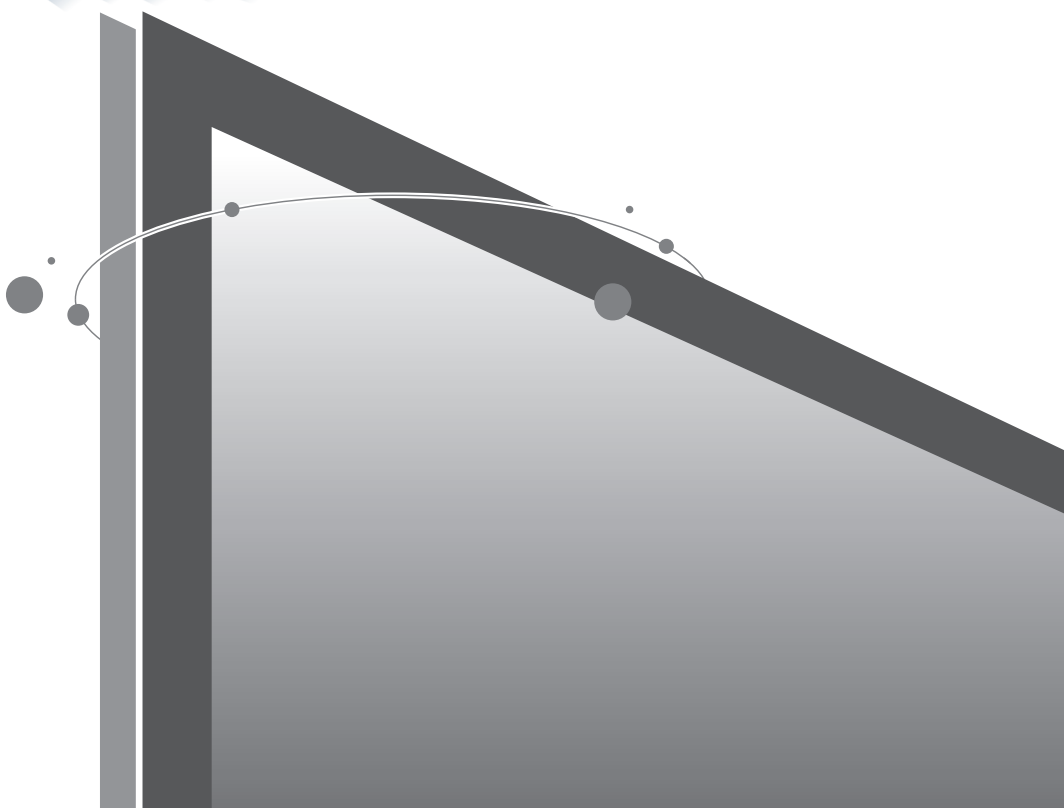

**VIERA**  
IMAGE VIEWER



**HDMI™**  
HIGH-DEFINITION MULTIMEDIA INTERFACE

**VIERA**  
Link

**DVB®**

**HDTV**

**DOLBY**  
DIGITAL

**AVCHD™**



Thank you for purchasing this Panasonic product.  
Please read these instructions before operating your set and retain them for future reference.  
The images shown in this manual are for illustrative purposes only.


English

RT  
TQB4GC0338

Turn your own living room into a movie theatre!

## Experience an amazing level of multi-

Receive digital terrestrial services using an integrated Digital TV tuner  
Sharp pictures with HDMI terminal  
Create home theatre and DVD recorder link-ups with "VIERA Link"  
without complicated settings!

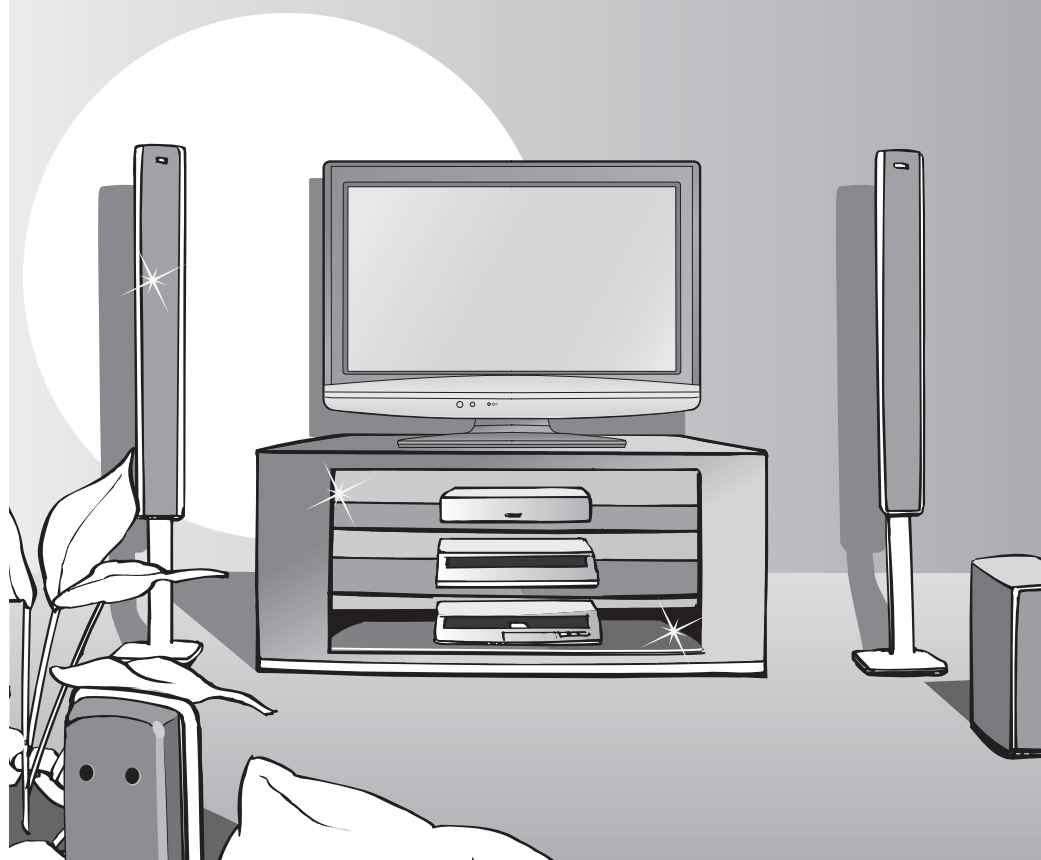


DVB and the DVB logos are trademarks of the DVB Project.

### Notice about Digital TV Functions

- The MPEG-4 AVC feature was designed to specifications as we know them today. This specification may be subject to future changes beyond our control that may not guarantee the decoding of such services.

July 2009

## media excitement

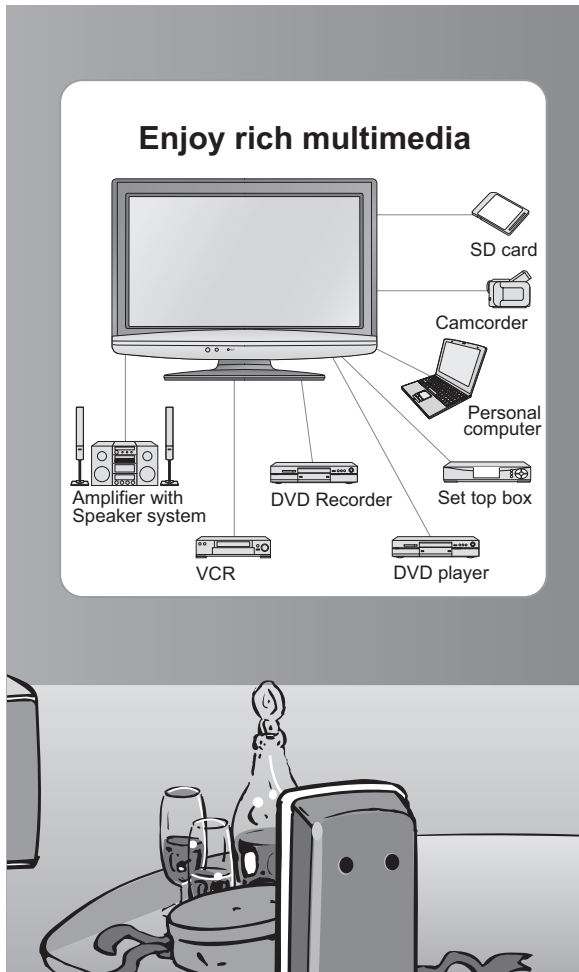

## Contents

### Be Sure to Read

- Safety Precautions .....4  
(Warning / Important Installation Notices)
- Maintenance.....6
- Licence .....6

### Quick Start Guide

- Accessories / Options ..... 7
- Identifying Controls.....9
- Basic Connection.....11
- Auto Tuning ..... 12

### Basic Features

- Watching TV ..... 14
- Using TV Guide ..... 17
- Viewing Teletext.....18
- Watching Videos and DVDs .....20

### Advanced Features

- How to Use Menu Functions .....22  
(picture, sound quality, etc.)
- Input Labels.....26
- Digital TV Settings.....27
- Editing Channels .....28
- Tuning Channels ..... 30
- Restore Settings (Shipping Condition) ..32
- Displaying PC Screen on TV .....33
- HDMI Functions .....34
- Viewing from SD Card  
(VIERA IMAGE VIEWER).....35
- VIERA Link "HDAVI Control™" ..... 38
- VIERA Tools .....45
- External Equipment.....46

### Technical Features

- Technical Information .....48
- FAQs .....51
- Specifications .....55
- WARRANTY .....56


# Safety Precautions

## Warning

### Handling the mains plug and lead

- Insert the mains plug fully into the socket outlet. If the mains plug is loose, it could generate heat and cause fire.
- Ensure that the mains plug is easily accessible.
- Do not touch the mains plug with a wet hand. This may cause electrical shock.
- Do not damage the mains lead. A damaged lead may cause fire or electrical shock.
  - Do not move the TV with the lead plugged in the socket outlet.
  - Do not place a heavy object on the lead or place the lead near a high-temperature object.
  - Do not twist the lead, bend it excessively, or stretch it.
  - Do not pull on the lead. Hold onto the mains plug body when disconnecting lead.
- Do not use a damaged mains plug or socket outlet.

If you find any abnormality, remove the mains plug immediately!

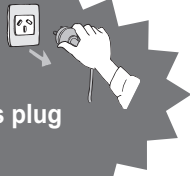

AC 220-240 V, 50/60 Hz



- Mains plug types vary between countries.

### Power Source

- This TV is designed to operate on AC 220-240 V, 50/60 Hz

### Do not remove covers

#### NEVER modify the TV yourself

High-voltage components may cause serious electrical shock.

- Have the TV checked, adjusted, or repaired at your local Panasonic dealer.

### Keep liquids away from the TV

- To prevent damage which may result in fire or shock hazard, do not expose this appliance to dripping or splashing.
- Do not place containers with water (flower vase, cups, cosmetics, etc.) above the TV, including on shelves above, etc.

### Do not expose to direct sunlight and other sources of heat

- Avoid exposing the TV to direct sunlight and other sources of heat. To prevent fire never place any type of candle or naked flame on top or near the TV.

### Avoid exposing the TV to high atmospheric moisture (such as tropical rain) or night time dew condensation

- This TV is designed and manufactured for indoor use only.

### Do not place foreign objects inside the TV

- Do not allow any objects to drop into the TV through the air vents. Fire or electrical shock may result.

### Do not place the TV on sloped or unstable surfaces

- The TV may fall off or tip over.

### Use only the dedicated pedestals / mounting equipment

- Using an unapproved pedestal or other fixtures may make the TV unstable, risking injury. Be sure to ask your local Panasonic dealer to perform setup.
- Use approved pedestals / mounts (p. 7).

### Do not allow children to handle SD card

- As with a small object, SD card can be swallowed by young children. Please remove SD card immediately after use and store out of reach of children.

## Important Installation Notices

### Install TV on a stable surface

If a television is not positioned in a sufficiently stable location, it can be potentially hazardous due to falling.

Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television.
- Only using furniture that can safely support the television.
- Ensuring the television is not overhanging the edge of the supporting furniture.
- Not placing the television on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television to a suitable support.
- Not standing the televisions on cloth or other materials placed between the television and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television or its controls.

### When cleaning the TV, remove the mains plug

- Cleaning an energized TV may cause electrical shock.


### When the TV is not going to be used for a long period of time, remove the mains plug

- This TV will still consume some power even in the Off mode, as long as the mains plug is still connected to a live socket outlet.

### Transport only in upright position

### Allow sufficient space around the TV for radiated heat

Minimum distance

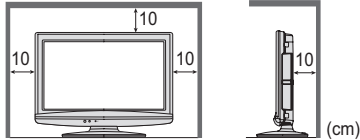

- When using the pedestal, keep the space between the bottom of the TV and the surface where the TV is set.
- In case of using Wall-hanging bracket, follow the manual of it.

### Do not block the rear air vents

- Blocked ventilation by newspapers, table cloths, curtains, etc. may cause overheating, fire or electrical shock.

### Do not expose your ears to excessive volume from the headphones

- Irreversible damage can be caused.

### Auto power standby function

- If no signal is received and no operation is performed in Analogue TV mode for 30 minutes, the TV will automatically go to standby mode.

### Keep the TV away from these types of equipment

- Electronic equipment  
In particular, do not place video equipment near the TV. Electromagnetic interference may distort images / sound.
- Equipment with an infrared sensor  
This TV also emits infrared rays. This may affect operation of other equipment.

# Maintenance

First, remove the mains plug from the socket outlet.

## Display panel

Regular care: Gently wipe the surface clean of dirt by using a soft cloth.

Major contamination: Wipe the surface clean using a soft cloth dampened with clean water or diluted neutral detergent (1 part detergent to 100 parts water). Then, using a soft dry cloth, evenly wipe the surface clean until it is dry.

### Caution

- The surface of the display panel has been specially treated and may be easily damaged. Do not tap or scratch the surface with your fingernail or other hard object.
- Take care not to subject the surface to insect repellent, solvent, thinner, or other volatile substances. This may degrade surface quality.

## Cabinet, Pedestal

Regular care: Wipe the surface clean using a soft dry cloth.

Major contamination: Dampen a soft cloth with clean water or water containing a small amount of neutral detergent. Then, wring the cloth and wipe the surface clean with it. Finally, wipe the surface clean with a dry cloth.

### Caution

- Take care not to subject the TV's surfaces to detergent. A liquid inside the TV could lead to product failure.
- Take care not to subject surfaces to insect repellent, solvent, thinner, or other volatile substances. This may deteriorate the surface by peeling the paint.
- Do not allow the cabinet and pedestal to make contact with a rubber or PVC substance for a long time.

## Mains plug

Wipe the mains plug with a dry cloth at regular intervals. Moisture and dust may lead to fire or electrical shock.

# Licence

- DVB and the DVB logos are trademarks of the DVB Project.
- VGA is a trademark of International Business Machines Corporation.
- S-VGA is a registered trademark of the Video Electronics Standard Association.
- SDHC Logo is a trademark.
- HDMI, the HDMI Logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.
- HDAVI Control™ is a trademark of Panasonic Corporation.
- "AVCHD" and the "AVCHD" logo are trademarks of Panasonic Corporation and Sony Corporation.
- Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.
- Macintosh is a trademark of Apple Inc.

Even if no special notation has been made of company or product trademarks, these trademarks have been fully respected.

This product is licensed under the AVC patent portfolio license for the personal and non-commercial use of a consumer to (i) encode video in compliance with the AVC Standard ("AVC Video") and/or (ii) decode AVC Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed to provide AVC Video. No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, LLC. See <http://www.mpegla.com>.

# Accessories / Options

## Standard accessories

Check that you have the accessories and items shown

 
- Remote Control
- N2QAYB000352  
or
  - N2QAYB000401



- Batteries for the Remote Control (2)
- R6 (AA)



Pedestal

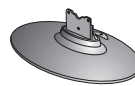

Assembly screw for Pedestal (3)



M4


- Operating Instructions with Warranty Statement
- Fall-prevention parts → p. 8

### Caution

This product contains possibly dangerous parts (such as plastic bags), that can be breathed in or swallowed by young children accidentally. Keep these parts out of reach of young children.

## Optional accessories

- Wall-hanging bracket
- TY-WK23LR2W


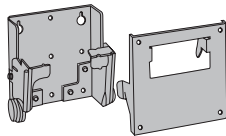


Please contact your nearest Panasonic dealer to purchase the recommended wall-hanging bracket. For additional details, please refer to the wall-hanging bracket installation manual.

### WARNING!

- Failure to use a Panasonic bracket or choosing to mount the TV yourself will be done at the risk of the consumer. Any damage resulting from not having a professional installer mount your TV will void your warranty.
- Always be sure to ask a qualified technician to carry out set-up. Incorrect fitting may cause equipment to fall, resulting in injury and product damage.
- Do not mount the TV directly below ceiling lights (such as spotlights, floodlights or halogen lights) which typically give off high heat. Doing so may warp or damage plastic cabinet parts.

## Installing remote's batteries

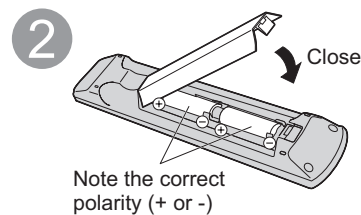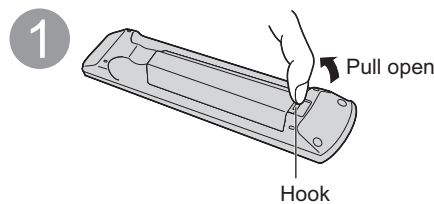


### Caution

- Incorrect installation may cause battery leakage and corrosion, resulting in damage to the remote control.
- Do not mix old and new batteries.
- Do not mix different battery types (such as alkaline and manganese batteries).
- Do not use rechargeable (Ni-Cd) batteries.
- Do not burn or breakup batteries. Batteries must not be exposed to excessive heat such as sunshine, fire or the like.

### Attaching the pedestal to TV

Foam mat or thick soft cloth

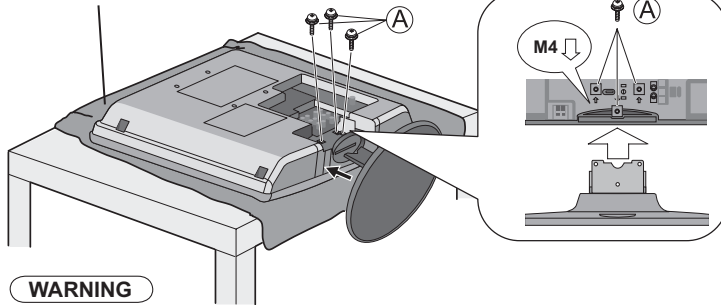

- Fix securely with assembly screws (A). (Total 3 screws)
- Tighten screws firmly.

#### WARNING

- Always be sure to ask a qualified technician to carry out set-up.
  - Incorrect fitting may cause equipment to fall, resulting in injury and product damage.
- Do not disassemble or modify the pedestal.**
- Otherwise the TV may fall over and become damaged, and personal injury may result.

#### Caution


- Do not use any other TV and displays.**
- Otherwise the TV may fall over and become damaged, and personal injury may result.
- Do not use the pedestal if it becomes warped or physically damaged.**
- If you use the pedestal when it is physically damaged, personal injury may result. Contact your nearest Panasonic Dealer immediately.
- During set-up, make sure that all screws are securely tightened.**
- If sufficient care is not taken to ensure screws are properly tightened during assembly, the pedestal will not be strong enough to support the TV, and it might fall over and become damaged, and personal injury may result.

### Preventing the TV from falling over

This TV could fall over if it's pushed, pulled or knocked down. We therefore recommend the TV is secured to the base as illustrated.


- This measure is designed to reduce the risk of injury from a falling TV. However, it cannot guarantee protection in all cases.

#### Fall-prevention parts

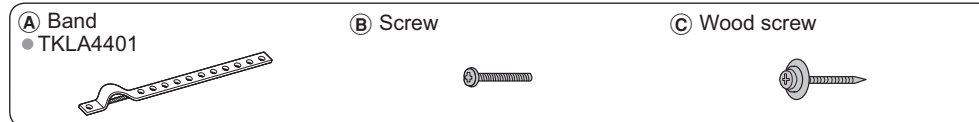

#### Securing to a base

Fix pedestal and base together with band.

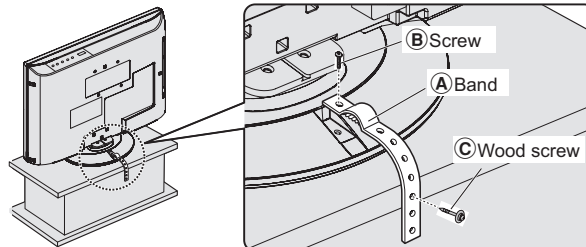


This image is for illustrative purposes only.




**Tilt the LCD panel to your desired angle**

 The LCD panel can be tilted between 3° forward and 8° backward.

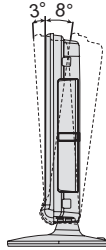


# Identifying Controls

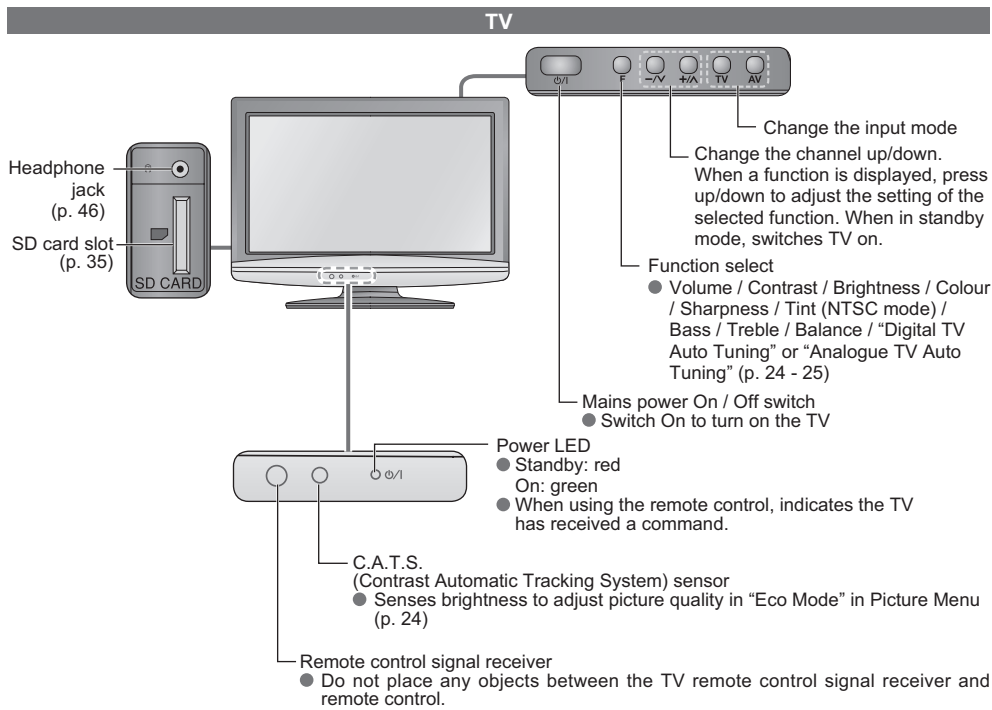

# Identifying Controls

## Remote Control

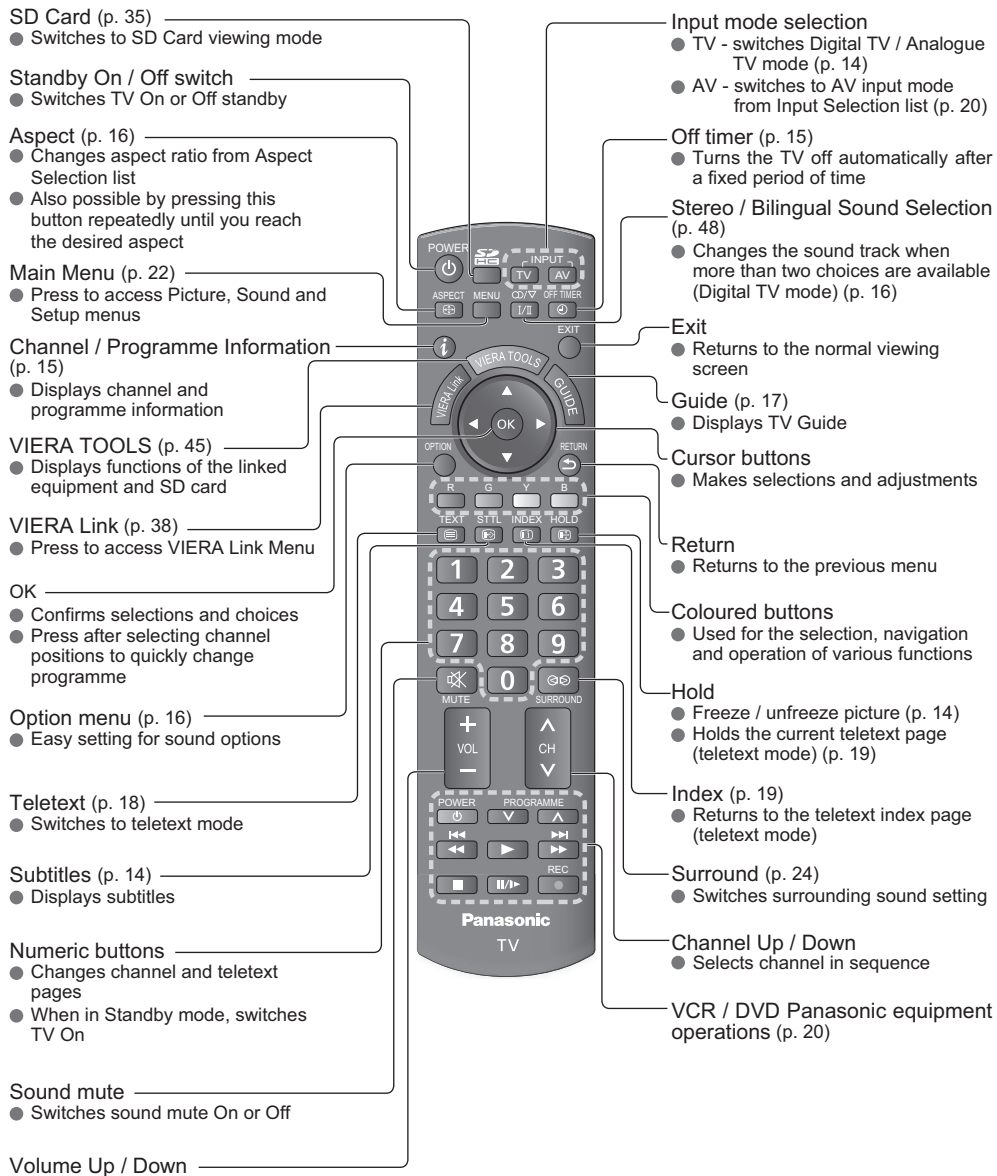


# Basic Connection

External equipment and cables shown are not supplied with this TV.  
Please ensure that the TV is disconnected from the mains socket before attaching or disconnecting any leads.  
When disconnecting the mains lead, be absolutely sure to disconnect the mains plug at the socket outlet first.


## Connecting aerial

TV only

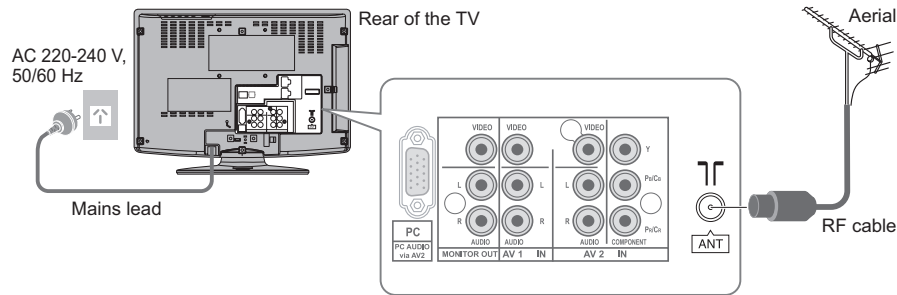

## Connecting DVD Recorder / VCR

TV, DVD Recorder or VCR

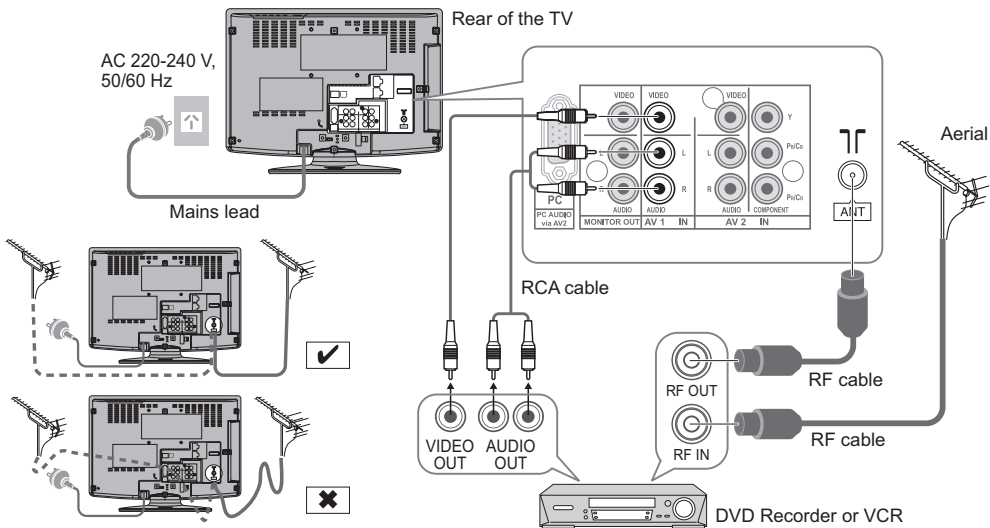

If the antenna is placed in the wrong location, interference might happen.

### Note

- Do not put the RF cable close to the mains lead to avoid noise.
- Do not place the RF cable under the TV.
- To obtain optimum quality picture and sound, an Aerial, the correct cable (75  $\Omega$  coaxial) and the correct terminating plug are required.
- If a communal Aerial system is used, you may require the correct connection cable and plug between the wall Aerial socket and the TV.
- Your local Television Service Centre or dealer may be able to assist you in obtaining the correct Aerial system for your particular area and the accessories required.
- Any matters regarding Aerial installation, upgrading of existing systems or accessories required, and the costs incurred, are the responsibility of you, the Customer.
- VIERA Link connection  $\rightarrow$  p. 38
- Read the manual of the equipment too.

# Auto Tuning

Search and store TV channels automatically.

These steps are not necessary if the setup has been completed by your local dealer.

- 1 Plug the TV into mains socket and switch On**

You can now use the remote control to turn On the TV or switch the TV to standby mode. (Power LED: On)
- 2 Select your area**

Select State / Territory

Victoria
New South Wales / Australian Capital Territory
Queensland
South Australia
Western Australia
Northern Territory
Tasmania

① select  
② set
- 3 Select Auto Scan Type**

Auto Scan Type

All Channels
Digital TV Channels only

select
- 4 Start Auto Tuning**

OK

**Auto Tuning**

Channel No.	Channel Name	System	Standard
01	ABC	Digital TV	ISDB-T
02	BBC Radio Wales	Digital TV	ISDB-T
03	ITV	Digital TV	ISDB-T
04	Cartoon Network	Digital TV	ISDB-T
05	1	Terrestrial TV	-
06	2	Terrestrial TV	-
07	3	Terrestrial TV	-
08	4	Terrestrial TV	-
09	5	Terrestrial TV	-
10	6	Terrestrial TV	-
11	7	Terrestrial TV	-
12	8	Terrestrial TV	-
13	9	Terrestrial TV	-
14	10	Terrestrial TV	-
15	11	Terrestrial TV	-
16	12	Terrestrial TV	-
17	13	Terrestrial TV	-
18	14	Terrestrial TV	-
19	15	Terrestrial TV	-
20	16	Terrestrial TV	-
21	17	Terrestrial TV	-
22	18	Terrestrial TV	-
23	19	Terrestrial TV	-
24	20	Terrestrial TV	-
25	21	Terrestrial TV	-
26	22	Terrestrial TV	-
27	23	Terrestrial TV	-
28	24	Terrestrial TV	-
29	25	Terrestrial TV	-
30	26	Terrestrial TV	-
31	27	Terrestrial TV	-
32	28	Terrestrial TV	-
33	29	Terrestrial TV	-
34	30	Terrestrial TV	-
35	31	Terrestrial TV	-
36	32	Terrestrial TV	-
37	33	Terrestrial TV	-
38	34	Terrestrial TV	-
39	35	Terrestrial TV	-
40	36	Terrestrial TV	-
41	37	Terrestrial TV	-
42	38	Terrestrial TV	-
43	39	Terrestrial TV	-
44	40	Terrestrial TV	-
45	41	Terrestrial TV	-
46	42	Terrestrial TV	-
47	43	Terrestrial TV	-
48	44	Terrestrial TV	-
49	45	Terrestrial TV	-
50	46	Terrestrial TV	-
51	47	Terrestrial TV	-
52	48	Terrestrial TV	-
53	49	Terrestrial TV	-
54	50	Terrestrial TV	-
55	51	Terrestrial TV	-
56	52	Terrestrial TV	-
57	53	Terrestrial TV	-
58	54	Terrestrial TV	-
59	55	Terrestrial TV	-
60	56	Terrestrial TV	-
61	57	Terrestrial TV	-
62	58	Terrestrial TV	-
63	59	Terrestrial TV	-
64	60	Terrestrial TV	-
65	61	Terrestrial TV	-
66	62	Terrestrial TV	-
67	63	Terrestrial TV	-
68	64	Terrestrial TV	-
69	65	Terrestrial TV	-
70	66	Terrestrial TV	-
71	67	Terrestrial TV	-
72	68	Terrestrial TV	-
73	69	Terrestrial TV	-
74	70	Terrestrial TV	-
75	71	Terrestrial TV	-
76	72	Terrestrial TV	-
77	73	Terrestrial TV	-
78	74	Terrestrial TV	-
79	75	Terrestrial TV	-
80	76	Terrestrial TV	-
81	77	Terrestrial TV	-
82	78	Terrestrial TV	-
83	79	Terrestrial TV	-
84	80	Terrestrial TV	-
85	81	Terrestrial TV	-
86	82	Terrestrial TV	-
87	83	Terrestrial TV	-
88	84	Terrestrial TV	-
89	85	Terrestrial TV	-
90	86	Terrestrial TV	-
91	87	Terrestrial TV	-
92	88	Terrestrial TV	-
93	89	Terrestrial TV	-
94	90	Terrestrial TV	-
95	91	Terrestrial TV	-
96	92	Terrestrial TV	-
97	93	Terrestrial TV	-
98	94	Terrestrial TV	-
99	95	Terrestrial TV	-
100	96	Terrestrial TV	-

Auto Tuning will start to search for TV channels and store them. The sorted channel order depends upon the TV signal, the broadcasting system and reception conditions.
- 5 Select the viewing environment**

Please select your viewing environment.

Home	Shop
------	------

• "Home" is the recommended mode for viewing at home. Select "Home" for optimal picture / power consumption. "Shop" is for in-store display. Home: "Viewing Mode" is set as "Normal". (p. 24) Shop: "Viewing Mode" is set as "Dynamic". (p. 24)

① select  
② set

**Auto Tuning is complete**

**If you select "Shop" by mistake**

Return to the "Home" or "Shop" Selection menu

Select "Home"

① select  
② set


**Auto Tuning is complete**

• Once you press the OK button in this menu, the TV is set to Shop mode. Please reset all settings to set to "Home" mode. ➔ "Shipping Condition" (p. 32)

### Using the On-Screen Displays





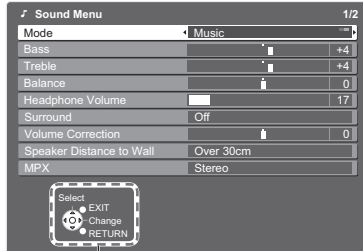

Many features available on this TV can be accessed via the On-Screen Display menu.

**ON-SCREEN HELP Instructions box** (example: Sound Menu)



On-screen operation guide


#### How to use remote control

-  MENU Open the main menu
-  Move the cursor / select the menu
-  Move the cursor / adjust levels / select from a range of options
-  Access the menu / store settings after adjustments have been made or options have been set
-  Return to the previous menu
-  Exit the menu system and return to the normal viewing screen

#### Note

- To edit channels → “Editing Channels” (p. 28)
- If tuning have failed → “Tuning Channels” (p. 30).
- To reset all settings → “Shipping Condition” (p. 32)
- If you turned the TV Off during Standby mode last time, the TV will be in Standby mode when you turn the TV On with Mains power On / Off switch.

# Watching TV

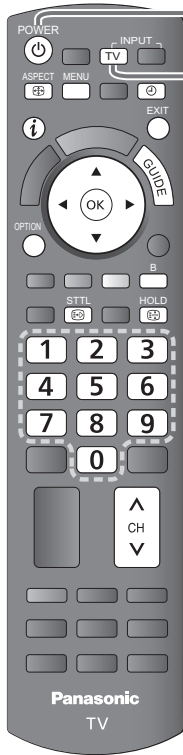

1

## Turn power on

POWER



- Mains power On / Off switch should be On. (p. 9)

2

## Select Digital TV or Analogue TV mode

TV

 
- Also possible to select the mode using the TV button on the top panel of the TV. (p. 9)



Information banner appears whenever you select a channel  
● For details → p. 15

3

## Select a channel


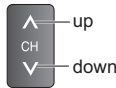


up  
or  
down



- To select the two or three-digit channel number, e.g. 39  
→ 3 → 9 (in a short time)
- If one or two-digit channel number  
→ OK → quickly changes the channel

 - To select from the Channel List → OK

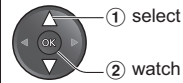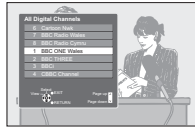

① select a channel  
② watch

### Note

- When the TV is switched to standby, there will be a clicking sound after a short delay. This is normal.

### Select a channel using information banner (p. 15)

Possible to confirm the programme name before selecting channels.

Display information banner if it is not displayed



While the banner is displayed, select a channel

① select a channel

- Possible to set display timeout in "Banner Display Timeout" (p. 25).

② watch

### Select a channel using TV Guide (Digital TV mode) (p. 17)

Possible to confirm the TV Guide (EPG) before selecting channels.

Display TV Guide



Select a channel

① select a channel

② watch

### Other useful functions

Hold

HOLD



Freeze / unfreeze picture

Display subtitles

STTL



Display / hide subtitles (if available)

**Other useful functions**

### Display information banner

**Display information banner**

- Also appears when changing channels

Programme name	Channel	Current time
1 TEN Digital	Coronation Street	10:30am
9:00am - 11:00 am	Now	All Digital Channels
		Select favourites
		Software update

Digital TV: Programme Start / Finish time (example)  
 Analogue TV: Channel status

**Features available / Message meanings**

Sound mute On	<b>Bad signal</b> Poor TV signal quality (Digital TV mode)	Teletext service available
Audio mode (p. 48) (Analogue TV mode)	<b>Encrypted</b> Scrambled programme (Digital TV mode)	Multiple image or audio available (Digital TV mode)
<b>Rating:</b> Rating information (Digital TV mode) (p. 48)	Subtitle service available (Digital TV mode)	<b>1 - 90</b> Off Timer remaining time ● For settings ➔ See below

- To confirm another tuned channel name ➔
- To select a favourite list (Digital TV mode) ➔
- Information on the next programme (Digital TV mode) ➔
- To watch the programme listed in the banner ➔
- To hide ➔
- To set display timeout ➔ "Banner Display Timeout" (p. 25)
- Extra information (press again to hide the banner) (Digital TV mode) ➔

---

### Off Timer

**Turn the TV off automatically after a fixed period of time (Off / 15 / 30 / 45 / 60 / 75 / 90 minutes)**

OFF TIMER Press repeatedly to set the time or MENU

Setup Menu

- Off Timer
- Digital TV Tuning Menu
- Display Settings
- VIERA Link Settings
- System Menu
- Other Settings

Select "Off Timer" and set the time

- To cancel ➔ Set to "0", set to "Off" or turn the TV off.
- To display the remaining time ➔ Information banner
- When the remaining time is within 3 minutes, the remaining time will flash on screen.

---


Adjust the standard time <b>Region Select</b>	Adjust for Summer Time <b>Daylight Saving Time</b>																						
Select the region where you live to adjust the standard time. <ul style="list-style-type: none"> <li>The time contained in the broadcast signal is UTC (Universal Time coordinated) formally known as GMT (Greenwich Mean Time).</li> </ul>	Select time offset from the standard time for Summer Time. <ul style="list-style-type: none"> <li>Normally select "Auto".</li> <li>If there is a gap between displayed time and actual time, set this function.</li> </ul>																						
<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>Region</th> <th>Standard Time</th> <th>Daylight Saving Time: Auto (During Summer Time)</th> </tr> </thead> <tbody> <tr> <td>NSW / ACT</td> <td rowspan="2">+10:00</td> <td rowspan="2">+11:00</td> </tr> <tr> <td>Victoria</td> </tr> <tr> <td>Queensland</td> <td>+10:00</td> <td></td> </tr> <tr> <td>South Australia</td> <td>+9:30</td> <td>+10:00</td> </tr> <tr> <td>Western Australia</td> <td>+8:00</td> <td>+9:00</td> </tr> <tr> <td>Northern Territory</td> <td>+9:30</td> <td></td> </tr> <tr> <td>Tasmania</td> <td>+10:00</td> <td>+11:00</td> </tr> </tbody> </table>	Region	Standard Time	Daylight Saving Time: Auto (During Summer Time)	NSW / ACT	+10:00	+11:00	Victoria	Queensland	+10:00		South Australia	+9:30	+10:00	Western Australia	+8:00	+9:00	Northern Territory	+9:30		Tasmania	+10:00	+11:00	
Region	Standard Time	Daylight Saving Time: Auto (During Summer Time)																					
NSW / ACT	+10:00	+11:00																					
Victoria																							
Queensland	+10:00																						
South Australia	+9:30	+10:00																					
Western Australia	+8:00	+9:00																					
Northern Territory	+9:30																						
Tasmania	+10:00	+11:00																					

● These items can be set from "Other settings" in Setup Menu. (p. 23, 25)

# Watching TV

## Other useful functions

Display the selectable settings for the current programme


**OPTION**  **Check or change the current programme status instantly**

**Audio selection** (Digital TV mode)  
Allows you to select between alternative language for sound tracks (if available)

**MPX** (Analogue TV mode)  
→ Sound Menu (p. 24)

**Note**

- Also possible to change the settings in Menu list (p. 24 and p. 25).




② change  
① select

Change the settings


**Volume Correction**  
Adjusts volume of individual programme or input mode


---









Change aspect ratio

 
**ASPECT**  **Change the aspect ratio**

Enjoy viewing the picture at its optimum size and aspect.

**ASPECT**  Display Aspect Selection list

● To change the mode using the ASPECT button only  
→  Press repeatedly until you reach the desired mode

<p><b>16:9</b></p>  <p>Directly displays the image at "16:9" without distortion (anamorphic).</p>	<p><b>14:9</b></p>  <p>Displays the image at the standard "14:9" without distortion.</p>	<p><b>Just</b></p>  <p>Displays a "4:3" image full-screen. Stretching is only noticeable at the left and right edges.</p>
<p><b>4:3</b></p>  <p>Displays the image at the standard "4:3" without distortion.</p>	<p><b>4:3 Full</b></p>  <p>Displays a "4:3" image enlarged horizontally to fit the screen.</p> <p>● HD signal only</p>	<p><b>Zoom1</b></p>  <p>Displays a "16:9" letterbox or "4:3" image without distortion.</p>
<p><b>Zoom2</b></p>  <p>Displays a "16:9" letterbox (anamorphic) image full-screen without distortion.</p>	<p><b>Zoom3</b></p>  <p>Displays a "2.35:1" letterbox (anamorphic) image full-screen without distortion. At "16:9", displays the image at its maximum (with slight enlargement).</p>	



② store  
① select

While the list is displayed, select the mode

**Note**

- Only "16:9" and "4:3 Full" are available in Digital TV mode.
- Only "16:9" and "4:3" are available in PC mode.
- Only "16:9" is available when "Viewing Mode" is set to "Game".
- Not available in teletext mode.
- Aspect mode can be memorized separately for SD (Standard definition) and HD (High definition) signals. (except Digital TV mode)



# Using TV Guide

Using TV Guide enables you to select programme easily, view programme informations, etc. TV Guide—Electronic Programme Guide (EPG) provides an on-screen listing of the programmes currently broadcast and the future broadcasts over the next seven days (depending on the broadcasters).

**View TV Guide**  
Each time pressed, the layout will be changed. (Landscape / Portrait)

**Example:**  
TV Guide date: Wed 26.03.2008  
TV Guide time: 11:27 am  
Programme name: We open in the Bathroom

**Landscape (Displays by channel)**  
Channel

**Example:**  
TV Guide Portrait  
Portrait (Displays by time)

**To the previous day** → R  
**To the next day** → G  
**To watch the programme**  
① select  
② watch

**To view details of the programme**  
Select the programme  
select → i • Press again to return to TV Guide.

**To return to TV**  
EXIT

**To view a channel list of the selected favourite list**  
B  
(favourite list)  
Favourites  
All Channels  
All Digital Channels  
All Analogue Channels  
Favourites1  
Favourites2  
Favourites3  
Favourites4  
① select a favourite list  
② view  
To list favourite channels  
→ p. 29

**To view a channel list of the selected type**  
Y  
(Type list)  
Prog. type  
All Types  
All Types  
Movie  
News  
Entertainment  
Sport  
Children's  
Music  
① select type  
② view

**Note**  
• When this TV is turned on for the first time, or the TV is switched off for more than a week, it may take some time before the TV Guide is completely shown.

**Basic**

# Viewing Teletext

You can enjoy teletext broadcasting, including news, weather forecasts and subtitles, if this service is provided by the broadcasters.

**To change mode** → "Teletext" in Setup Menu (p. 25)

**1 Switch to Teletext**  
 TEXT ● Displays Index (content varies depending on the broadcasters)

**2 Select the page** (up to page 899)  
 1 2 3 or up or CH or R G Y B  
 4 5 6 or down or (Corresponds to the colour bar)  
 7 8 9  
 0

**To adjust contrast**  
 MENU (Press three times) → As the blue bar is displayed

**To return to TV**  
 TEXT or EXIT

Sub page number  
 << 01 02 03 04 05 06 07 >>  
 Current page number **P100** 17:51 28 Feb Time / date  
**TELETEXT INFORMATION**  
 Colour bar

## What is FASTTEXT mode?

In FASTTEXT mode, four differently coloured subjects are situated at the bottom of the screen. To access more information about one of these subjects, press the appropriately coloured button. This facility enables fast access to information on the subjects shown.

## What is TOP mode? (in case of TOP text broadcasting)

TOP is a particular improvement of the standard teletext service that results in an easier search and effective guide.

- Fast overview of the teletext information available
- Easy to use step-by-step selection of the topical subject
- Page status information at the bottom of the screen

Available page up / down → R G

To select among subject blocks → B

To select next subject within the subject block

(After the last subject, it moves to the next subject block.) → Y

## What is List mode?

In List mode, four differently coloured page numbers are situated at the bottom of the screen. Each of these numbers can be altered and stored in the TV's memory. ("Store frequently viewed pages", p. 19)

## Using teletext conveniently

**Reveal hidden data**

MENU → R Reveal hidden words e.g. quiz page answers  
 ● Re-hide → R

**FULL / TOP / BOTTOM**

MENU → G

(TOP) (BOTTOM) Normal (FULL)  
 P100 Broadcast P100 Broadcast  
 (Expand the TOP half) (Expand the BOTTOM half)

## Using teletext conveniently

**HOLD**

**Stop automatic updating**  
 (If you wish to hold the current page without updating)  
**To resume** →

**INDEX**

**Return to the main index page**  
 ● FASTEXT mode only.

**Store frequently viewed pages**

**Store frequently viewed pages in the colour bar (List mode only)**

→ press and hold

Corresponding colour button  
 (As page is displayed)

P100  
 Broadcast  
 101 | 200 | 400 | 888

The number changes to white.

**To change stored pages**

→ → Enter new page number → press and hold

**Call up Subtitles**

**Display subtitles**

- Call up P801 (subtitle page) if available.
- If you press this button during P801 is displayed, teletext mode will be cancelled and return to TV.

**View in multiwindow**

**Watch TV and Teletext in two windows at once**

- Operations can be made only in Teletext screen.
- Select Picture and text On or Off

(press twice) →

**To exit multi window** →

**View sub page**

**View sub page (Only when teletext is more than one page)**

<<01 02 03 04 05 Appears at top of the screen

**To view specific sub page**

→ → → → Enter the 4-digit number →

example: P6 → 0 0 0 6 → T0006

- Sub pages:  
 The number of sub pages varies depending on the broadcasters.  
 It may take some time for searching, during which time you can watch TV.

**Watch TV while waiting for update**

**View the TV picture while searching for a teletext page**  
 Teletext automatically updates itself when new information becomes available.

→ → Appears when updating is completed → → View the updated page

Changes to TV screen temporarily  
 (You cannot change the programme.)

- The news page provides a function that indicates arrival of latest news ("News Flash").

# Watching Videos and DVDs

Connect the external equipment (VCRs, DVD equipment, etc.) and you can watch the input.

● To connect the equipment → p. 11

You can operate some functions of selected Panasonic external equipment with this remote control.



 

1

## Display the Input Selection menu



2

## Select the input mode of the connected equipment

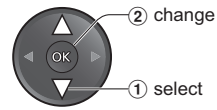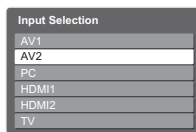


- You can also select the input using the AV button on the top panel of the TV.  
Press the button repeatedly until the desired input is selected.
- You can label or skip each input mode → “Input Labels” (p. 26)

3

## View

Displays the selected mode

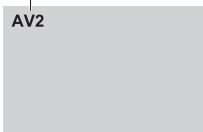









### Note

- If the external equipment has an aspect adjustment function, set to “16:9”.
- For details, see the manual of the equipment or ask your local dealer.

To return to TV → TV


Panasonic equipment connected to the TV can be directly operated with the remote control.

	<b>Standby</b> Set to Standby mode / Turn on
	<b>Play</b> Playback videocassette / DVD
	<b>Stop</b> Stop the operations
	<b>Rewind / Skip / Search</b> VCR: Rewind, view the picture rapidly in reverse DVD: Skip to the previous track or title Press and hold to search backward
	<b>Fast-forward / Skip / Search</b> VCR: Fast-forward, view the picture rapidly forward DVD: Skip to the next track or title Press and hold to search forward
	<b>Pause</b> Pause / Restart DVD: Press and hold to play at slow speed
	<b>Programme Up / Down</b> Select programme
	<b>Record</b> Start recording

**How to change the code for each equipment**

Each type of Panasonic equipment has its own remote control code.

Please change the code for each equipment you want to operate.

Press and hold  during the following operations

Enter the appropriate code  → Press 

Type of equipment	Code
DVD Recorder / DVD Player / Blu-ray Disc Player	70 (default)
Player theatre / Blu-ray Disc theatre	71
VCR	72
VIERA Link compatible equipment → "VIERA Link Control" (p. 43)	73

**Note**

- Confirm if the remote control works correctly after changing the code.
- The codes will be reset to default values if batteries are replaced.
- Some operations may not be possible on some equipment models.

# How to Use Menu Functions

Various menus allow you to make settings for the picture, sound, and other functions.



1

 
## Display the menu



- Displays the functions that can be set (varies according to the input signal)

2

## Select the menu

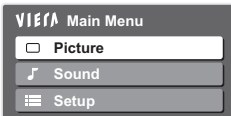


(example)



- ② access
- ① select

3

## Select the item

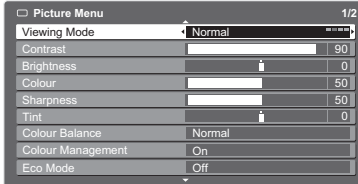


(example)



- select

4

## Adjust or select

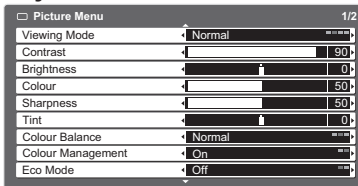

(example)



- ① change
- ② store or access (Required by some functions)


### To return to TV at any time


 
### To return to the previous screen




### To change menu pages

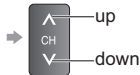

### Choose from among alternatives

 Number and positions of alternatives

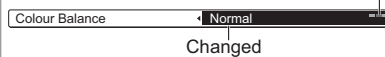

Changed

### Adjust using the slide bar

 


Moved



Displays the next screen

### Enter characters by free input menu

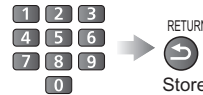

- To delete a character → R


- To delete all characters → B

Every press changes the character by one. Leave it for a second to set the character, or press OK or any numeric button within a second.

See the table below for the corresponding characters for each numeric button.

Numeric buttons	Characters	Numeric buttons	Characters
1	. ! : # + - * _ ( )	6	m n o 6 M N O
2	a b c 2 A B C	7	p q r s 7 P Q R S
3	d e f 3 D E F	8	t u v 8 T U V
4	g h i 4 G H I	9	w x y z 9 W X Y Z
5	j k l 5 J K L	0	Space 0

## Overview

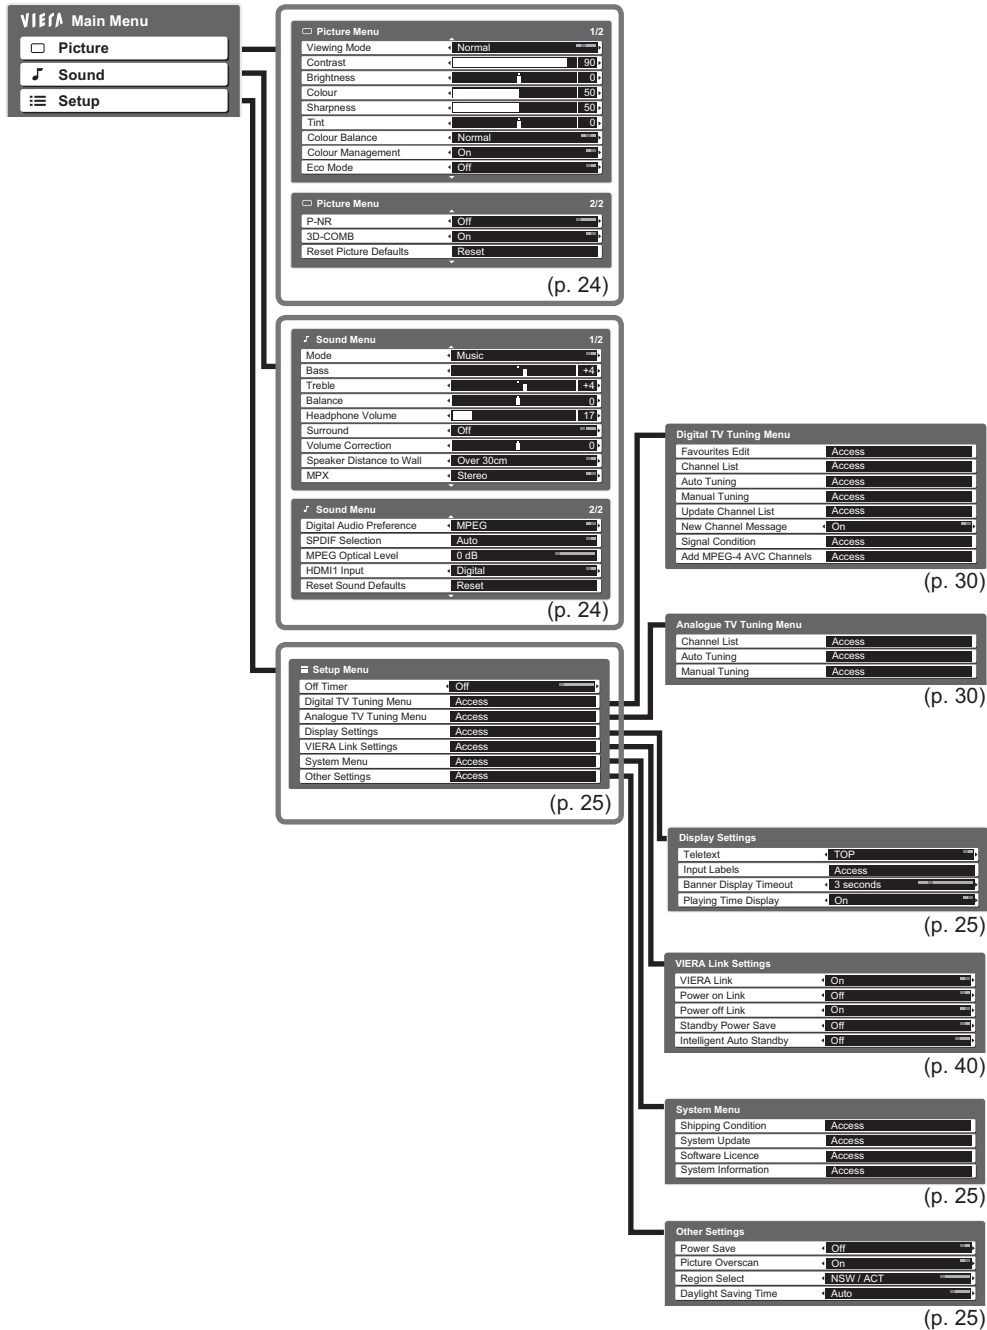

● Depending on the received signals, available items are varied.

How to Use Menu Functions (picture, sound quality, etc.)

Advanced

# How to Use Menu Functions

## Menu list

Menu	Item	Adjustments / Configurations (alternatives)
Picture	Viewing Mode	Basic picture mode ( <b>Dynamic / Normal / Cinema / Game</b> ) Dynamic : Provides enhanced picture contrast and sharpness when viewing in a bright room Normal : Recommended for viewing under normal ambient room lighting conditions Cinema : For watching movies in a darkened room producing a cinema-like picture Game : Game playing time is displayed only when connecting a game equipment ● Set for each input signal
	Contrast, Brightness, Colour, Sharpness	Increases or decreases the levels of these options according to your personal preference
	Tint	With an NTSC signal source connected to the TV, the picture hue can be adjusted to suit your taste ● For NTSC or Component / HDMI input signal reception only
	Colour Balance	Allows you to set the overall colour tone of the picture ( <b>Cool / Normal / Warm</b> )
	Colour Management	Automatically adjusts colours to vivid ones ( <b>Off / On</b> ) ● Not valid on PC signal
	Eco Mode	Adjusts picture settings automatically dependent on ambient lighting conditions ( <b>Off / On</b> )
	P-NR	Picture Noise Reduction Automatically reduces unwanted picture noise and flicker noise in the contoured parts of a picture ( <b>Off / Min / Mid / Max</b> ) ● Not valid on PC signal
	3D-COMB	Occasionally, whilst viewing still or slow moving pictures, colour patterning may be seen Set to "On" to display sharper and more accurate colours ( <b>Off / On</b> ) ● For PAL or NTSC signal reception only ● Not valid on Component, PC, HDMI and SD Card
	Reset Picture Defaults	Press the OK button to reset the present Picture Menu to the default settings
	Sound	Mode
Bass		Increases or decreases level to enhance or minimise lower, deeper sound output
Treble		Increases or decreases level to enhance or minimise sharper, higher sound output
Balance		Adjusts volume level of right and left speakers
Headphone Volume		Adjusts the volume of the headphones
Surround		Surround sound settings ( <b>Off / V-Audio / V-Audio Surround</b> ) V-Audio: Provides a dynamic enhancer to simulate improved spatial effects V-Audio Surround: Provides a dynamic enhancer of width and depth to simulate improved spatial effects ● Switching is also possible by the Surround button on the remote control (p. 10)
Volume Correction		Adjusts volume of individual channel or input mode
Speaker Distance to Wall		Adjusts the low frequency sound ( <b>Over 30cm / Up to 30cm</b> ) ● Over 30cm: Recommended when the back space between the TV and wall is over 30 cm ● Up to 30cm: Recommended when the back space between the TV and wall is within 30 cm
MPX		Select stereo / monaural ( <b>Mono / Stereo</b> ) (p. 48) ● Normally : Stereo ● Stereo signal cannot be received : Mono ● M1/M2 : Available while mono signal is transmitted ● Analogue TV mode only
Digital Audio Preference		Selects the initial setting for Audio tracks ( <b>Dolby D / MPEG</b> ) If programme has both Dolby Digital and MPEG audio tracks, priority is given to what you select Dolby D: A method of coding digital signals developed by Dolby Laboratories. Apart from stereo (2ch) audio, these signals can also be multi-channel audio. MPEG: An audio compression method that compresses audio to small size without any considerable loss of audio quality. ● Digital TV mode only
SPDIF Selection	Selects the initial setting for digital audio output signal from DIGITAL AUDIO OUT terminal ( <b>Auto / PCM</b> ) Auto: Dolby Digital is output as Dolby Digital Bitstream. MPEG is output as PCM. PCM: Dolby Digital is output as PCM. MPEG is output as PCM. ● Digital TV mode only	
MPEG Optical Level	You can adjust the audio level of MPEG output from DIGITAL AUDIO OUT terminal as the initial setting ● 0dB to -12dB in -2dB reductions ● Digital TV mode only	



Menu	Item	Adjustments / Configurations (alternatives)	
Sound	HDMI1 Input	Select to fit the input signal ( <b>Digital / Analogue</b> ) (p. 34) Digital: HDMI cable connection Analogue: HDMI-DVI adapter cable connection ● HDMI input mode only ● HDMI2 terminal is for digital signal only ● No setting for HDMI2 is available	
	Reset Sound Defaults	Press the OK button to reset the present Sound Menu to the default settings	
Setup	Off Timer	Sets the time the TV automatically turns Off ( <b>Off / 15 / 30 / 45 / 60 / 75 / 90 minutes</b> ) (p. 15)	
	Tuning Menu	Favourites Edit	Creates list of favourite channels (Digital TV mode) (p. 29)
		Channel List	Skips the unwanted channels / Edits channels (p. 29)
		Auto Tuning	Sets all Digital TV or Analogue TV channels automatically (p. 30)
		Manual Tuning	Sets the TV channels manually (p. 31)
		Update Channel List	Update the channel list (Digital TV mode) (p. 31)
		New Channel Message	Displays a message when new Digital TV channels are found. ( <b>Off / On</b> ) (p. 31)
		Signal Condition	Checks the Digital TV signal condition (p. 31)
	Display Settings	Add MPEG-4 AVC Channels	Activates the reception of MPEG-2 and MPEG-4 AVC channels ● Use this function if MPEG-4 AVC services start in your area. ● All previous tuning settings are erased. ● Once activated, this option is removed from the Digital TV Tuning Menu.
		Teletext	Teletext display mode ( <b>TOP (FASTTEXT) / List</b> ) (p. 18)
		Input Labels	Labels or skips each input mode (p. 26)
		Banner Display Timeout	Sets how long the information banner stays on screen from 0 (No display) to 10 sec. in 1-sec. increments
		Playing Time Display	Displays the length of time in every thirty minutes for playing game ( <b>Off / On</b> ) ● When "Viewing Mode" is set to "Game"
	VIERA Link Settings	VIERA Link	Sets to use VIERA Link functions ( <b>Off / On</b> ) ● VIERA Link functions become available when "VIERA Link" is set to "On" (p. 40)
		Power on Link	Sets to use Power on Link function ( <b>Off / On</b> ) (p. 40)
		Power off Link	Sets to use Power off Link function ( <b>Off / On</b> ) (p. 40)
		Standby Power Save	Controls the power consumption in Standby mode of the connected equipment to reduce the consumption ( <b>Off / On</b> ) (p. 40)
		Intelligent Auto Standby	Makes unwatched or unused connected equipment go into Standby mode to reduce the power consumption ( <b>Off / On (With reminder) / On (No reminder)</b> ) (p. 40)
	System Menu	Shipping Condition	Resets all settings to the original conditions (p. 32)
		System Update	Downloads new software to TV (p. 27)
		Software Licence	Displays the software licence information
		System Information	Displays the system information of this TV
	Other Settings	Power Save	Reduces brightness of picture to minimise power consumption ( <b>Off / On</b> )
Picture Overscan		Selects the screen area displaying the image ( <b>Off / On</b> ) On : Enlarges the image to hide the edge of the image Off : Displays the image in the original size ● Set to "On" if noise is generated on the edges of the image ● This function is available when aspect is set to "16:9" ● This function can be memorized separately for SD (Standard definition) and HD (High definition) signals	
Region Select		Selects the region where you live to adjust the standard time ( <b>NSW / ACT / Victoria / Queensland / South Australia / Western Australia / Northern Territory / Tasmania</b> ) (p. 15)	
Daylight Saving Time		Select time offset from the standard time for Summer Time ( <b>Auto / Off / +1/2 hour / +1 hour</b> ) (p. 15) ● Set to "Auto" normally	

- A different menu will be displayed while PC, DVI to HDMI adapter cable or SD Card is used. (p. 33 and p. 35)
- Only available items can be selected.

# Input Labels

For easier identification and selection of the input mode, you can label each input terminal or skip terminal that is not connected to any equipment (p. 20).

- 1 Display the menu**  
MENU
- 2 Select "Setup"**  
VIERA Main Menu  
Picture  
Sound  
Setup
- 3 Select "Display Settings"**  
Setup Menu  
Off Timer Off  
Digital TV Tuning Menu  
Display Settings Access  
VIERA Link Settings  
System Menu  
Other Settings
- 4 Select "Input Labels"**  
Display Settings  
Teletext FASTEXT  
Input Labels Access  
Banner Display Timeout 3 seconds  
Playing Time Display On
- 5 Select an input terminal and set**  
Input Labels  
AV1 AV1  
AV2 AV2  
PC PC  
HDMI1 HDMI1  
HDMI2 HDMI2  
Digital TV Digital TV  
Analogue TV Analogue TV

**To return to TV**  
EXIT

The labels you set will be displayed in "Input Selection" menu (p. 20) or banner.

● If "Skip" is selected, you cannot select the mode.

**User input**  
You can name each input terminal freely.

Select "User input"

User input  
Name AI


(maximum: ten characters)  
You can set characters by using numeric buttons.  
→ p. 22

Select characters

Store

# Digital TV Settings

Digital TV Settings provide access to various advanced features.

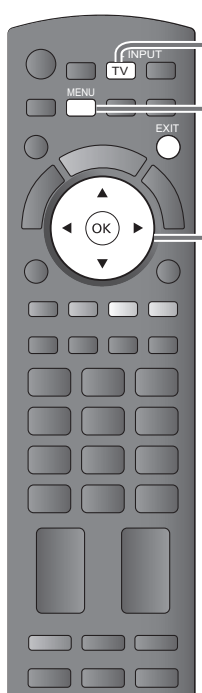

- 1 If in Analogue TV mode  
**Select Digital TV mode**  
TV
- 2 **Display the menu**  
MENU
- 3 **Select "Setup"**  

VIERA Main Menu	
Picture	
Sound	
Setup	
- 4 **Select "System Menu"**  

Setup Menu	
Off Timer	Off
Digital TV Tuning Menu	
Display Settings	
VIERA Link Settings	
System Menu	Access
Other Settings	
- 5 **Select "System Update"**  

System Menu	
Shipping Condition	
System Update	Access
Software Licence	
System Information	
- 6 **Set**  
EXIT

To return to TV → EXIT

Input Labels  
Digital TV Settings

**Update TV's software system System Update**

Download new software to TV.  
● For details → p. 48

**If System Update is performed, the software will be updated. It may change TV functions.**  
**If you do not wish to do so, set "Auto Update Search in Standby" to Off.**

**Select "Auto Update Search in Standby" and then set "On" or "Off"**

System Update	
Auto Update Search in Standby	On
System Update Search Now	

● On: Automatically performs a search in standby and downloads an update, if any software updates are available

● When the TV is switched to standby, there will be a clicking sound after a short delay. Similar clicking sounds will also occur at 3:00 AM and 5:00 AM (p. 48) when "Auto Update Search in Standby" is set to "On". These sounds are normal.

**To update immediately**  
Select "System Update Search Now"

② start → Searches for an update (for several minutes) and displays a corresponding message if any → Download → ① select

● Download may take for about 1 hour.

● During downloading, the TV will display a blank screen for 40 to 50 seconds. Do not interrupt the TV during this procedure.

Advanced

# Editing Channels

You can make your favourite channel lists, skip unwanted channels, etc.

- 1 Select Digital TV or Analogue TV**
- 2 Display the menu**
- 3 Select "Setup"**  

VIERA Main Menu	
Picture	
Sound	
Setup	
- 4 Select "Digital TV Tuning Menu" or "Analogue TV Tuning Menu"**  

Setup Menu	
Off Timer	Off
Digital TV Tuning Menu	Access
Display Settings	
VIERA Link Settings	
System Menu	
Other Settings	
- 5 Select "Favourites Edit" or "Channel List"**  

Digital TV Tuning Menu	
Favourites Edit	Access
Channel List	Access
Auto Tuning	
Manual Tuning	
Update Channel List	
New Channel Message	On
Signal Condition	
- 6 Set**  

To return to TV →

**List favourite channels (Digital TV mode) Digital TV Favourites Edit**

Create your favourite channel list (Favourites) from various broadcasters (up to 4: Favourites1 to 4). The list is added to "Favourites" list in TV Guide (p. 17) and information banner (p. 15) and then easily accessed.

**Select a channel and add it to the list**

To select favourite list → **G**

To add all channels to the list → **Y**

A channel is added

**To edit list**

Select the field of List to edit and:

- To name the Favourites → **R** → **select** → **set** → Set characters
- To move the channel → **G** → Select the new position → **confirm** → **G**
- To delete the channel → **OK**
- To delete all channels → **Y**

You can set characters by using numeric buttons. → p. 22

**Note**

- Channel numbers are defined by the broadcaster and cannot be changed.
- Hidden channels (see below) can be selected but not viewed.

**Skip unwanted channels / Edit channels (Change name, Move) Channel List**

You can hide unwanted channels. The hidden channels cannot be displayed except in this function. Use this function to skip unwanted channels.

**Select a channel and add / delete**

To retune each channel (Manual Tuning) (p. 31) → **R**

You can edit channels.

- If a VCR is connected only with the RF cable, edit "VCR" (Analogue TV mode).

**1 Select a channel to edit**

Channel position

Name

**2 Edit**

**To change the displayed name when selecting channels (Only in Analogue TV mode)**

Select "Rename" → **set** → Set characters

You can set characters by using numeric buttons. → p. 22

(maximum: five characters)

**To move channel position**

For Analogue TV channels

**To swap channels**

For Digital TV channels

# Tuning Channels

You can retune all the TV channels when moving house or search for new channels which may have recently started broadcasting.


- 1 Select Digital TV or Analogue TV**  
TV
- 2 Display the menu**  
MENU
- 3 Select "Setup"**  

VIERA Main Menu	
Picture	
Sound	
Setup	
- 4 Select "Digital TV Tuning Menu" or "Analogue TV Tuning Menu"**  

Setup Menu	
Off Timer	Off
Digital TV Tuning Menu	Access
Display Settings	
VIERA Link Settings	
System Menu	
Other Settings	
- 5 Select a function**  

Digital TV Tuning Menu	
Favourites Edit	
Channel List	
Auto Tuning	Access
Manual Tuning	Access
Update Channel List	Access
New Channel Message	On
Signal Condition	Access
- 6 Set**

- To return to TV → EXIT
- For Auto Tuning, using the buttons on the top panel of the TV (p. 9)**
- ① Press repeatedly until "Auto Tuning" appears
  - ② Access "Auto Tuning"
  - ③ Start "Auto Tuning"
- To return to TV →

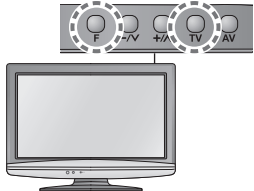

**Set all Digital TV or Analogue TV channels automatically**  
**Digital TV Auto Tuning or Analogue TV Auto Tuning**

Automatically retune all Digital TV or Analogue TV channels received in the area.

- Only Digital TV channels are retuned in Digital TV mode.
- Only Analogue TV channels are retuned in Analogue TV mode.

**Start Auto Tuning** → **Settings are made automatically**

Digital TV Auto Tuning			
All digital TV tuning data will be erased			
Start Auto Tuning → EXIT			

OK →


Digital TV Auto Tuning			
This operation will erase all channels.			
Ch	Frequency	Service	Quality
01	12.500 MHz	Digital TV	High
02	13.000 MHz	Digital TV	High
03	13.500 MHz	Digital TV	High
04	14.000 MHz	Digital TV	High
05	14.500 MHz	Digital TV	High
06	15.000 MHz	Digital TV	High
07	15.500 MHz	Digital TV	High
08	16.000 MHz	Digital TV	High
09	16.500 MHz	Digital TV	High
10	17.000 MHz	Digital TV	High
11	17.500 MHz	Digital TV	High
12	18.000 MHz	Digital TV	High
13	18.500 MHz	Digital TV	High
14	19.000 MHz	Digital TV	High
15	19.500 MHz	Digital TV	High
16	20.000 MHz	Digital TV	High
17	20.500 MHz	Digital TV	High
18	21.000 MHz	Digital TV	High
19	21.500 MHz	Digital TV	High
20	22.000 MHz	Digital TV	High
21	22.500 MHz	Digital TV	High
22	23.000 MHz	Digital TV	High
23	23.500 MHz	Digital TV	High
24	24.000 MHz	Digital TV	High
25	24.500 MHz	Digital TV	High
26	25.000 MHz	Digital TV	High
27	25.500 MHz	Digital TV	High
28	26.000 MHz	Digital TV	High
29	26.500 MHz	Digital TV	High
30	27.000 MHz	Digital TV	High
31	27.500 MHz	Digital TV	High
32	28.000 MHz	Digital TV	High
33	28.500 MHz	Digital TV	High
34	29.000 MHz	Digital TV	High
35	29.500 MHz	Digital TV	High
36	30.000 MHz	Digital TV	High
37	30.500 MHz	Digital TV	High
38	31.000 MHz	Digital TV	High
39	31.500 MHz	Digital TV	High
40	32.000 MHz	Digital TV	High
41	32.500 MHz	Digital TV	High
42	33.000 MHz	Digital TV	High
43	33.500 MHz	Digital TV	High
44	34.000 MHz	Digital TV	High
45	34.500 MHz	Digital TV	High
46	35.000 MHz	Digital TV	High
47	35.500 MHz	Digital TV	High
48	36.000 MHz	Digital TV	High
49	36.500 MHz	Digital TV	High
50	37.000 MHz	Digital TV	High
51	37.500 MHz	Digital TV	High
52	38.000 MHz	Digital TV	High
53	38.500 MHz	Digital TV	High
54	39.000 MHz	Digital TV	High
55	39.500 MHz	Digital TV	High
56	40.000 MHz	Digital TV	High
57	40.500 MHz	Digital TV	High
58	41.000 MHz	Digital TV	High
59	41.500 MHz	Digital TV	High
60	42.000 MHz	Digital TV	High
61	42.500 MHz	Digital TV	High
62	43.000 MHz	Digital TV	High
63	43.500 MHz	Digital TV	High
64	44.000 MHz	Digital TV	High
65	44.500 MHz	Digital TV	High
66	45.000 MHz	Digital TV	High
67	45.500 MHz	Digital TV	High
68	46.000 MHz	Digital TV	High
69	46.500 MHz	Digital TV	High
70	47.000 MHz	Digital TV	High
71	47.500 MHz	Digital TV	High
72	48.000 MHz	Digital TV	High
73	48.500 MHz	Digital TV	High
74	49.000 MHz	Digital TV	High
75	49.500 MHz	Digital TV	High
76	50.000 MHz	Digital TV	High
77	50.500 MHz	Digital TV	High
78	51.000 MHz	Digital TV	High
79	51.500 MHz	Digital TV	High
80	52.000 MHz	Digital TV	High
81	52.500 MHz	Digital TV	High
82	53.000 MHz	Digital TV	High
83	53.500 MHz	Digital TV	High
84	54.000 MHz	Digital TV	High
85	54.500 MHz	Digital TV	High
86	55.000 MHz	Digital TV	High
87	55.500 MHz	Digital TV	High
88	56.000 MHz	Digital TV	High
89	56.500 MHz	Digital TV	High
90	57.000 MHz	Digital TV	High
91	57.500 MHz	Digital TV	High
92	58.000 MHz	Digital TV	High
93	58.500 MHz	Digital TV	High
94	59.000 MHz	Digital TV	High
95	59.500 MHz	Digital TV	High
96	60.000 MHz	Digital TV	High
97	60.500 MHz	Digital TV	High
98	61.000 MHz	Digital TV	High
99	61.500 MHz	Digital TV	High
100	62.000 MHz	Digital TV	High

- All the previous tuning settings are erased.
- When the operation is completed, the channel at channel position "1" will be displayed.
- Search begins in the order from the lower channels to the higher channels. Channels received during this process are added to the list. (p. 31)
- If tuning has not been done completely → "Digital TV Manual Tuning", "Analogue TV Manual Tuning" (p. 31)

**Set Digital TV channel manually** **Digital TV Manual Tuning**

Normally use "Digital TV Auto Tuning" or "Update Channel List" to update Digital TV channels on your channel list.

If tuning has not been done completely or for adjusting the direction of the aerial, use this function.

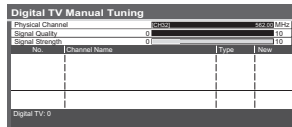

- ① select physical channel
- ② adjust frequency (set where the level of "Signal Quality" becomes the maximum)
- ③ search


● All channels found will be added to the Digital TV Channel List.

**Set Analogue TV channel manually** **Analogue TV Manual Tuning**

 **Manual Tuning**

Set Analogue TV channel manually after Analogue TV Auto Tuning.

- If a VCR is connected only with the RF cable, select channel position "0".

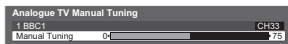


Select the channel position



Select the channel



 Search and store

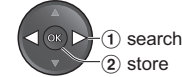

**Update channels automatically** **Update Channel List**

You can add new channels, delete duplicated channels, update channel name and position automatically to Channel List.



- The Digital TV Channel List is updated with the current settings saved as they are.

**Display a message** **New Channel Message**


Selects whether to give a message when new Digital TV channels are found. **(Off / On)**.



**Check Digital TV signal** **Digital TV Signal Condition**

Selects a channel and checks the Digital TV signal condition.

- To change the channel →

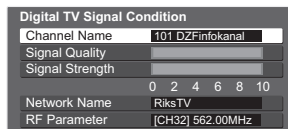

A good Signal Strength is not an indication of suitable signal for Digital TV reception. Please use the Signal Quality indicator as follows:


**Signal Quality:**

- Green bar → Good
- Yellow bar → Poor
- Red bar → Bad (Check the aerial)

# Restore Settings

## (Shipping Condition)

Resets the TV to its original condition, i.e. no channels tuned in. All settings (channels, picture, sound quality, etc.) are reset.



- 1 Display the menu**  
MENU
- 2 Select "Setup"**  

VIERA Main Menu	
Picture	
Sound	
Setup	
- 3 Select "System Menu"**  

Setup Menu	
Off Timer	Off
Digital TV Tuning Menu	
Display Settings	
VIERA Link Settings	
System Menu	Access
Other Settings	
- 4 Select "Shipping Condition"**  

System Menu	
Shipping Condition	Access
System Update	
Software Licence	
System Information	
- 5 Set**

**To return to TV**  
EXIT

**Restore Settings Shipping Condition**

- 1 Check the message and reset**  

Shipping Condition	
All tuning data will be erased	
Are you sure ?	
Are you sure ?	
Confirm	EXIT
	RETURN
- 2 Follow the on-screen instructions**
  - "Auto Tuning" will automatically start when Mains power On / Off switch is next turned On. (p. 12)

**To re-tune TV channels only, e.g. after moving house**  
 ➔ "Digital TV Auto Tuning" or "Analogue TV Auto Tuning" (p. 30)



# Displaying PC Screen on TV

The screen of the PC connected to the TV can be displayed on the TV.  
You can also listen to PC sound with the audio cable connected.

- To connect PC → p. 46

**1 Select the external input**  
AV

**2 Select "PC"**

Input Selection  
AV1  
AV2  
PC  
HDMI1  
HDMI2  
TV

● Corresponding signals → p. 50  
● If "H-freq." or "V-freq." is shown in red, the signals may not be supported.

To return to TV → TV

## PC menu setting (changed as desired)

Menu	Item	Adjustments / Configurations (options)	
Picture	Advanced PC Settings	R-Gain	Adjusts the white balance for red areas
		G-Gain	Adjusts the white balance for green areas
		B-Gain	Adjusts the white balance for blue areas
		Gamma	(2.0 / 2.2 / 2.5)
		Reset PC Settings	Press the OK button to reset to the default Picture settings
Setup	PC Setup	Input Resolution	Switches to a wide view ● VGA (640 x 480 pixels), WVGA (852 x 480 pixels), XGA (1,024 x 768 pixels), WXGA (1,280 x 768 / 1,366 x 768 pixels) ● Options change depending on signals
		Clock	Set to the minimum level if noise occurs
		H-pos	Adjusts horizontal position 
		V-pos	Adjusts vertical position 
		Clock Phase	Eliminates flicker and distortion ● Adjust after Clock adjustment ● Set to the minimum level if noise occurs
		Sync	PC sync signal type ( <b>H &amp; V / SOG</b> ) ● H & V : Horizontal and Vertical sync from your PC (Most common sync format) ● SOG : Sync on Green sync from your PC
		Reset PC Settings	Press the OK button to reset to the default Setup settings

- Other items → p. 24 and p. 25.

Restore Settings (Shipping Condition)  
Displaying PC Screen on TV

Advanced

# HDMI Functions

HDMI (high-definition multimedia interface) allows you to enjoy high-definition digital images and high-quality sound by connecting the TV and the equipment.

HDMI-compatible equipment (\*1) with an HDMI or DVI output terminal, such as a set top box, a DVD player or a game equipment, can be connected to the HDMI terminal using an HDMI compliant (fully wired) cable.

About connections, see "External Equipment" (p. 46).

## Note

- HDMI is the world's first complete digital consumer AV interface complying with a non-compression standard.
- Audio settings can be made on the "HDMI1 Input" menu screen. (p. 25)
- Applicable audio signal sampling frequencies (2ch L.PCM): 48 kHz, 44.1 kHz, 32 kHz
- HDMI2 terminal is for digital audio signal only.
- Use with a PC is not guaranteed. Only HDMI video formats in the HDMI table (p. 50) are applicable.
- If the connected equipment has an aspect adjustment function, set the aspect ratio to "16:9".
- These HDMI connectors are "type A".
- These HDMI connectors are compatible with HDCP (High-Bandwidth Digital Content Protection) copyright protection.
- An equipment having no digital output terminal may be connected to the input terminal of either "COMPONENT" or "VIDEO" to receive analogue signals.
- The HDMI input terminal can be used only with the following image signals:  
480i, 480p, 576i, 576p, 720p, 1080i and 1080p. Match the output setting of the digital equipment.
- For details of the applicable HDMI signals, see p. 50

 
 
## DVI connection

- If the external equipment has only a DVI output, connect to the HDMI1 terminal via a DVI to HDMI adapter cable (\*2):
- When the DVI to HDMI adapter cable is used, connect the audio cable to the audio input terminal (HDMI1: use AV2 IN AUDIO terminals)

## DVI Position Settings

If the picture position is not fit to the screen during the DVI connection, adjust the position on "DVI Position Settings" in Setup Menu. The settings are memorized for each HDMI terminals and input signals.

- To make settings → "How to Use Menu Functions" ① to ④ (p. 22)

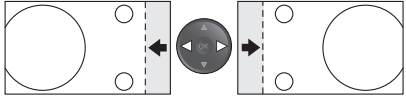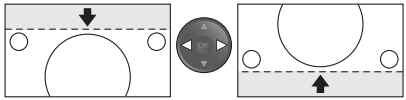Menu	Item	Adjustments
Setup	DVI Position Settings	
	H-pos	Adjusts horizontal position 
	V-pos	Adjusts vertical position 
	Reset DVI Position Settings	Press the OK button to reset to the default Setup settings

(\*1): The HDMI logo is displayed on HDMI-compliant equipment.

(\*2): Enquire at your local digital equipment retailer shop.


# Viewing from SD Card

## (VIERA IMAGE VIEWER)


Photo View: Still images recorded by digital cameras will be displayed.

Movie View: Moving pictures recorded by digital video cameras will be played back.

- During the operation, no signals are output from any of the AV terminals. But the sound in Movie View can be output from AUDIO OUT and DIGITAL AUDIO OUT terminals.
- "Date" shows the date on which the recording was made by the digital camera or digital video camera. It is shown with asterisks when the file has no record of the date.
- For details on SD Cards → p. 49

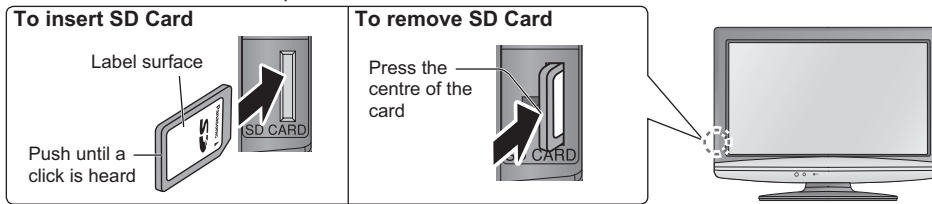

### Photo View

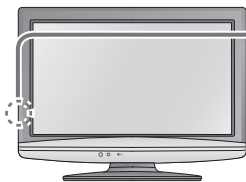

- 1 Insert the SD Card**
- 2 Select "Photo View"**
  - SD Card
  - Photo View
  - Movie View
- 3 Select a folder to display the thumbnail**
  - Photo View Mode
  - Folder view
  - Folder name: 102 PANNA
  - Number of pictures: 18 pictures
  - 102 PANNA 3 pictures
  - 102 PANNA 14 pictures
  - 102 PANNA 20 pictures
  - 201 PANNA 2 pictures
  - ROOM 1 pictures
  - Fish 18 pictures
  - LAGUNA 14 pictures

(Folder view)

  - The files which are not in a folder will be collected to the folder named "F".
  - To display all the photos → p. 36
- 4 Select a photo from the thumbnail to be viewed**

Error display (images that could not be loaded, etc.)

  - Selected photo
  - File name: p1010001
  - Date: 2010/09/08
  - Pixel: 1000 x 1000

Selected photo information is displayed (Thumbnail)

(Single view)

  - Slide show → p. 36
  - To sort by date or month recorded → p. 36

Displayed one at a time

  - To display / hide the operation guide
  - To previous photo
  - Rotate 90° (anti-clockwise)
  - To next photo
  - Rotate 90° (clockwise)
  - To return to thumbnail

To return to TV



To return to the previous screen



# Viewing from SD Card

(VIERA IMAGE VIEWER)

### Slideshow

**Start Slideshow** (operate in step 4)  
Select the photo for the first view

**Note**

- Slideshow is done within the thumbnail.

**Slideshow settings** (operate in Photo View Mode)  
Display the menu → Select "Viewing Setup" → Select the items and set

MENU → VIERA Main Menu (Picture, Sound, Viewing Setup) → Viewing Setup (Back Ground Music, Effect, Interval, Repeat) → set

- To pause → [OK]
- To return to Single view → [G]

Other items → p. 24-25

Menu	Item	Adjustments / Configurations (alternatives)
Viewing Setup	Back Ground Music	Selects the back ground music (Off / Type1 / Type2 / Type3)
	Effect	Selects the effect for switching the photo during the slideshow (Off / Fade / Slide / Dissolve / Random) Fade : The next photo fades in gradually Slide : The next photo slides and appears from the left side Dissolve : The photo is replaced by an indefinite block unit Random : Selects each effect at random
	Interval	Select slideshow interval (5 / 10 / 15 / 30 / 60 / 90 / 120 seconds)
	Repeat	Slideshow repeat (Off / On)

### To display all the photos

Display the thumbnail of all the photos in SD Card.

Photo View Mode Folder view (122) → [G] → Photo View Mode All pictures (1175)

(Folder view) → (Thumbnail - All pictures)

[OK] 1 select  
[OK] 2 single view

### To sort by date or month recorded

Display the list of groups sorted by the same date or the same month.

- The group of the photos without record of the date is shown as "Unknown".

(Thumbnail) → [Y] → (Sort by Month) → [G] → (Sort by Date)


 
 
[OK] 1 select  
[OK] 2 thumbnail of the selected group

[OK] 1 select  
[OK] 2 thumbnail of the selected group


**Movie View**




- 1 Insert the SD Card
- 2 Select "Movie View"
- 3 Select the file to be viewed

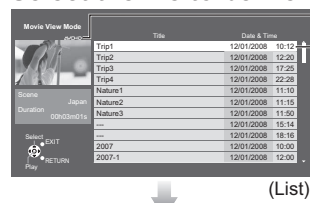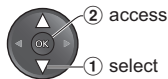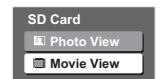


File format  
Only AVCHD or MPEG2 is supported.  
● For details → p. 49

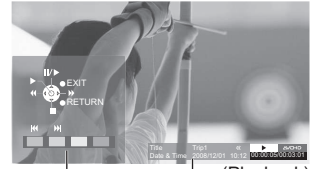

 Playback will start  
● To display the operation guide

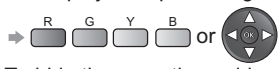

● To hide the operation guide

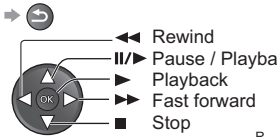

Operation guide information banner → i

- To return to list → (stop)
- To change aspect ratio (only for the 4:3 movie content) → ASPECT
- To the previous movie → R
- To the next movie → G


- To return to TV  
EXIT or TV
- To return to the previous screen  
RETURN

Viewing from SD Card (VIERA IMAGE VIEWER)

**Audio Settings**

 You can enjoy the multi-channel sound via an amplifier connected to DIGITAL AUDIO OUT terminal. To confirm or change the current sound status (during playback)

Display the Option menu Change the sound (if the movie has multiple audio signals)

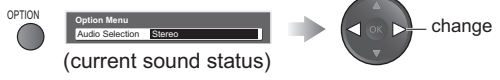

● It may take several seconds to change the sound

**Audio output settings** (operate in step ③)

Display the menu Select "Sound" Select "SPDIF Selection" and set



Menu	Item	Adjustments / Configurations (alternatives)
Sound	SPDIF Selection	SPDIF : A standard audio transfer file format Selects the initial setting for digital audio output signal from DIGITAL AUDIO OUT terminal (Auto / PCM) Auto: Dolby Digital is output as Dolby Digital Bitstream. MPEG is output as PCM. PCM: Digital output signal is fixed to PCM.

Advanced

# VIERA Link “HDAVI Control™”

Enjoy additional HDMI interoperability with Panasonic products which have “HDAVI Control” function. This TV supports “HDAVI Control 4” function.

Connections to the equipment (DIGA Recorder, HD Video Camera, Player theatre, Amplifier, etc.) with HDMI cable allow you to interface them automatically.

These features are limited to models incorporating “HDAVI Control” and “VIERA Link”.

- Some functions are not available depending on the equipment’s version of HDAVI Control. Please confirm the connected equipment’s version of HDAVI Control.
- VIERA Link “HDAVI Control”, based on the control functions provided by HDMI which is an industry standard known as HDMI CEC (Consumer Electronics Control), is a unique function that we have developed and added. As such, its operation with other manufacturers’ equipment that supports HDMI CEC cannot be guaranteed.
- Please refer to individual manuals for the equipment.  
About applicable Panasonic equipment, consult your local Panasonic dealer.

## VIERA Link features and connections

### VIERA Link

Connected equipment with VIERA Link function	DIGA Recorder <sup>*1</sup>	DVD Player / Blu-ray Disc Player <sup>*1</sup>	HD Video Camera / LUMIX Camera <sup>*1</sup>	Player theatre <sup>*2</sup>	Blu-ray Disc theatre <sup>*2</sup>	Amplifier <sup>*2</sup>
<b>Features</b>						
Channel download	○ <sup>*4</sup>	–	–	–	–	–
Easy playback	○	○	○	○ <sup>*7</sup>	○ <sup>*7</sup>	–
Power on link	○	○	○	○	○	–
Power off link	○	○	○	○	○	○
Reduce unnecessary power consumption in standby	○ <sup>*5</sup>	○ <sup>*5</sup>	–	–	○ <sup>*5</sup>	–
Auto standby for unnecessary equipment	○ <sup>*3</sup>	○ <sup>*3</sup>	–	○ <sup>*3</sup> / <sub>*8</sub>	○ <sup>*3</sup> / <sub>*8</sub>	○ <sup>*3</sup>
Pause Live TV programme	○ <sup>*6</sup>	–	–	–	–	–
Direct TV Recording	○ <sup>*4</sup>	–	–	–	–	–
Control the menu of the connected equipment by VIERA remote control	○ <sup>*3</sup>	○ <sup>*3</sup>	○ <sup>*3</sup>	○ <sup>*3</sup>	○ <sup>*3</sup>	–
Speaker control	–	–	–	○	○	○

\*1: HDMI Connection only

\*2: HDMI and Audio out connections

\*3: available with the equipment which has “HDAVI Control 2 or later” function

\*4: available with the equipment which has “HDAVI Control 3 or later” function

\*5: available with the equipment which has “HDAVI Control 4” function

\*6: available with DIGA Recorder which has HDD

\*7: while playingback a disc


\*8: except for watching a disc

## Connection


- To use DIGA Recorder / DVD Player / Blu-ray Disc Player / HD Video Camera / LUMIX Camera



- To use Player theatre / Blu-ray Disc theatre:

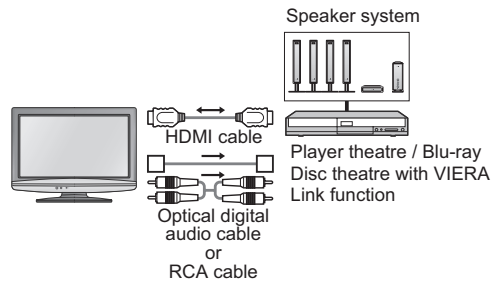

- To use Amplifier:

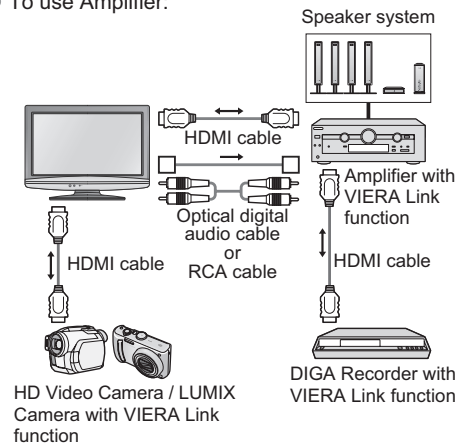

### Note

- This function may not work properly depending on the connected equipment.
- For DIGA Recorder / DVD Player / Blu-ray Disc Player / HD Video Camera / LUMIX Camera with VIERA function, connect to HDMI1 or HDMI2 terminal via an HDMI cable.
- For Player theatre / Blu-ray Disc theatre / Amplifier, connect to HDMI1 or HDMI2 terminal via an HDMI cable and/or either the optical digital audio cable or RCA cable for audio output from the TV.
- Use fully wired HDMI compliant cable. Non-HDMI-compliant cables cannot be utilized.  
Recommended Panasonic's HDMI cable part number:  
• RP-CDHG10 (1.0 m) • RP-CDHG15 (1.5 m) • RP-CDHG20 (2.0 m)  
• RP-CDHG30 (3.0 m) • RP-CDHG50 (5.0 m)

# VIERA Link “HDAVI Control™”

## Preparations

- Connect the equipment supporting VIERA Link.
- Set up the connected equipment. Read the manual of the equipment.
- For optimal recording, the settings of the recorder might be required. For details, read the manual of the recorder.
- Set VIERA Link On in Setup Menu → “VIERA Link Settings” → “VIERA Link” (p. 25)
- Set up the TV → **After connection, turn the equipment on and then switch the TV on. Select the input mode to HDMI1 or HDMI2 (p. 20), and make sure that an image is displayed correctly.**
  - This setup should be done each time when the following conditions occur:
    - for the first time / • when adding or reconnecting equipment / • when changing setup

## Features available

<b>Channel download</b>
Channel setting can be downloaded to the recorder.
<b>Easy playback</b>
Automatic input switching - When the connected equipment is operated, input mode is switched automatically.
<b>Power on link</b>
<b>Set Power on Link “On” in Setup Menu to use this function</b> → “Power on Link” (p. 25) When the connected equipment starts playback or direct navigator / function menu for the equipment are activated, the TV is automatically turned on. (Only when TV is in Standby mode.)
<b>Power off link</b>
<b>Set Power off Link “On” in Setup Menu to use this function</b> → “Power off Link” (p. 25) When the TV is set to Standby mode, the connected equipment is also automatically set to Standby. <ul style="list-style-type: none"><li>● This function will work even if the TV enters standby mode automatically by Off Timer function or auto power standby function.</li></ul>
<b>Reduce unnecessary power consumption in standby</b> <b>Standby Power Save</b>
<b>Set Standby Power Save “On” in the Setup Menu to use this function</b> → “Standby Power Save” (p. 25) The power consumption in Standby mode of the connected equipment is controlled higher or lower in synchronization with the TV On / Off state to reduce the consumption. When the TV is set to Standby mode, the connected equipment is automatically set to Standby and the power consumption in Standby mode of the connected equipment is automatically minimized. When the TV is turned on, the connected equipment is still in Standby mode, but the power consumption is increased to make startup time early. <ul style="list-style-type: none"><li>● This function is effective if the connected equipment can change the power consumption in Standby mode and is set to higher consumption.</li></ul>
<b>Auto standby for unnecessary equipment</b> <b>Intelligent Auto Standby</b>
<b>Set Intelligent Auto Standby “On (With reminder)” or “On (No reminder)” in the Setup Menu to use this function</b> → “Intelligent Auto Standby” (p. 25) When the TV is on, the connected equipment not in use go into Standby mode automatically to reduce the power consumption. <ul style="list-style-type: none"><li>● If you select “On (With reminder)”, the on screen message will be displayed to be noticed before working this function.</li></ul>




**Features available (Using VIERA Link Menu)**

**Direct TV Recording - What you see is What you record** **Direct TV Rec**



Recording the current programme in DIGA Recorder immediately.

- If you connect two recorders including other manufacturers' recorder at the same time, please connect DIGA Recorder to the TV's lower HDMI terminal number.
- If you cannot operate, check the settings and the equipment → "VIERA Link features and connections" (p. 38 - 39)

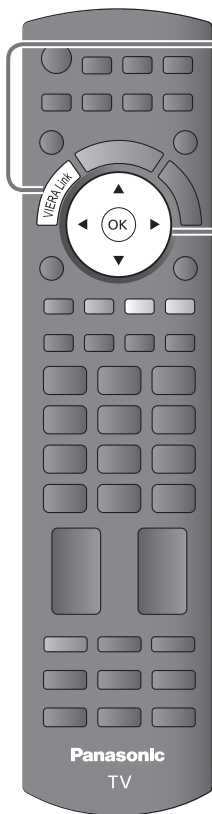



① Display "VIERA Link Menu"

  ② Select "Direct TV Rec" and start recording

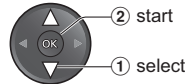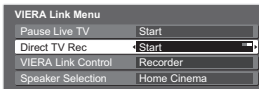

**To stop recording**

  Select "Stop" in "Direct TV Rec" and access

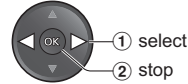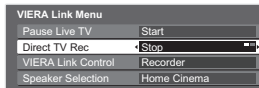

VIERA Link "HDAVI Control™"

Advanced

# VIERA Link “HDAVI Control™”

Features available (Using VIERA Link Menu)

## Pause Live TV programme **Pause Live TV**

You can pause the live TV programme and resume later.

Live TV programme will be recorded on HDD of the connected DIGA Recorder.

- This function is available with DIGA Recorder which has HDD.
- If you connect two recorders including other manufacturers' recorder at the same time, please connect DIGA Recorder which has HDD to the TV's lower HDMI terminal number.
- If you cannot operate, check the settings and the equipment → “VIERA Link features and connections” (p. 38 - 39)

### Access and pause the live TV programme

① Display “VIERA Link Menu”

② Select “Pause Live TV” and pause

VIERA Link Menu	
Pause Live TV	Start
Direct TV Rec	Start
VIERA Link Control	Recorder
Speaker Selection	Home Cinema

TV picture will be paused.

- Live TV programme is recorded on HDD from where it was paused.
- Follow the operation guide to operate Pause Live TV function.

**To operate Pause Live TV**

search backward  
pause  
search forward  
playback  
stop

**To return to Live TV**  
(stop playback of Pause Live TV / cancel pause)

Select “Yes”

→ TV →

Pause Live TV	
Stop Pause Live TV?	
Yes	No

● If you stop playback or cancel pause, the recorded programme will be deleted from HDD.


## Features available (Using VIERA Link Menu)

### Operate the connected equipment with VIERA remote control **VIERA Link Control**

You can control some functions of the connected equipment with this TV remote control by pointing at the TV's signal receiver.

- If you cannot operate, check the settings and the equipment → "VIERA Link features and connections" (p. 38 - 39)
- For details of the operations for the connected equipment, read the manual of the equipment.

#### Access and operate the menu of the equipment

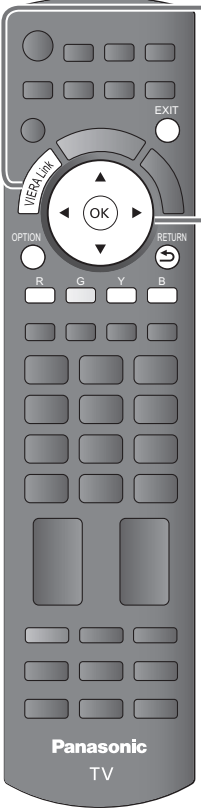

- 1 Display "VIERA Link Menu"**
- 2 Select "VIERA Link Control"**

VIERA Link Menu

Pause Live TV	Start
Direct TV Rec	Start
VIERA Link Control	Recorder
Speaker Selection	Home Cinema

- 3 Select the equipment you want to access**  
The type of the connected equipment is displayed. Select the type of the equipment and access.

VIERA Link Menu

Pause Live TV	Start
Direct TV Rec	Start
VIERA Link Control	Recorder
Speaker Selection	Home Cinema

**Recorder / Player / Home Cinema / Video Camera / LUMIX / Other**

- "Home Cinema" means Player theatre, Blu-ray Disc theatre or Recorder theatre.
- "Other" means Tuner set top box.

**The menu of the accessed equipment**  
(Input mode will be changed automatically)

- 4 Operate the connected equipment**
  1. Set the remote control code to "73" (p. 21)
  2. Follow the operation guide

To display the operation guide → **OPTION**      Store / set / access → **OK**

Move the cursor / select the menu → **Navigation Pad**      Return to the previous menu → **RETURN**

Move the cursor / access / adjust → **Navigation Pad**      Exit the menu → **EXIT**

When the key words are displayed on colour bar → **R G Y B**

**Note**

- Some operations may not be available for some equipment. If so, use its own remote control.

#### If several recorders or players are connected

You can connect up to two recorders or players at the same time.



**Recorder1-2 / Player1-2**

The number is given from the TV's lower HDMI terminal connected to the same type of equipment. For example, when two recorders are connected to HDMI1 and HDMI2, the one connected to HDMI1 is displayed as Recorder1 and the other as Recorder2.

#### If you access the invalid equipment

When the equipment with "HDAVI Control" function is connected



**Recorder / Player / Home Cinema / Video Camera**

Type of the connected equipment is displayed. You can access the menu of the equipment. But you cannot operate it. Use its own remote control to operate the equipment.

# VIERA Link “HDAVI Control™”


Features available (Using VIERA Link Menu)

Speaker control Speaker Selection

You can control the theatre speaker with this TV remote control by pointing at the TV's signal receiver.



- If you cannot operate, check the settings and the equipment ▶ “VIERA Link features and connections” (p. 38 - 39)

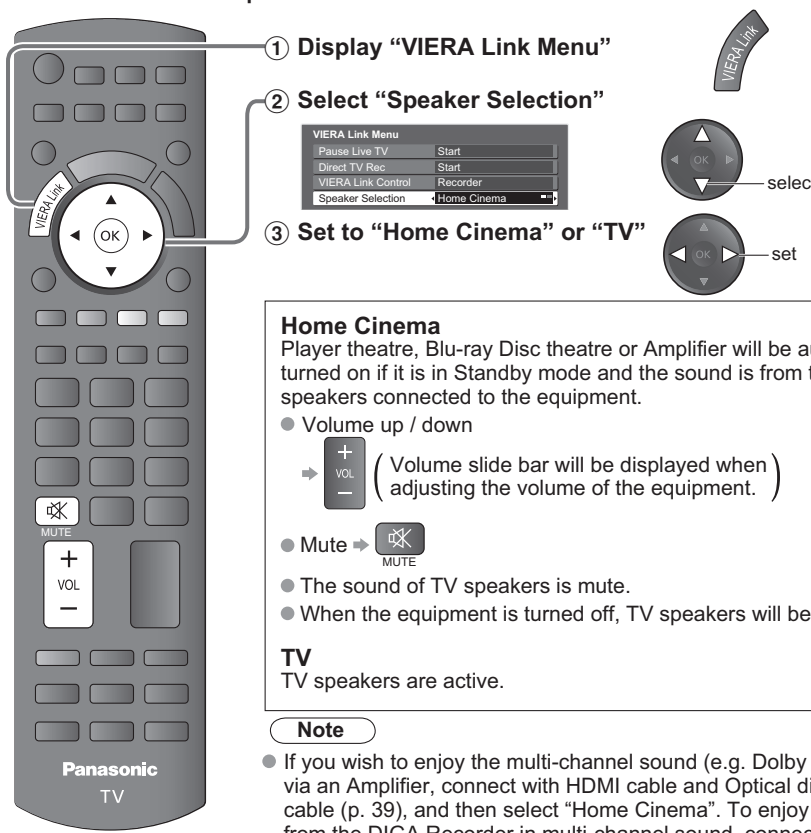**Access and control the speaker volume**



- ① Display “VIERA Link Menu”
- ② Select “Speaker Selection”
- ③ Set to “Home Cinema” or “TV”

**Home Cinema**  
 Player theatre, Blu-ray Disc theatre or Amplifier will be automatically turned on if it is in Standby mode and the sound is from theatre speakers connected to the equipment.

- Volume up / down  
 →  (Volume slide bar will be displayed when adjusting the volume of the equipment.)
- Mute → 
- The sound of TV speakers is mute.
- When the equipment is turned off, TV speakers will be active.

**TV**  
 TV speakers are active.

**Note**


- If you wish to enjoy the multi-channel sound (e.g. Dolby Digital 5.1ch) via an Amplifier, connect with HDMI cable and Optical digital audio cable (p. 39), and then select “Home Cinema”. To enjoy the sound from the DIGA Recorder in multi-channel sound, connect an HDMI cable from the DIGA Recorder to the Amplifier (p. 39).

**Note**

- These functions may not work properly depending on the connected equipment.
- Image or sound may not be available for the first few seconds when input mode is switched.
- Easy playback may be available by using the remote control for Player theatre, Blu-ray Disc theatre or Amplifier. Read the manual of the equipment.
- “HDAVI Control 4” is the newest standard (current as of December, 2008) for HDAVI Control compatible equipment. This standard is compatible with conventional HDAVI equipment.
- To confirm this TV's version of HDAVI Control ▶ “System Information” (p. 25)

# VIERA Tools

With VIERA Tools, you can directly access to some of the useful functions of connected equipment or SD card.

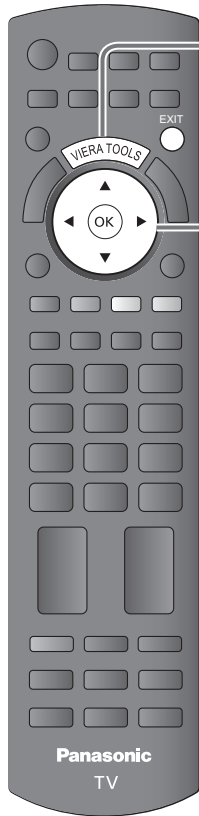


1

## Display VIERA Tools Menu



 2

## Select a feature

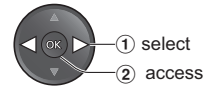

3

## Follow the operation of each feature



VIERA Link Control

VIERA Link Control (p. 43)  
The connected device can be operated with the VIERA remote control.  
When multiple devices are connected, an indicator appears below the icon so that one device can be selected.



Pause Live TV

Pause Live TV (p. 42)  
A live TV programme can be paused and resumed later.



Direct TV Rec

Direct TV Rec (p. 41)  
What is on TV can be recorded immediately.



Speaker Selection

Speaker Control (p. 44)  
Theatre speaker can be set.



Slideshow

SD card slideshow (p. 36)  
Photo slideshow will start.



Photos

SD card photo view (p. 35)  
Photo folders are displayed.



Movies

SD card movie view (p. 37)  
The title list for SD movie image is displayed.


To return to TV  
EXIT or →

VIERA Link "HDAVI Control"  
VIERA Tools

Advanced

# External Equipment


These diagrams show our recommendations for how to connect the TV to your various equipment. For other connections, consult the instructions for each piece of equipment, the table below, and the specifications (p. 55).

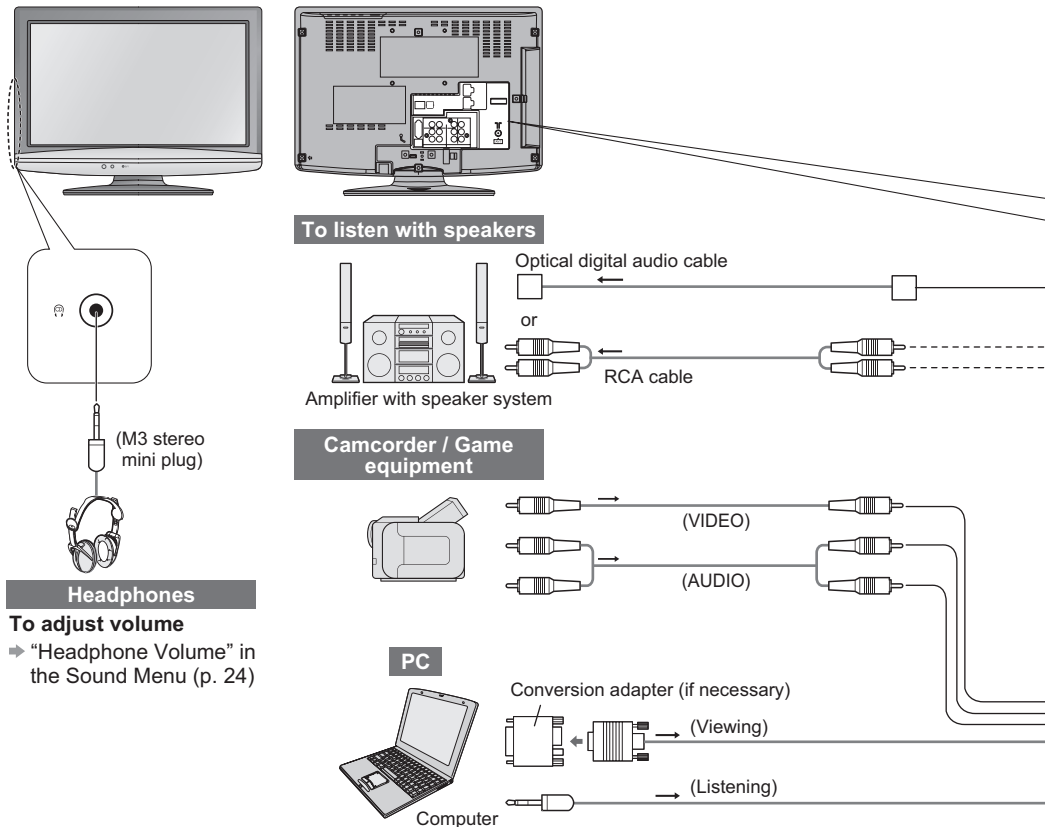


Types of connectable equipment to each terminal

Terminal	AV1 IN	AV2 IN	DIGITAL AUDIO OUT
Recording / Playback (equipment)			
To record / playback videocassettes / DVDs (VCR / DVD recorder)	○	○	
To watch DVDs (DVD player)	○	○	
To watch camcorder images (Video camera)	○	○	
To watch satellite broadcasts (Set top box)	○	○	
To play games (Game equipment)	○	○	
To use amplifier with speaker system			○
VIERA Link			

○: Recommended Connection

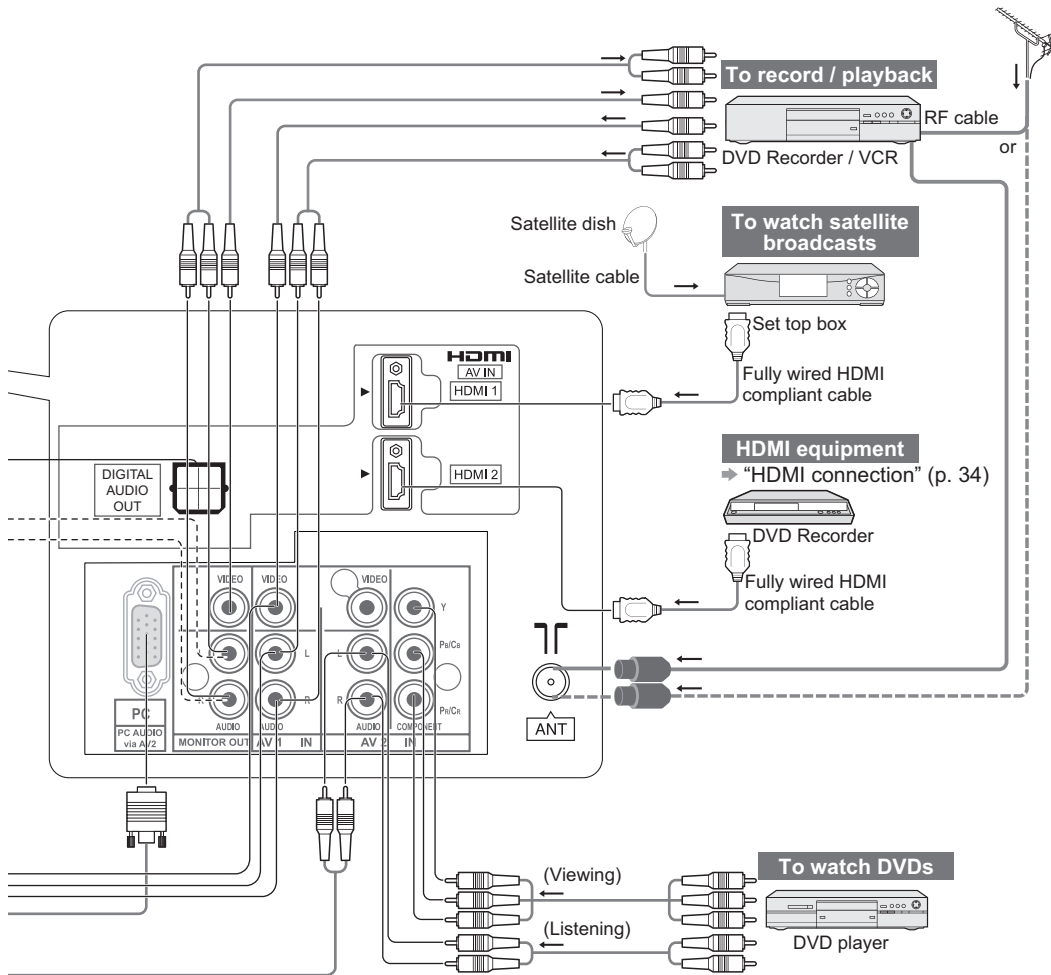

MONITOR OUT	HDMI 1	HDMI 2
VIDEO		
L		
R		
VIDEO		
L		
R		
VIDEO		
L		
R		
VIDEO		
L		
R		

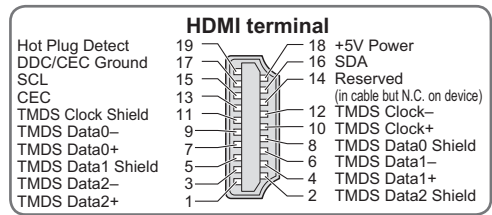

● Connect the COMPONENT or VIDEO terminal when using AV2 IN terminals.

External Equipment

Advanced

# Technical Information

## Channel Allocation (Analogue TV mode)

CH Display / Receive Channel			
CH 0 - CH 5	S 2 - S 10	CH 5A	CH 6 - CH 9
CH 9A	CH 10 - CH 12	S 11 - S 44	CH 20 - CH 75

## Rating (Digital TV mode)

Rating	Meaning	Rating	Meaning
-	Not classified	M	Mature
P	Pre school	MA 15+	Mature Adult 15+
C	Children	AV 15+	Adult strong Violence 15+
G	General	R	Restricted 18+
PG	Parental Guidance recommended		

## Updating the software system (Digital TV mode)

Update system software to ensure that you have latest version software.  
If there is an update available, a notification banner is displayed when the channel has the update information.

- To download new software, press "OK" → Downloading (approx. 1 hour)  
If you choose not to download, press "EXIT".

### To update automatically

Set "Auto Update Search in Standby" to "On" (p. 27)

If there is a new version software being broadcast, the TV will download this automatically.

- The automatic updating sequence is carried out at 3:00 AM and 5:00 AM every morning under the following condition.  
Standby (TV turned Off with the remote control)  
Recording is not in progress.

### To update manually

Perform "System Update Search Now" (p. 27)

If there is an update available, a notification banner is displayed.

#### Note

- During downloading, do not turn Off the TV or touch any buttons.  
(The TV is automatically activated after downloading is completed.)
- When the TV is switched to standby, there will be a clicking sound after a short delay. Similar clicking sounds will also occur at 3:00 AM and 5:00 AM when "Auto update Search in Standby" (p. 27) is set to "On". These sounds are normal.

## Stereo / Bilingual Sound Selection (Analogue TV mode)

⊞/▽ When you receive the stereo / bilingual sound system, sound output modes can be selected by ⊞/II pressing the **Stereo / Bilingual Sound Selection** button.

Audio Signal	STEREO	MAIN I	SUB II	MONO
Mode Indicator	⊞	I	II	▽

**NICAM** .....Used in New Zealand, Singapore, Hong Kong etc.

Type of broadcast	Regular broadcast (Standard Audio)	Regular + NICAM MONO I (MAIN I)	NICAM STEREO	NICAM DUAL MONO (MAIN I / SUB II)
Mode Indicator	No Indicator ↔ ▽	I ↔ ▽	⊞ ↔ ▽	I → II ↑ ▽ ↓

**A2 (German)** .....Used in Australia, Malaysia etc.

Type of broadcast	Regular broadcast (Standard Audio)	BILINGUAL or DUAL MONO: MAIN I / SUB II	STEREO
Mode Indicator	No Indicator ↔ ▽	I ↔ II	⊞ ↔ ▽

- If the stereo signal is poor or the receiving conditions are not optimum or if STEREO:MONO automatic switching occurs, it is recommended you switch from STEREO to MONO.
- Even when the contents of the receiving signal undergo changes, selection mode is kept intact.
- When the receiving conditions deteriorate, listening will be easier if the mode is set to the MONO position, using the stereo / bilingual sound selection button.
- DUAL, also known as DUAL MONO or as BILINGUAL is not currently transmitted in some countries.



## SD Card

### Cautions in handling SD Card

- Do not remove the card while the TV is accessing data (this can damage card or TV).
- Do not touch the pins on the back of the card.
- Do not subject the card to a high pressure or impact.
- Insert the card in the correct direction (otherwise, card may be damaged).
- Electrical interference, static electricity, or erroneous operation may damage the data or card.
- Back up the recorded data at regular intervals in case of deteriorated or damaged data or erratic operation of the TV. (Panasonic is not liable for any deterioration or damage of recorded data.)

### Data format for Card browsing

Photo : Still images recorded with digital still cameras compatible with JPEG files of DCF\* and EXIF standards

Data format - Baseline JPEG (Sub-sampling 4:4:4, 4:2:2 or 4:2:0)  
 Max. number of files - 9,999  
 Image resolution - 8 x 8 to 30,719 x 17,279 pixels

Movie : SD-Video Standard Ver. 1.2 [MPEG-2 (PS format)] and AVCHD Standard compatible files with an audio format that is either MPEG-1/Layer-2 format or Dolby Digital format (AVCHD files recorded with vertical frequency 50Hz are applicable. A modified data with a PC may not be displayed correctly.)

- Compliant card type (maximum capacity): SDHC Card (32 GB), SD Card (2 GB) and miniSD Card (2 GB) (requiring miniSD adapter)
- If miniSD Card is used, insert / remove it together with the adapter.
- Check the latest information on the card type at the following website. (English only)  
<http://panasonic.co.jp/pavc/global/cs/>  
 \* DCF (Design rule for camera file system): Unified standard established by Japan Electronics and Information Technology Industries Association (JEITA).

### Note

- Format the card with the recording equipment.
- The picture may not appear correctly on this TV depending on the recording equipment used.
- Display may take some time when there are many files and folders.
- This function cannot display Motion JPEG and still image not JPEG formatted (i.e. TIFF, BMP).
- A JPEG image modified with a PC may not be displayed.
- Images imported from a PC must be compatible with EXIF (Exchangeable Image File) 2.0, 2.1, and 2.2.
- Partly degraded files might be displayed at a reduced resolution.
- All ".JPG" extension data in the card will be read in Photo View Mode.
- The folder and file names may be different depending on the digital camera used.
- Do not use two-byte characters or other special codes.
- The card may become unusable with this TV if file or folder names are changed.

### On screen messages

Message	Meaning / Action
<b>Cannot read file</b>	<ul style="list-style-type: none"> <li>● The file is broken or unreadable.</li> <li>▶ ● The TV does not support the format. (For the applicable formats and data, see above.)</li> </ul>
<b>Please confirm the SD card is OK</b>	▶ ● The inserted SD card has a problem.
<b>No SD card inserted</b>	▶ ● Insert a SD Card.
<b>No valid file to play</b>	▶ ● The card has no data.
<b>Over 9999 pictures found (max. is 9999)</b>	▶ ● Maximum valid number of photos is 9,999.
<b>This operation is not possible</b>	▶ ● Your operation is not available.

# Technical Information

## PC connection

A PC may be connected to this TV so that the PC screen is displayed and sound is heard from the TV.

 
- PC signals that can be input: Horizontal scanning frequency 31 to 69 kHz; vertical scanning frequency 59 to 86 Hz (more than 1,024 signal lines could result in incorrect display of the image).
- A PC adapter is not necessary for the DOS/V-compliant D-sub 15-pin connector.

### Note

- Some PC models cannot be connected to this TV.
- When using PC, set the colour display quality of PC to the highest position.
- For details of the applicable PC signals, see below.
- Max. display resolution

Aspect	4:3	1,024 x 768 pixels
	16:9	1,366 x 768 pixels

- D-sub 15-pin connector signal

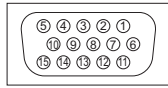

Pin No.	Signal Name	Pin No.	Signal Name	Pin No.	Signal Name
①	R	⑥	GND (Ground)	⑪	NC (not connected)
②	G	⑦	GND (Ground)	⑫	NC (not connected)
③	B	⑧	GND (Ground)	⑬	HD
④	NC (not connected)	⑨	NC (not connected)	⑭	VD
⑤	GND (Ground)	⑩	GND (Ground)	⑮	NC (not connected)

## Input signal that can be displayed

### COMPONENT (Y, PB/CB, PR/CR), HDMI

\* Mark: Applicable input signal

Signal name	COMPONENT	HDMI
525 (480) / 60i	*	*
525 (480) / 60p	*	*
625 (576) / 50i	*	*
625 (576) / 50p	*	*
750 (720) / 60p	*	*
750 (720) / 50p	*	*
1,125 (1,080) / 60i	*	*
1,125 (1,080) / 50i	*	*
1,125 (1,080) / 60p	*	*
1,125 (1,080) / 50p	*	*
1,125 (1,080) / 24p		*

### PC (D-sub 15P)

Signal name	Horizontal frequency (kHz)	Vertical frequency (Hz)
640 x 400 @70 Hz	31.47	70.07
640 x 480 @60 Hz	31.47	59.94
640 x 480 @75 Hz	37.50	75.00
800 x 600 @60 Hz	37.88	60.32
800 x 600 @75 Hz	46.88	75.00
800 x 600 @85 Hz	53.67	85.06
852 x 480 @60 Hz	31.44	59.89
1,024 x 768 @60 Hz	48.36	60.00
1,024 x 768 @70 Hz	56.48	70.07
1,024 x 768 @75 Hz	60.02	75.03
1,024 x 768 @85 Hz	68.68	85.00
1,280 x 1,024 @60 Hz	63.98	60.02
1,280 x 768 @60 Hz	47.70	60.00
1,366 x 768 @60 Hz	48.39	60.04
Macintosh13" (640 x 480)	35.00	66.67
Macintosh16" (832 x 624)	49.73	74.55
Macintosh21" (1,152 x 870)	68.68	75.06


### Note

- Signals other than above may not be displayed properly.
- The above signals are reformatted for optimal viewing on your display.
- Applicable input signal for PC is basically compatible to VESA standard timing.
- PC signal is magnified or compressed for display, so that it may not be possible to show fine detail with sufficient clarity.

# FAQs

Before requesting service or assistance, please follow these simple guides to resolve the problem. If problem still persists, please contact your local Panasonic dealer for assistance.

## White spots or shadow images (noise)

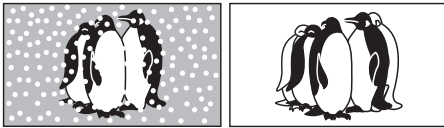

- Check the position, direction, and connection of the aerial.

## The main unit is hot


- The main unit radiates heat and some of the parts may become hot. This is not a problem for performance or quality.  
Setup in a location with good ventilation.  
Do not cover the ventilation holes of the TV with a tablecloth, etc., and do not place on top of other equipment.

## Neither image nor sound is produced

- Is the TV in "AV mode"?
- Is the mains lead plugged into the socket outlet?
- Is the TV turned On?
- Check Picture Menu (p. 24) and volume.

## An error message appears

- Follow the message's instructions.
- If the problem persists, contact your local Panasonic dealer.

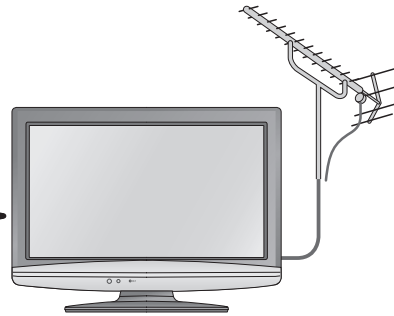

## There may be red spots, blue spots, green spots and black spots on the screen

- This is a characteristic of liquid crystal panels and is not a problem. The liquid crystal panel is built with very high precision technology giving you fine picture details. Occasionally, a few non-active pixels may appear on the screen as a fixed point of red, green, blue or black.  
Please note this does not affect the performance of your LCD and it is not a quality problem.


## The LCD panel moves slightly when it is pushed with a finger

### Clattered sound might be heard

- There are some looseness around the panel to prevent the damage to the panel.  
The panel might move slightly when it is pushed with a finger, and clattered sound might be heard. This is not a malfunction.

# FAQs

	Problem	Actions
Screen	<b>Chaotic image, noisy</b>	<ul style="list-style-type: none"> <li>● Set "P-NR" in the Picture Menu (to remove noise). (p. 24)</li> <li>● Check nearby electrical products (car, motorcycle, fluorescent lamp).</li> </ul>
	<b>No image can be displayed</b>	<ul style="list-style-type: none"> <li>● Is "Colour" or "Contrast" in the Picture Menu set to the minimum? (p. 24)</li> </ul>
	<b>Blurry or distorted image</b> (no sound or low volume)	<ul style="list-style-type: none"> <li>● Reset channel. (p. 32)</li> </ul>
	<b>Unusual image is displayed</b>	<ul style="list-style-type: none"> <li>● Turn off the TV with Mains power On / Off switch, then turn it on again.</li> </ul>
	<b>"Shop" appears on screen at switch on</b>	<ul style="list-style-type: none"> <li>● "Shop" was selected in "Auto Tuning" (p. 12). Reset all settings in "Shipping Condition" (p. 32), then select "Home" in "Auto Tuning" (p. 12).</li> </ul>
Sound	<b>No sound is produced</b>	<ul style="list-style-type: none"> <li>● Is "Sound mute" active? (p. 10)</li> <li>● Is the volume set to the minimum?</li> </ul>
	<b>Sound level is low or sound is distorted</b>	<ul style="list-style-type: none"> <li>● Sound signal reception may be deteriorated.</li> <li>● Set "MPX" (p. 24) in the Sound Menu to "Mono".</li> </ul>
HDMI	<b>Sound is unusual</b>	<ul style="list-style-type: none"> <li>● Set the sound setting of the connected equipment to "2ch L.PCM".</li> <li>● Check the "HDMI1 Input" setting in the Sound Menu. (p. 25)</li> <li>● If digital sound connection has a problem, select analogue sound connection. (p. 34)</li> </ul>
	<b>Pictures from external equipment are unusual when the equipment is connected via HDMI</b>	<ul style="list-style-type: none"> <li>● Is the HDMI cable connected properly? (p. 46)</li> <li>● Turn Off the TV and equipment, then turn them On again.</li> <li>● Check an input signal from the equipment. (p. 50)</li> <li>● Use an equipment compliant with EIA/CEA-861/861B.</li> </ul>

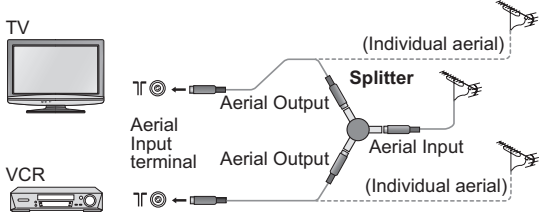Problem	Actions
<p><b>Aerial connection when using DTV and VCR / DVD Recorder</b></p>	<ul style="list-style-type: none"> <li>Digital TV reception technology requires high quality, robust DTV signals which in some domestic aerial installations, may be relatively poor despite good analogue reception.</li> <li>To maintain optimum signal quality from TV aerial, use a TV aerial splitter (as illustrated) when connecting two or more equipments to the same aerial.</li> </ul> 
<p><b>After Digital TV Auto Tuning only some or no services are found</b></p>	<ul style="list-style-type: none"> <li>Check to ensure your area is covered by DVB transmissions.</li> <li>Check that the aerial and antenna cable are designed for DVB. For your safety, the aerial and cable should be inspected / installed by a licenced installer that should comply with Australian Standard AS1417.1. Note: If you live within 5-10 Km of DVB transmission towers, a combined VHF / UHF aerial should be adequate. Outside this area, separate VHF and UHF aerials provide superior reception performance.</li> <li>If you live in a unit or apartment, check to ensure the Master Antenna TV (MATV) system is designed for analogue and DVB-T reception. Please consult your body corporate.</li> </ul>
<p><b>Picture regularly breaks up on some programmes, or "No Signal" message</b></p>	<ul style="list-style-type: none"> <li>Check "Signal Condition". (p. 31) If "Signal Quality" or "Signal Strength" are displayed in red or constantly changing, check aerial. If problem persists consult your local TV aerial installer.</li> <li>Check that the aerial and antenna cable are designed for DVB. For your safety, the aerial and cable should be inspected / installed by a licenced installer that should comply with Australian Standard AS1417.1.</li> <li>Interference (known as impulse noise) from household appliances such as light switches, fridges etc may cause picture break up and / or audio distortion. Use high quality quad shielded coaxial cable fly lead between TV and antenna wall socket to minimise impulse noise pickup. If problem persists consult your local TV aerial installer.</li> <li>When "No Signal" message is displayed check TV aerial connection.</li> <li>The received signal may be too weak to allow the TV to reliably lock to the desired "No Signal" programme to generate a stable picture. Repeat the tuning procedure (p. 31). If problem persists consult your local TV aerial installer.</li> </ul>
<p><b>Picture very infrequently breaks up on some or all programmes</b></p>	<ul style="list-style-type: none"> <li>Electrical atmospheric interference caused by local or distant lightning storms or heavy rain with wind in "leafy" locations may cause pictures to break up and audio to mute or distort momentarily.</li> <li>Impulse noise interference from an infrequently used electrical appliance, or a passing vehicle or lawn mower with a "noisy" ignition system.</li> </ul>

# FAQs

	Problem	Actions
Other	TV takes so long to turn on	<ul style="list-style-type: none"><li>● Like your computer, the TV has to run a number of diagnostic and software checks before it can display any programmes.</li></ul>
	The programme cannot be changed	<ul style="list-style-type: none"><li>● Is the TV in Teletext mode? (p. 18)</li></ul>
	The programme cannot be selected	<ul style="list-style-type: none"><li>● Is the programme skipped? (p. 29)</li></ul>
	TV goes into "Standby mode"	<ul style="list-style-type: none"><li>● Off Timer function is activated.</li><li>● The TV enters "Standby mode" about 30 mins. after analogue broadcasting ends.</li></ul>
	The remote control does not work	<ul style="list-style-type: none"><li>● Are the batteries installed correctly? (p. 7)</li><li>● Has the TV been switched On?</li></ul>

# Specifications

Power	<b>Power rating</b>	AC 220-240 V, 50/60 Hz 0.35A	
	<b>Normal (Home) mode</b>	36 W	
	<b>Standby condition</b>	0.9 W	
Display panel	<b>Aspect Ratio</b>	16:9	
	<b>Visible screen size</b>	47 cm (diagonal) 409.8 mm (W) x 230.4 mm (H)	
	<b>Number of pixels</b>	1,049,088 (1,366 (W) x 768 (H))	
Sound	<b>Speaker</b>	Full range x 2 pcs, 8 Ω	
	<b>Audio Output</b>	6 W (3 W + 3 W), 10% THD	
	<b>Headphones</b>	M3 (3.5 mm) stereo mini Jack x 1	
<b>PC signals</b>	VGA, SVGA, XGA SXGA .... (compressed) Horizontal scanning frequency 31 - 69 kHz Vertical scanning frequency 59 - 86 Hz		
<b>Receiving Systems / Band name</b>	<b>PAL B/G</b>	Reception of Off air broadcasts	
	<b>DVB-T</b>	7 MHz VHF / UHF (Australia) free-to-air TV broadcast reception	
	<b>PAL 60 Hz</b>	Playback of NTSC tape from some PAL Video recorders (VCR)	
	<b>M.NTSC</b>	Playback from M. NTSC Video recorders (VCR)	
<b>NTSC</b>	Playback from NTSC Video recorders (VCR)		
<b>Aerial - Rear</b>	VHF / UHF		
<b>Operating Conditions</b>		<b>Temperature</b> : 0 °C - 35 °C <b>Humidity</b> : 20 % - 80 % RH (non-condensing)	
<b>Connection Terminals</b>	<b>AV1 Input</b>	<b>AUDIO L - R</b>	RCA PIN Type x 2      0.5 V[rms]
		<b>VIDEO</b>	RCA PIN Type x 1      1.0 V[p-p] (75 Ω)
	<b>AV2 Input</b>	<b>AUDIO L - R</b>	RCA PIN Type x 2      0.5 V[rms]
		<b>VIDEO</b>	RCA PIN Type x 1      1.0 V[p-p] (75 Ω)
		<b>COMPONENT</b>	Y P <sub>B</sub> /C <sub>B</sub> , P <sub>R</sub> /C <sub>R</sub> 1.0 V[p-p] (including synchronization) ±0.35 V[p-p]
	<b>Others</b>	<b>HDMI1 - 2 Input</b>	TYPE A Connectors      ● This TV supports "HDAVI Control 4" function.
		<b>PC Input</b>	HIGH-DENSITY D-SUB 15PIN      R, G, B/0.7 V[p-p] (75 Ω) HD, VD/TTL Level 2.0 - 5.0 V[p-p] (high impedance)
		<b>DIGITAL AUDIO OUT</b>	PCM / Dolby Digital, Fiber optic
		<b>Card slot</b>	SD Card slot x 1
	<b>Monitor Output</b>	<b>AUDIO L - R</b>	RCA PIN Type x 2      0.5 V[rms] (high impedance)
<b>VIDEO</b>		RCA PIN Type x 1      1.0 V[p-p] (75 Ω)	
<b>Dimensions ( W x H x D )</b>		472 mm x 361 mm x 174 mm (With Pedestal) 472 mm x 323 mm x 67 mm (TV only)	
<b>Mass</b>		5.5 kg Net (With Pedestal) 5.0 kg Net (TV only)	

## Note

- Design and Specifications are subject to change without notice. Weight and Dimensions shown are approximate.

## WARRANTY - Australia only

1. The product is warranted for 12 months from the date of purchase. Subject to the conditions of this warranty Panasonic or its Authorised Service Centre will perform necessary service on the product without charge for parts or labour if, in the opinion of Panasonic, the product is found to be faulty within the warranty period.
  2. This warranty only applies to Panasonic products purchased in Australia and sold by Panasonic Australia or its Authorised Distributors or Dealers and only where the products are used and serviced within Australia or its territories. Warranty cover only applies to service carried out by a Panasonic Authorised Service Centre and only if valid proof of purchase is presented when warranty service is requested.
  3. This warranty only applies if the product has been installed and used in accordance with the manufacturer's recommendations (as noted in the operating instructions) under normal use and reasonable care (in the opinion of Panasonic). The warranty covers normal domestic use only and does not cover damage, malfunction or failure resulting from use of incorrect voltages, incorrect installation, accident, misuse, neglect, build-up of dirt or dust, abuse, maladjustment of customer controls, mains supply problems, thunderstorm activity, infestation by insects or vermin, tampering or repair by unauthorised persons (including unauthorised alterations), exposure to abnormally corrosive conditions or any foreign object or matter having entered the product.
  4. This warranty does not cover the following items unless the fault or defect existed at the time of purchase:

(a) Video or Audio Tapes	(d) Cabinet Parts	(g) Microwave Oven cook plates.
(b) Video or Audio Heads and Stylus resulting from wear and tear in normal use	(e) User replaceable Batteries	(h) Kneader mounting shaft unit (bread bakery)
(c) Shaver Heads or Cutters	(f) Thermal Paper, Toner/Ink Cartridges, Drums, Developer, Film (Ink/Ribbon), Film Cartridge, Printer Heads	
  5. If warranty service is required you should:
    - Telephone Panasonic's Customer Care Centre on 132600 or visit our website and use the Service Centre Locator for the name/address of the nearest Authorised Service Centre.
    - Send or bring the product to a Panasonic Authorised Service Centre together with your proof of purchase receipt as a proof of purchase date.  
Please note that freight and insurance to and / or from your nearest Authorised Service Centre must be arranged by you.
    - Note that home or pick-up/delivery service is available for the following products in the major metropolitan areas of Australia or the normal operating areas of the nearest Authorised Service Centres:

(a) Picture tube (CRT) based Television Receivers (screen sizes greater than 66cm); Rear Projection TV's; Plasma/LCD (screen size greater than 103 cm)	(b) Convection/Combination Microwave Ovens	(c) Whiteboard (except portable type) televisions / displays
--	--	--
  6. The warranties hereby conferred do not extend to, and exclude, any costs associated with the installation, de-installation or re-installation of a product, including costs related to the mounting, de-mounting or remounting of any screen, (and any other ancillary activities), delivery, handling, freighting, transportation or insurance of the product or any part thereof or replacement of and do not extend to, and exclude, any damage or loss occurring by reason of, during, associated with, or related to such installation, de-installation, re-installation or transit.
- Panasonic Authorised Service Centres are located in major metropolitan areas and most regional centres of Australia, however, coverage will vary dependant on product. For advice on exact Authorised Service Centre locations for your product, please telephone our Customer Care Centre on 132600 or visit our website and use the Service Centre Locator.
- Unless otherwise specified to the consumer the benefits conferred by this express warranty are additional to all other conditions, warranties, guarantees, rights and remedies expressed or implied by the Trade Practices Act 1974 and similar consumer protection provisions contained in legislation of the States and Territories and all other obligations and liabilities on the part of the manufacturer or supplier and nothing contained herein shall restrict or modify such rights, remedies, obligations or liabilities. November 2005

**THIS WARRANTY CARD AND THE PURCHASE DOCKET (OR SIMILAR PROOF OF PURCHASE) SHOULD BE RETAINED BY THE CUSTOMER AT ALL TIMES**

If you require assistance regarding warranty conditions or any other enquiries,  
please visit the **Panasonic Australia** website  
**www.panasonic.com.au** or by phone on 132 600  
If phoning in, please ensure you have your operating instructions available.

### Panasonic Australia Pty. Limited

ACN 001 592 187 ABN 83 001 592 187  
Locked Bag 505, Frenchs Forest, NSW 2086  
www.panasonic.com.au

PRO-031-F01 Issue: 3.0

23-11-2005

## Customer's Record

The model number and serial number of this product may be found on its rear panel. You should note this serial number in the space provided below and retain this book, plus your purchase receipt, as a permanent record of your purchase to aid in identification in the event of theft or loss, and for Warranty Service purposes.

Model Number \_\_\_\_\_

Serial Number \_\_\_\_\_

Panasonic Corporation

Web Site: <http://panasonic.net/>

© Panasonic Corporation 2009