Controllers Controllers

**Remote Temperature Sensor** 

REMOTE SENSOR

 This is a remote sensor which can be used with indoor units. Use it to detect the room temperature when no remote controller sensor or body sensor is

used (connection to a system without a

remote controller is possible).

• For joint use with a remote control switch, use the remote control switch

as main remote controller.

# Controllers

A wide variety of control options to meet the requirements of different applications.

Operation system	Individual control systems			
Requirements	Simplified high-spec operation	High-spec operation	Normal operation	Operation from anywhere in the room
External appearance	25.0c 25.0c	7.5 MI 28 % % % % % % % % % % % % % % % % % % %	126 ese	20 = 15
	Simplified high-spec Wired Remote Controller with Bluetooth	High-spec Wired Remote Controller	Timer Remote Controller (Wired)	Wireless Remote Controller
Type, model name	CZ-RTC6WBL/*CZ-RTC6WBLW (White) CZ-RTC6BL/*CZ-RTC6BLW (Black) *Available for particular types of VRF indoor units	CZ-RTC5B	CZ-RTC4	Controller: CZ-RWS3 Receiver: CZ-RWRU3 CZ-RWRL3 CZ-RWRD3 CZ-RWRT3 CZ-RWRC3
Built-in thermostat	•	•	•	_
nanoe™ X on/off control *not applies to Floor Console	•	•	_	•
ECONAVI ON/OFF control	•	•	•	•
Number of indoor units which can be controlled	1 group, 8 units	1 group, 8 units	1 group, 8 units	1 group, 8 units
Use limitations	Up to 1 controller can be connected per group	Up to 2 controllers can be connected per group (When using ECONAVI sensor, only one remote controller is possible to connect at indoor unit)	Up to 2 controllers can be connected per group (When using ECONAVI sensor, only one remote controller is possible to connect at indoor unit)	Up to 2 controllers can be connected per group.
Function ON/OFF	•	•	•	•
Mode setting		•	•	•
Fan speed setting				•
Temperature setting	•	•	•	•
Air flow direction		•	•	•
Permit/Prohibit switching	_	_	_	_
Weekly program *	•	•	•	_

All specifications are subject to change without notice. \*(CZ-RTC6(W)BL/CZ-RTC6(W)BLW with H&C Control App)

Centralised control systems				SMART CONTROL SYSTEMS	
Operation with various functions from a central location	Only ON/OFF operation from a central location	Simplified load distribution ratio (LDR) for each tenant	Connection with 3rd Party Controller	Cloud connectivity, operation from anywhere	Schneider Electric room controller
ITOTT & CETTUAL IOCATION	ITOTT a Certifal location	10.4 in. touch screen panel color LCD		operation from anywhere	room controller
2 4 9 8 4 4 4 4 4 5 6 6 6 6 6 6 6 6 6 6 6 6 6 6		<u> </u>	Seri-Para I/O unit for outdoor unit	pa s III	23.5
System Controller	ON/OFF Controller	Intelligent Controller	CZ-CAPDC2	WLAN Smart Adaptor Comfort Cloud App	VRF smart connectivity+
CZ-64ESMC3	CZ-ANC3	CZ-256ESMC3 (CZ-CFUNC2)	Interface Adaptor	CZ-CAPWFC1	SER8150 (room controller)
_	_	_	CZ-CAPC3	_	•
_	_	_	Seri-Para I/O unit	_	_
•	_	•	for each indoor unit	•	_
64 groups, max. 64 units	16 groups, max. 64 units	64 units x 16 systems, max. 256 units	CZ-CAPBC2	1 adaptor : 1 group, 8 units. Multiple adaptors for each indoor units : 200 units(10 location x 20 units)	1 group, 8 units
Up to 10 controllers, can be connected to one system.  Main unit/sub unit (1 main unit + 1 sub unit) connection is possible. Use without remote controller is possible.	Up to 8 controllers     (4 main units + 4 sub units)     can be connected to one system.     Use without remote controller is impossible.	A communication adaptor (CZ-CFUNC2) must be installed for three or more links.	Communication Adaptor	Mobile device, free App and internet router is required separatelly.     Wired remote controller (master) required.	Up to 1 controller can be connected per IDU     Wired to R1/R2     VRF and PAC(S-link) model only
			CZ-CFUNC2		
	_		LonWorks Interface		
	_		LONWOINS IIILENIACE		
	_	•	1	•	•
•	_	•	CZ-CLNC2	•	•
•	•	•		_	_
	_		-		_

# Simplified wired remote controller (CZ-RTC6WBL/CZ-RTC6BL)



# High-spec wired remote controller (CZ-RTC5B)




	CZ-RTC6WBL/ CZ-RTC6BL	CZ-RTC6BL + H&C CONTROL APP	CZ-RTC5B
Energy Saving			
ECONAVI on/off	•	•	•
Temperature Auto Return	_	•*1	•
Temperature Setting range	_	•*1	•
Auto Shutoff	_	●*1	•
Schedule peak cut	_	●*1	•
Repeat off timer	_	●*1	•
Basic Operation			
Individual Louver Control(Lock individual flap for for 4-WAY cassette)	_	●*1	•
ON/OFF timer	_	●*1	•
Weekly timer	_	●*1	•
Filter information	<b>●</b> *2	●*1*2	<b>●</b> *2
Outing function	•	•	•
Quiet operation mode	_	●*1*2	<b>●</b> *2
Power consumption monitor	_	●*1*2	<b>•</b> *2
Energy saving	_	●*1*2	<b>●</b> *2
initial settings	_	_	•
Ventilation	_	●*1	•
nanoe <sup>TM</sup> X	<b>●</b> *2	●*1*2	<b>•</b> *2
Maintenance Function			
Outdoor unit error data	_	_	_
Service Contact address	_	●*1	_
RC setting mode	•	•	•
Test run	•	•	•
Sensor information	<b>●</b> *2	●*²	<b>•</b> *2
Service check	•	•	•
Simple/Detailed Settings	•	•	•
Auto address	•	<b>●</b> *3	•
Initial Settings			
Rotation operation	_	●*1	•
Backup operation	_	●*1	•
Support operation	_	<b>●</b> *1	

<sup>\*1</sup> Only with H&C Control App \*2 Subject to the connected model \*3 Only with remote controller operation Note: Product images not to scale.

## Individual Control Systems

Control contents	Part name, model No.	Quantity
Standard Control Control of the various operations of the indoor unit by wired or wireless remote controller. Cooling or heating mode of the outdoor unit is decided by the first priority of the remote controller. Switching between remote controller sensor and body sensor is possible.	Wired remote controller CZ-RTC4,CZ-RTC5B,CZ-RTC6WBL/CZ-RTC6BL Wireless remote controller + Receiver CZ-RWS3 (Wall Mounted/ Mini Cassette) CZ-RWS3 + CZ-RWRU3 (4-WAY Cassette) CZ-RWS3 + CZ-RWRL3 (2-WAY Cassette) CZ-RWS3 + CZ-RWRD3 (1-WAY Cassette) CZ-RWS3 + CZ-RWRT3 (Ceilling Mounted) CZ-RWS3 + CZ-RWRC3 (All split type)	1 unit each
(1) Group control  Batch remote control on all indoor units.  Operation of all indoor units in the same mode.  Up to 8 units can be connected.  The sensor is the body sensor, and thermostat ON/OFF setting in regard to the temperature set by the remote controller is possible for each indoor unit.	Wired remote controller CZ-RTC4,CZ-RTC5B,CZ-RTC6WBL/CZ-RTC6BL Wireless remote controller + Receiver CZ-RWS3 (Wall Mounted/ Mini Cassette) CZ-RWS3 + CZ-RWRU3 (4-WAY Cassette) CZ-RWS3 + CZ-RWRU3 (2-WAY Cassette) CZ-RWS3 + CZ-RWRD3 (1-WAY Cassette) CZ-RWS3 + CZ-RWRD3 (1-WAY Cassette) CZ-RWS3 + CZ-RWRD3 (1-WAY Cassette) CZ-RWS3 + CZ-RWRC3 (All split type)	As required
(2) Main/sub remote control  Max 2 remote controllers per indoor unit. (Main remote controller can be connected)  The button pressed last has priority.  Timer setting is possible even with the sub remote controller. (When using ECONAVI sensor, only one remote controller is possible to connect at indoor unit)	Wired remote controller CZ-RTC4,CZ-RTC5B,CZ-RTC6WBL/CZ-RTC6BL Wireless remote controller + Receiver CZ-RWS3 (Wall Mounted/ Mini Cassette) CZ-RWS3 + CZ-RWR13 (4-WAY Cassette) CZ-RWS3 + CZ-RWRL3 (2-WAY Cassette) CZ-RWS3 + CZ-RWRD3 (1-WAY Cassette) CZ-RWS3 + CZ-RWRT3 (Ceiling Mounted) CZ-RWS3 + CZ-RWRC3 (All split type)	As required

### SYSTEM EXAMPLE FSV

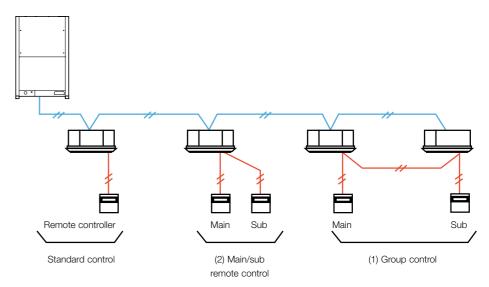

NOTE: Connectable number of controllers, controller combination, connectable indoor units, remote control maximum wiring length are different between the controller. Please confirm the installation Instructions of controller or consult with Panasonic service center.

### Timer remote controller (CZ-RTC4)



Dimensions H 120 x W 120 x D 20 mm

### Basic remote controller ON/OFF

- Operation mode changeover (Cooling, Heating, Dry, Auto, Fan).
- Temperature setting (Cooling/Dry: 18-30 deg Heating: 16-30 deg).
- Fan speed setting H/ M/ L and Auto.
- Air flow direction adjustment.
- ECONAVI on/ off\*

### Time Function 24 hours real time clock

- Day of the week indicator. **Weekly Programme** Function
- A maximum of 6 settings/day and 42 settings/week can be programmed.

### **Outing Function**

• This function can prevent the room temperature from dropping or rising when the occupants are out for a long time.

### Sleeping Function

• This function controls the room temperature for comfortable sleeping.

Max. 8 indoor units can be controlled from one remote controller

Remote control by main remote controller and sub controller is possible

Max. 2 remote controllers (main remote controller and sub controller) can be installed for one indoor unit.

 $^{\star}$  Depending on the model, some menus cannot be used.

### Wireless remote controller



## Remote control by main remote controller and sub controller is possible

 Max. 2 remote controllers (main remote controller and sub controller) can be installed for one indoor unit.

# When CZ-RWS3 is used, wireless control becomes possible for all indoor units

- When a separate receiver is set up in a different room, control from that room also becomes possible.
- Automatic operation by means of the emergency operation button is possible even when the remote controller has been lost or the batteries have been exhausted.


In addition, there are other functions such as temperature setting, operation switching, airflow direction/fan speed setting, etc

### Ventilation independent operation is possible

When commercial ventilation fans or heat-exchange ventilation fans have been installed, they can be operated with this remote control (interlocked operation with the indoor unit or independent ventilation ON/OFF).

### Centralised Control Systems

### System controller (CZ-64ESMC3)

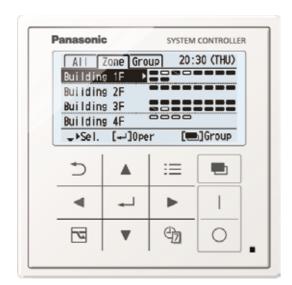

Dimensions
H 120 x W 120 x D 16 + 52
(embedding dimension mm)

Power supply: AC 100 to 240 V I/O part: Remote input part (effective voltage:DC24V) All operation,All stop,Demand 1,Demand 2 Remote output part (non voltage contact) Operation, Alarm (external power supply within DC 30V, max 0.5A) Total wiring length: 1 km

Individual control is possible for max 64 groups, 64 indoor units.

- Control of 64 indoor units divided into 4 zones. (One zone can have up to 16 groups, and one group can have up to 8 units.)
- Control is possible for ON/OFF, operation mode, fan speed, air flow direction, operation monitoring, alarm monitoring, ventilation, remote controller local operation prohibition, etc.

Prohibition setting for Remote controller operation

Setting mode	ON/OFF	Mode	Temperature	Fan speed	Flap
Permit					
Prohibit 1	_				
Prohibit 2	_	_	_		
Prohibit 3		_	_		
Prohibit 4		_			

In case of joint use with a wireless remote controller, there are limitations for the control mode. Please use only with setting "Permit" and "Prohibit1 (prohibition for ON/OFE)"

\*Contents for Prohibit 1~4 can be modified.

- : Operation from the remote controller is possible.
- Operation from the remote controller is possible.
   Operation from the remote controller is prohibited.
- Joint use with a remote controller, an intelligent controller, etc. is possible

(The maximum number of connectable system controllers is 10, including other central controllers on the same circuit.)
(In case of joint use with a wireless remote controller, there are limitations for the control mode. Please use only with setting "Permit" and "Prohibit1 (prohibition for ON/OFF)".)

- Control of systems without a remote controller and of main/sub systems (a total of up to 2 units) is possible
- Weekly timer function
- 8 programs per day (with ON/OFF/Mode/Temperature/Central control setting items) for 1week (7days) can be set.
- Special holiday setting can ignore the timer operation temporary by keeping original timer setting. (Special holiday setting can be removed by same setting display.)
- 5 types of Energy saving function

Set temperature automatic return / Set temperature range limitation / Off remind / Off timer operation / Demand control timer

#### • A control mode corresponding to the use condition can be selected from 10 patterns

A: Operation mode: Central control mode or remote control mode can be selected

Central control mode: The system controller is used as centralised control device. (Setting from a remote controller can be prohibited by prohibiting local operation from the system controller.)


Remote control mode: The system controller is used as a remote controller. (Setting from the system controller can be prohibited by prohibiting local operation from another central control unit.)

B: Controlled unit number mode: All mode or zone 1, 2, 3, 4 mode can be selected


All mode: All, zone, or group unit can be selected.

Zone 1, 2, 3, 4 mode: Setting is possible only for the indoor units of zone 1, 2, 3, or 4.

Connection example			
		A Operation mode	
		Central control mode	Remote control mode
	All mode	All central control Example 1	All remote control
В	Zone 1 mode	Zone 1 central control Example 2	Zone 1 remote control
Controlled unit number	Zone 2 mode	Zone 2 central control	Zone 2 remote control Example 3
mode	Zone 3 mode	Zone 3 central control Example 4	Zone 3 remote control
	Zone 4 mode	Zone 4 central control	Zone 4 remote control Example 5

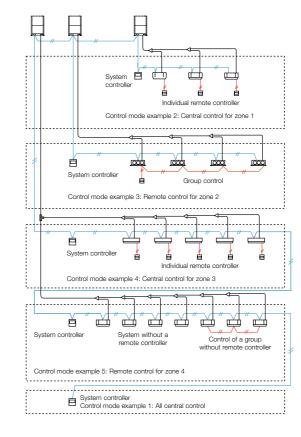

### ON/OFF controller (CZ-ANC3)

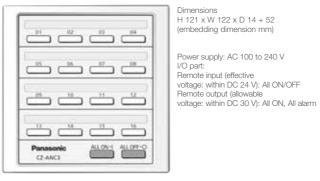

- 16 groups of indoor units can be controlled.
- Collective control and individual group (unit) control can also be performed.
- Up to 8 ON/OFF controller (4 main, 4 sub) can be installed in one link system.
- The operation status can be determined immediately.

### Intelligent controller (CZ-256ESMC3)



Touch panel

Dimensions
H 240 x W 280 x D 85 mm
Power supply AC 100 to 240 V (50/60 Hz)
LCD: 10.4 in. TFT, XGA(1024 x 768), LED backlight

### **Product Features**

- 10.4 in., Large, easy-to-use color LCD
- With smartphone like operations, such as swiping and flicking
- Enhanced energy-saving control functions
- Packed with demand functions
- Set temperature auto return settings, Auto shutoff, Set temperature range limit settings
- Energy Visualization
- Displays electricity & gas usage distribution
- Supports energy-saving plans with graph display function

### **New Features**

- Max 256 indoor unit [4 links x 64 units] can be controlled. In case of three or more systems [more than 128 units], a communication adaptor CZ-CFUNC2 must be installed for three or more links.
- Operation is possible as batch, in zone units, and in group units.
- ON/OFF, operation mode setting, temperature setting, for fan speed setting, air flow direction setting (when used without a remote controller) and remote controller local operation prohibition [prohibition 1,2,3,4] can be done
- Graph display [trends, comparisons]
- ECONAVI ON/OFF

- Outdoor unit quiet operation ON/OFF
- Energy-saving Functions
- Event control [such as equipment linkage]
- Limitation contents for prohibited operation

Prohibition means limitation of the operation contents from the remote controller. It is also possible to change the prohibition items.

### Limitation contents (Limitations can be user defined)

Individual There is no limitation for the operation of the remote controller. However, the contents will be changed to the contents of the controller operated last. (Last-pressed priority)

Prohibition 1 The remote controller cannot be used for ON/OFF. (All other operations are possible from the remote controller.)


Prohibition 2 The remote controller cannot be used for ON/OFF, operation mode change and temperature setting. (All other operations are possible from the remote controller.)

Prohibition 3 The remote controller cannot be used for operation mode change and temperature setting. (All other operations are possible from the remote controller.)

Prohibition 4 The remote controller cannot be used for operation mode change. (All other operations are possible from the remote controller.)

### • Remote Control


The LAN terminal on this unit enables you to connect it to a network. Connecting to internet will enable you to operate the unit and check the status using a PC from remote location.

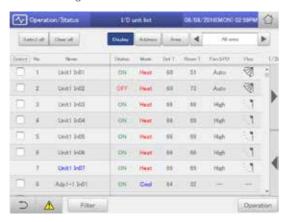

Display image on the remote PC is same design as the controller unit.

### **System configuration**

The following is an example of a system configuration.

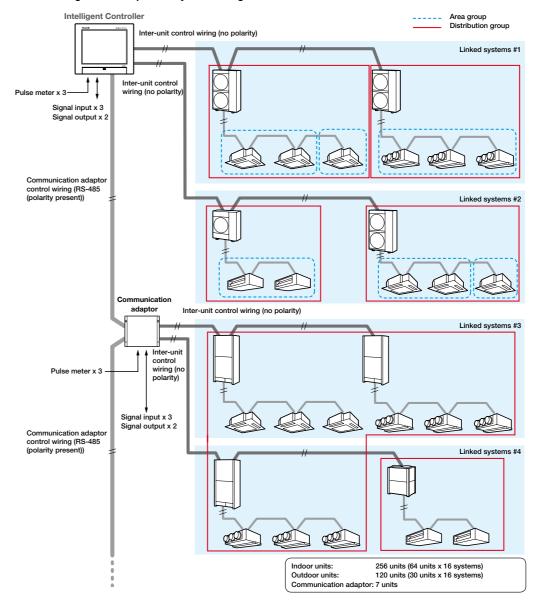

# Communication adaptor (CZ-CFUNC2)



<sup>\*</sup> Required when more than 129 indoor units are connected.



# T10 Terminal for External Control (Digital Connection)

Connecting an FSV indoor unit to an external device is easy.


The T10 Terminal featured in the electronic circuit board of all indoor units enables digital connection to external devices.






### 1. T10 Terminal Specification (T10:CN061 at indoor unit PCB)

- Control items: 1. Start/stop input (eg hotel key card, push button operation)
  - 2. Remote controller prohibit input
  - 3. Operation status output (eg fresh air fan)
  - 4. Fault status output

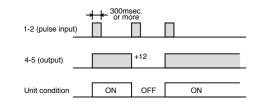

NOTE: The wire length from indoor unit to the Relay must be within 2.0m. Pulse signal changeable to static with JP cutting. (Refer to JP001) • Example of wiring

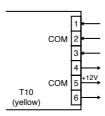

#### Condition

- 1. 1-2 (Pulse input): Unit ON/OFF condition switching with a pulse signal. (1 pulse signal: shortage status more than 300msec.or more)
- 2. 2-3 (Static input): Open/ Operation with Remote is permitted.(Normal condition) Close/ Remote controller is prohibited.
- 3. 4-5 (Static output): 12V output during the unit ON. / No output at OFF.
- 5-6 (Static output): 12V output when some errors occur / No output at normal.


### 2. Usage Example

### Forced OFF control

### Condition

1-2 (Static input): Close/ Operation with Remote is permitted. (Normal condition) Open/ Unit is forcibly OFF and Remote controller operation is prohibited.

### • Example of wiring

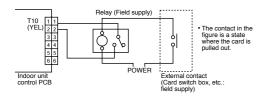


NOTE: The wire length from indoor unit to the Relay must be within 2.0m

### Operation ON/OFF signal output

### Condition

4-5 (Static output): 12V output during the unit ON / No output at OFF

#### Example of wiring

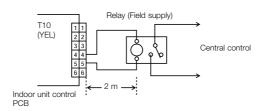


NOTE: The wire length from indoor unit to the Relay must be within 2.0m Pulse signal changeable to static with JP cutting. (Refer to JP001)

# Interfaces for External Control (Digital Connection)

## Seri-Para I/O unit for each indoor unit (CZ-CAPBC2)



### System example

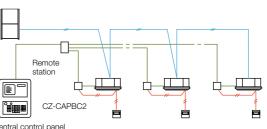


- Control and status monitoring is possible for individual indoor unit (1 group).
- In addition to operation and stop, there is a digital input function for air speed and operation mode.
- Temperature setting and measuring of the indoor suction temperature can be performed from central monitoring.
- The analog input for temperature setting is 0 to 10 V, or 0 to 140 Ohm.
- Power is supplied from the T10 terminal of the indoor units.
- Separate power supply also is possible (in case of suction temperature measuring).

### Interface adaptor (CZ-CAPC3)



 Control and status monitoring is possible for individual indoor unit (or any external electrical device up to 250 V AC, 10 A) by contact signal.

### System example

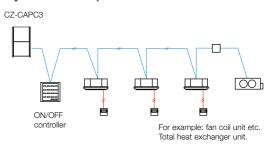

### Seri-Para I/O unit for outdoor unit (CZ-CAPDC2)



Dimensions H 80 x W 290 x D 260 mm Power supply Single phase 110-120/220-240 V (50/60 Hz), 18 W

Batch operation/Batch stop (non-voltage contact/DC 24 V, pulse signal). Cooling/Heating (non-voltage contact/static signal). Demand 1/2 (non-voltage contact/static signal) (Local stop by switching)


Output Operation output (non-voltage contact). Alarm output

(non-voltage contact)

ing length Indoor/Outdoor operation lines: Total length 1 km.

Digital signal: 100 m or shorter


### System example

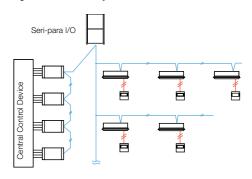

- This unit can control up to 4 outdoor units.
- From the centre control device, mode changing and batch operation/batch stop are possible.
- Required for demand control.

## Serial Interface for 3rd Party External Controller

Example of 3rd party BMS connection with CZ-CFUNC2 (For the detail please consult to authorized dealer)

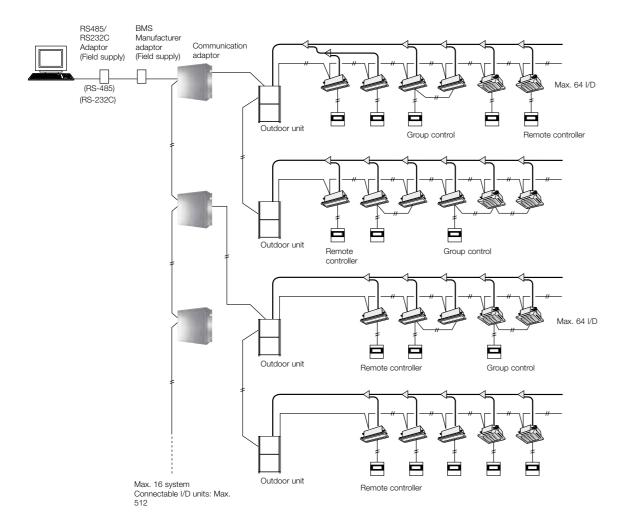

Functions via communication adaptor [CZ-CFUNC2]				
	Unit ON/OFF			
	Mode-change			
	Room temperature setting			
A /O	Fan speed setting			
A/C unit settings	Flap setting			
	Central control setting			
	Filter-sign clear			
	Alarm reset			
	Unit ON/OFF status			
	Operation mode			
	Setting temperature			
	Fan speed status			
A/C unit status	Flap status			
	Central control setting			
	Filter-sign situation			
	Correct/incorrect status			
	Alarm code			




## Serial Interface for LonWorks Network

### LonWorks Interface (CZ-CLNC2)



- This interface is a communications converter for connecting LonWorks to the control network of ESV
- From the host connected to LonWorks, basic settings and status monitoring is possible for up to 16 groups of indoor units.

### System example

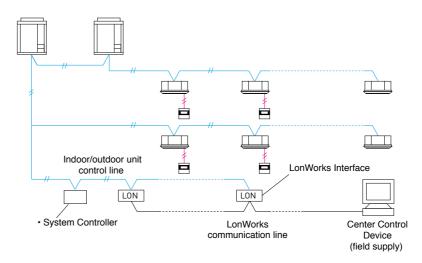

### **Functions**

			Start/stop
		Settings for each group of indoor units	Temp. setting
	C unit settings from LonWorks		Operation mode
	mmunicator		Option 1 settings
			Option 2 settings
		Settings for all units	Emergency stop
			Start/stop
			Temp setting
			Operation mode
			Option 1 settings
	A/C unit status notifications made to the LonWorks communicator		Option 2 settings
			Alarm status
			Indoor units with active alarms
			Room temp.
			A/C unit status
Co	One for making and a single		Transmission intervals settings
Configuration properties			Minimum time secured for transmission