

## KX-TGMA45 compatible function list

- ✔ Function is supported  
- Function is not supported

	Function of handset	Details	Base unit :																		
			TG16 TG17 series	TGB2 series	TGB6 series	TG25 series	TGC2 series	TGC3 series	TGC4 series	TGE1 TGE3 series	TGK2 series	TG681 TG682 series	TG685 TG686 series	TGD3 TGD6 series	TGE21 TGE22 TGE72 series	TGE25 TGE26 TGE82 series	TGH7 series	TGJ3 TGJ4 series	TGE5 series	TGF3 series	TGM4 series
0	<b>Registration</b>	<b>Registration of KX-TGMA45 to the base unit</b>	-	-	✔	-	✔	✔	✔	-	✔	✔	✔	✔	✔	✔	✔	✔	-	✔	✔
1	Amplified Receiver Volume	Amplified Incoming Voice Calls of handset receiver for Mild, Moderate and Moderately Severe Hearing Loss	-	-	✔	-	✔	✔	✔	-	✔	✔	✔	✔	✔	✔	✔	✔	-	✔	✔
2	Amplified Speaker Volume	Amplified Incoming Voice Calls of handset SP-Phone for Mild, Moderate and Moderately Severe Hearing Loss	-	-	✔	-	✔	✔	✔	-	✔	✔	✔	✔	✔	✔	✔	✔	-	✔	✔
3	Tone control	This feature clarifies the voice of the person you are talking to producing a more natural-sounding voice that is easier to hear and understand.	-	-	✔	-	✔	✔	✔	-	✔	✔	✔	✔	✔	✔	✔	✔	-	✔	✔
4	Ringer tone	This future allows you to select suitable ringer pattern for your easy recognition.	-	-	✔	-	✔	✔	✔	-	✔	✔	✔	✔	✔	✔	✔	✔	-	✔	✔
5	Speech Booster	This feature allows you to increase the volume of your voice heard by the other party.	-	-	✔	-	✔	✔	✔	-	✔	✔	✔	✔	✔	✔	✔	✔	-	✔	✔
6	One Touch Ringer off	You can turn ringer off by pressing and hold "0" key.	-	-	✔	-	✔	✔	✔	-	✔	✔	✔	✔	✔	✔	✔	✔	-	✔	✔
7	Key tone	You can select the volume of the tones that sound when you press keys on the handset.	-	-	✔	-	✔	✔	✔	-	✔	✔	✔	✔	✔	✔	✔	✔	-	✔	✔
8	Redial	You can dial from redial list you recently dialled.	-	-	✔	-	✔	✔	✔	-	✔	✔	✔	✔	✔	✔	✔	✔	-	✔	✔
9	Message indicator	The message indicator on the handset can indicate unit status.	-	-	✔	-	✔	✔	✔	-	✔	✔	✔	✔	✔	✔	✔	✔	-	✔	✔
10	Slow Talk	This feature slows down the speed of the easier to understand phone conversations, answering system messages, etc.	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	✔
11	Talking Keypad, Talking Phonebook	This feature helps you by announcing phone numbers entered for dialling, phonebook, and memory dial.	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	✔
12	Talking Caller ID *for UK,DE,IT,ES only	This feature lets you know who is calling without looking at the display.	-	-	-	-	-	-	-	-	-	-	-	-	✔	✔	-	✔	-	✔	✔
13	Voice Paging	an intercom call, your voice will be heard from the speakers of the base unit and all handsets.	-	-	-	-	-	-	-	-	-	✔	-	-	✔	-	-	-	-	-	✔
14	Phonebook	You can access the phonebook	-	-	-	-	✔	✔	✔	-	✔	-	✔	✔	✔	✔	-	-	-	✔	✔
15	Hearing Aid Compatibility	The handset is designed to work well with a hearing aid, which reduces interference with your hearing aid.	-	-	✔	-	✔	✔	✔	-	✔	✔	✔	✔	✔	✔	✔	✔	-	✔	✔

## Message indicator

The message indicator on the handset and base unit can indicate unit status, as explained below.

Indicator	Status
Flashing rapidly	<ul style="list-style-type: none"><li>– Outside call or intercom call is being received. (page 33, 36)</li><li>– The handset alarm is sounding. (page 49)</li></ul>
Flashing slowly	<ul style="list-style-type: none"><li>– There are new messages. (page 56)</li><li>– There are missed calls. (page 54)</li></ul>

## Setting the message indicator

You can enable and disable the message indicator for each type of status.

- “**Incoming Call**” (default: On)
- “**New Message**” (default: On)
- “**Missed Call**” (default: Off)
- “**Alarm**” (default: On) (handset only)

This feature can be set for each unit.

**1 For handset: [MENU] # [2] [7] [8]**

**For base unit (using a handset): [MENU] # [\*] [2] [7] [8]**

**2 [↕]:** Select the desired setting and press **[SELECT]**.

- “✓” is displayed next to enabled items.
- To disable an item, select it and press **[SELECT]** again. “✓” disappears.

**3 [OK] → [⏏]**

**Note:**

- If the message indicator flashes when the handset is not placed on the base unit, the handset consumes battery power faster than usual.