



Applying advanced Japanese technologies that truly make life better

We live by an unparalleled commitment to product quality. Our approach to product development originates in the DNA of Japanese craftsmanship.

Panasonic is building on the Japanese tradition of uncompromising quality control worldwide, developing and manufacturing fine products and delivering them to customers everywhere.

Disclaimer

1. Please note that products incorporating nanoe™ X and nanoe™ technology are not to be used for medical treatment.
2. nanoe™ X and nanoe™ are not intended to prevent infectious diseases. The technology has been found to be effective in suppressing a variety of harmful airborne and adhering substances, including viruses (e.g., H1N1), bacteria (e.g., E. coli), mold fungi, and allergens. However, nanoe™ X and nanoe™ do not create an aseptic environment, nor do they guarantee prevention of infection.
3. Data regarding the effectiveness of nanoe™ X and nanoe™ have been obtained through experiments under special conditions using devices that generate electrostatic atomized water, and have not been tested on commercial products with the devices incorporated in them.
4. The deodorization effect varies according to the environment (e.g., temperature and humidity), operation time, odor, and fabric type. It does not eliminate the toxic substances in cigarettes (e.g., carbon monoxide). Odors that are continuously generated (e.g., building material and pet odors) are not completely eliminated. Results may vary based on usage and seasonal/environmental variables (e.g., temperature and humidity). nanoe™ X and nanoe™ inhibit activity or growth of viruses, but do not prevent infection.

Panasonic®

CONNECT WITH US



- 🌐 www.panasonic.com/ph
- 📘 facebook.com/PanasonicPhilippines
- 📷 [@panasonic_ph](https://instagram.com/@panasonic_ph)
- 🐦 [@panasonicph](https://twitter.com/@panasonicph)
- ✉️ pmpc_csdic@ph.panasonic.com



Panasonic

F-PXU70AWP

The air purifier that provides more than just fresh air, for your health and beauty.



Note: nanoe™ and the nanoe™ mark are trademarks of Panasonic Corporation


*Actual colors may vary slightly from shown.

*Specifications are subject to change without prior notice.



FOR MORE INFO

more than just fresh air
for your health & beauty

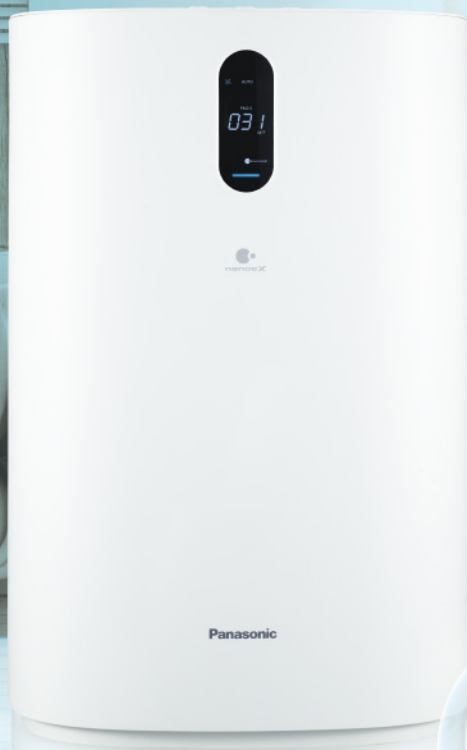

FOR MORE INFO

Air is an Essential Part of Our Lives

WATER
1.2 kg(L)/person-day^{*2}

FOOD
1.3 kg/person-day^{*3}

AIR
18 kg/person-day
15 m³ (Sphere diameter about 3 m)^{*1}



*1. "Air and Humans - From a Physiological Viewpoint" (1999) by UCHIYAMA Iwao (National Institute of Public Health of Japan)


*2. "Heat Stroke Environmental Health Manual (2009)" from the Ministry of the Environment, Government of Japan

*3. "Basic Data Sheet of Agriculture, Forestry, and Fisheries, Statistics Regarding The Food Self-Sufficiency Rate" from Ministry of Agriculture, Forestry and Fisheries of Japan

What is Indoor Air Quality?


Indoor air quality (IAQ) indicates the quality of air in buildings such as homes, offices, public facilities, and schools. The quality of this air is vital to us leading healthy and comfortable lives.

IAQ Solution

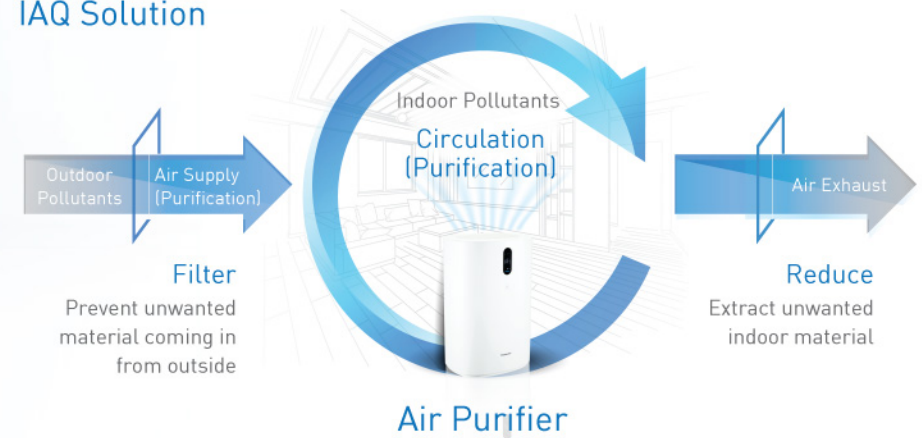

HEPA Composite Filter

- Comprises three innovative technologies: Super alleru-buster, Green Tea Catechin, and Anti-bacteria Enzyme
- Inhibits viruses, bacteria, and 17 kinds of allergens by up to 99% ^{*1}
- Effectively removes up to 99.99% of PM0.003 particles ^{*2}

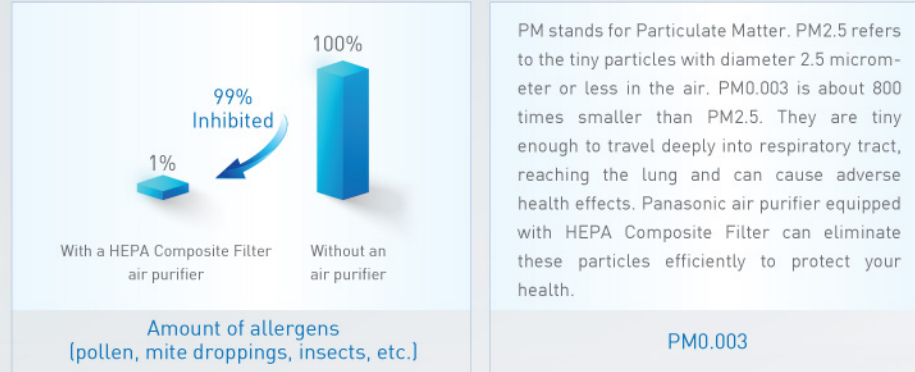

- SUPER alleru-buster**
Inhibits allergens by up to 99%
- Green Tea "Catechin"**
Inhibits viruses by up to 99%
- Anti-bacteria Enzyme**
Prevents bacteria reproduction

Allergens it Inhibits

Dermatophagoides Farinae

- Mite Droppings
- Mite Corpses
- Mite Ordures
- Mite Corpses
- Cedar
- Hinoki
- Ragweed
- Orchard Grass
- Sweet Vernal Grass
- White Birch
- Black Alder
- Beech
- Mugwort
- Dog Dandruff
- Cat Dandruff
- Mold
- Wheat Flour

*1 • Super alleru-buster (Report no. 2127)
Test Laboratory: Osaka Municipal Technical Research Institute of Japan. Test Methodology: Measure reduction level of tick allergens by Enzyme-linked Immuno Sorbent Assay. Inhibit Method: Contact with Super alleru-buster. Test Subject: Allergens captured by filter (tick, pollen, etc.). Test Results: 99% or more is inhibited.

* Catechin (Report no. 15-0115)
Test Laboratory: Kitasato Research Centre of Environmental Sciences. Test Methodology: Inhibit rate of virus using the Plaque method. Inhibit Method: Contact with Green Tea Catechin. Test Subject: Virus captured by filter. Test Results: 99% or more is inhibited.

* Anti-bacteria Enzyme (Report no. 207060074-002)
Test Laboratory: Japan Food Research Laboratory. Test Methodology: Testing of the filter's anti-mold function using the Harrow method


*2 • PM0.003 particle (UN2-200911-T559990-136)
Test Laboratory: IUTA. Test Subject: NaCl aerosol. Test Results: 3 nm particle removal efficiency >99.99%

De-formaldehyde Technology


Super Nano-technology Deodorizing Filter



HEPA Composite Filter

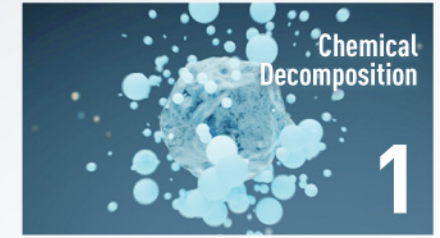

With the additive substance, the formaldehyde is removed by means of chemical decomposition.

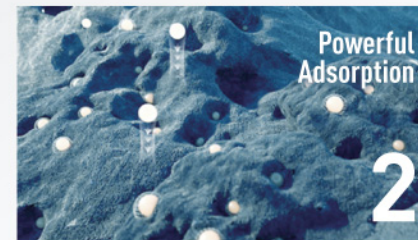

The porous activated carbon efficiently traps the formaldehyde contaminants.



The additive strengthens the trapping stability of the activated carbon against the contaminants.

3 steps to Eliminate Formaldehyde Contamination

Using the 3-step process, the formaldehyde contaminants are removed by chemical decomposition, activated carbon adsorption, and trapping.



What is nanoe™ X?

Panasonic's Unique Technology

nanoe™ comprises fine (5-20 nm), mildly acidic water particles that are reactive and hold an electric charge. nanoe™ also inhibits viruses and bacteria, deodorizes odors, and hydrates skin.

* 1 nm (nanometer) = one billionth of meter



nano-technology + electric



nanoe™ X 10x Faster

- 10x faster air purification speed
- Greater efficiency for inhibiting viruses and bacteria
- Increases deodorization strength

nanoe™ X	VS	nanoe™
<p>Water Molecule</p> <p>OH Radical</p> <p>nanoe™ (about 5-20 nm)</p>	<p>Composition and Dimensions (illustration only)</p>	<p>Water Molecule</p> <p>OH Radical</p> <p>nanoe™ (about 5-20 nm)</p>
<p>4.8 trillion per second</p>	<p>OH Radical</p>	<p>480 billion per second</p>
<p>Good</p> <p>More Efficient</p>	<p>Deodorizes odors</p> <p>Inhibits viruses / bacteria</p>	<p>Good</p> <p>More Efficient</p>

nanoe™ X and nanoe™ Characteristics


Longer Life

Coated in water, nanoe™ X and nanoe™ have six times longer life spans than ordinary air ion technology.

Ordinary Air Ion Technology
Dissipates in 100 seconds



nanoe™ X / nanoe™
Retains After 100 seconds



Microscopic Scale

One-billionth the volume of a steam particle.

Approx. 6,000nm (Panasonic internal research)
Steam

nanoe™ X / nanoe™
Approx. 5-20nm

The nano-scale allows them to penetrate deep into fabric to prevent bacteria and unpleasant odors

Steam
Too large to penetrate deep into fabric

Allergens (e.g., pollen, mites, and mite droppings) are captured and inhibited

Even odor particles in fabric can be thoroughly removed

Safety of nanoe™ X and nanoe™ have been verified

Purpose	Test Name	Test Institute
Effect on Chromosomes	Chromosome abnormality test using cultured cells	Japan Bioassay Research Center ^[#1]
Effect on Respiratory System	Repeated administration toxicity test	Life Science Research Laboratory ^[#2]
Toxicological and Carcinogenic Impact	Chronic toxicity and carcinogenicity combined test	Food and Drug Safety Center, Hatano Research Institute ^[#1]
Effect on DNA	Comet assay	Food and Drug Safety Center, Hatano Research Institute ^[#1]

#1 The Japan Bioassay Research Center and the Food and Drug Safety Center, Hatano Research Institute are compliant with GLP (Good Laboratory Practice) [*1]
 #2 Life Science Laboratories, Ltd. is a registered institute of the Network of Organizations Investigating Accident Causes [*2]
 [*1] GLP is a practice intended to promote the quality and validity of test data used for determining the safety of chemicals and chemical products. Test facilities are assessed for compliance with GLP to ensure the reliability of their test data.
 [*2] The Network of Organizations Investigating Accident Causes is a network administered by National Institute of Technology and Evaluation under the Ministry of Economy, Trade and Industry.




Merits of nanoe™ X – 3 main Features




Inhibits viruses/bacteria

Inhibits viruses (99.9%) and bacteria (99.99%)

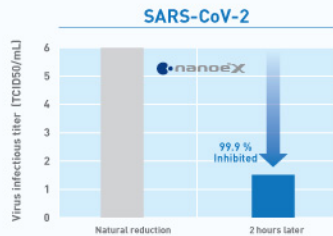


Novel Coronavirus (COVID-19)

[Testing organization] TEXCELL (France)
 [Testing method] Exposed to a nanoe™ device at 15 cm distance in 45 L enclosed box for 2 hours
 [Test substance] novel coronavirus (SARS-CoV-2)
 [Test results] Over 99.99% of activity is inhibited (1140-01 A1)

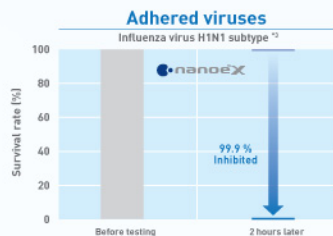

Influenza virus H1N1 subtype

[Testing organization] Kitasato Research Center for Environmental Science
 [Testing method] Measured the number of viruses adhered to a cloth in an approximately 1 m³ airtight test room
 [Inhibition method] nanoe™ released
 [Test substance] Adhered virus
 [Test results] Inhibited by at least 99.9% in 2 hours (21_0084_1)

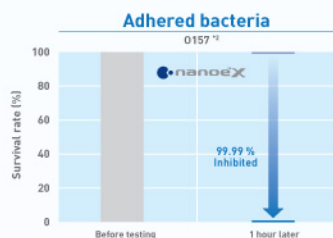

E. Coil (O157)

[Testing organization] Japan Food Research Laboratories
 [Testing method] Measured the number of bacteria adhered to a cloth in an approximately 45 L airtight test room
 [Inhibition method] nanoe™ released
 [Test substance] Adhered bacteria
 [Test results] Inhibited by at least 99.99% in 1 hour (208120880_001)



Deodorization

Reduces strong cigarette smoke odor to hardly noticeable in only 1 hour



Deeply penetrates into cloth fabrics for inhibiting odor

Cigarette Smoke Odor

[Testing organization] Panasonic Product Analysis Center
 [Testing method] Verified using the six-level odor intensity scale method in an approximately 23 m² test room
 [Deodorization method] nanoe™ released
 [Test substance] Surface-attached cigarette smoke odor
 [Test results] Odor intensity reduced by 2.4 levels in 12 mins. (4AA33-160615-N04)




Skin and Hair Hydration


Helps keep the moisture back to the skin

Without nanoe™ X

After 15 minutes
Moisture escapes from the skin, allowing it to become dry and dull

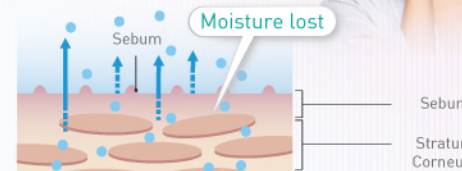


After 28 days
Cracks occur in the skin and keratin peels off

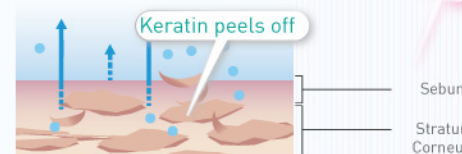

With nanoe™ X

After 15 minutes
nanoe™ attaches to the sebum and forms a membrane over the skin, preventing moisture loss

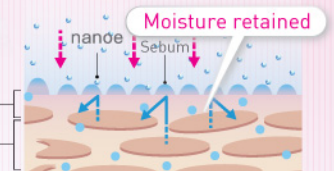

After 28 days
Skin is hydrated, keeping it fresh and moisturized



- [Testing organization] Panasonic Product Analysis Center [Testing method] Rest period: 90 minutes, nanoe™ exposure time: 60 minutes, retention: 60 minutes. 8 women aged 30-49 with dry to normal skin [Test results] Change in skin moisture content equivalent to a 20% point increase from 30% to 50% in environmental humidity [USG-KT-14K-012-TM]
- [Testing organization] FCG Research Institute, Inc. [Testing method and test results] Of 20 women 40 ± 2 years old, 10 women used a nanoe™ generating device at home for 28 days, while the other 10 women used a device with no nanoe™ generating device for 28 days at home [19104]

Without nanoe™ X

Frizzy Hair




Lengthened area due to hydration during shampooing

The hair's moisture balance fails, leading to frizzy hair. Difficulty reflecting light, gloss is reduced, and texture is grainy.

With nanoe™ X

Non-Frizzy Hair

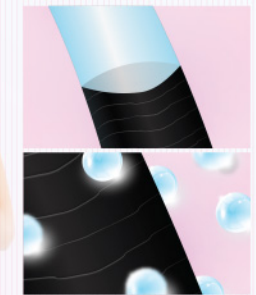


Helps the hair achieve a proper moisture balance, making for shiny hair that reflects light and allows fingers to be run through it smoothly.

[Testing organization] Panasonic Product Analysis Center [Testing method and test results] Approximately 46 m² sized test room, room temperature 25°C, humidity 40%. Bundles (6 bundles) of hair were suspended 2 m from a nanoe™ generating device, with repeated operation of the nanoe™ generating device: 8 hours on and 16 hours off [Method] nanoe™ released [Test substance] Hair [USD-KS-15S-009-TM]
 Individual results may vary based on usage and seasonal/environmental variables (e.g., temperature and humidity)

PM2.5/Odor Indicator

The PM2.5 and odor indicator lets you to see the air quality easily and in real-time

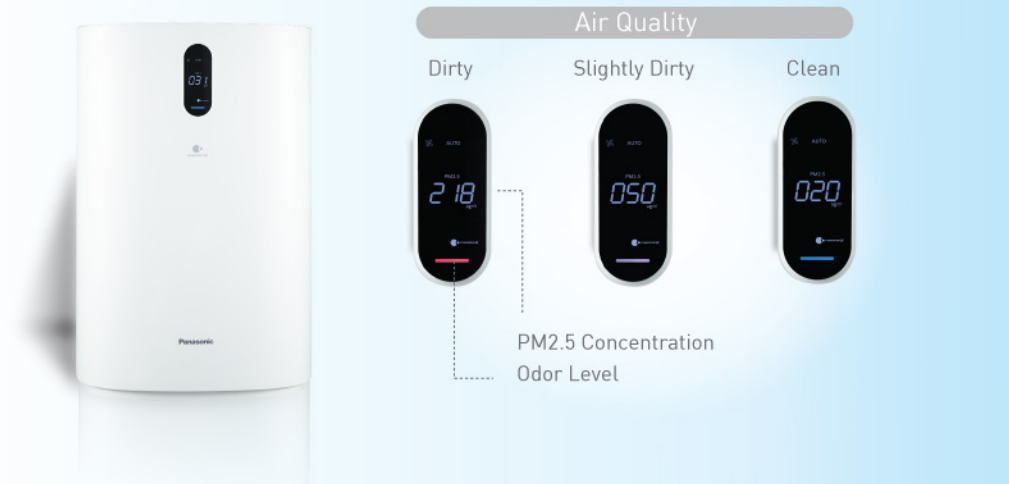

AIR PURIFIER F-PXU70AWP

SUPER alleru-buster

Green Tea "Catechin"

Anti-bacteria Enzyme



Applicable Area: 52 m² | Dimensions: H 560 x W 362 x D 280 mm | Weight: 8 kg

Air Purification


nanoe™ X
HEPA Composite Filter
Super Nano-technology Deodorizing Filter
De-Formaldehyde Function

Other Features

PM2.5 / Odor Sensor
Brightness Sensor
Child Lock

Indicator


LCD Indication Panel
PM2.5 Concentration Digital Indicator
Odor Level Indicator
Filter Replacement Indicator

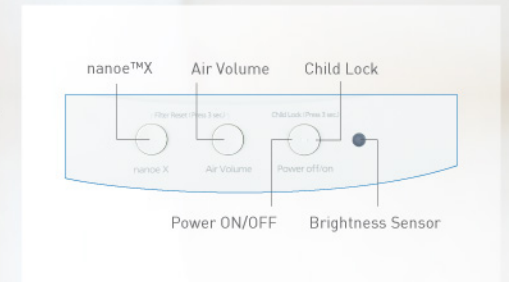

Setting	Air Purification		
	High	Mid	Low
Power Consumption [W]	36	10.5	6.5
Air Volume [m ³ /min.]	7	3.1	1.1
Noise [dB(A)]	48	32	18

Note:

The calculation of applicable area is based on the standard JEM1467, as stipulated by the Japan Electrical Manufacturers Association. The applicable area is defined as the area filled with dirty air, 30 mins under 1 air change per hour of natural ventilation, as specified under the Building Sanitation Law.

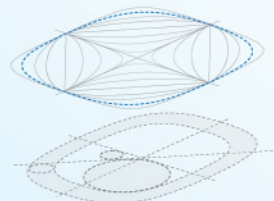

"Superellipse" Design

Thanks to the aesthetics of "Superellipse", both art and functionality are achieved. The elegant and streamline look will really enhance your home.